Connect the serial and Ethernet ports to the computer

Open the software.

Click on the "create system" tab and without typing anything click OK

Nevion Configurator - Version 4.		- 2 🛛
File Tools Help		
🚰 🚰 📓 🖻 Refresh 🛛 IP Settings		
▲ No System	No System There is currently no selected system.	
Ą	Open / Create system	
	Systems A system consists of different types of devices that are all interconnected. Also, the system acts as a container for configurations of levels, virtual router mappings, parameter groups, salvos etc.	
	Open system Create system	
	Enter the systems name and description (optional). Make sure to use a unique name for the system. Two systems cannot have the same name. chother.	
	System System name:	
	System description:	

In the next screen the router will be detected and displayed at the bottom of the left hand column.



Drag the router from the left area to the right work area

Use "password" for password

Nevion Configurator	- Version 4.1.5	
File Current system	Web panel Tools	Help
🎽 💕 🛃 🛛 🖄 Refresh	👔 Upload 🛛 🚮 Sys	stem Overview 🇰 Levels 🏢 Virtual Routers 📋 Salvos 🌗 Parameters 🚍 Button Configurations IP Settings
⊗ □ Configuration		System Overview Add and remove devices and edit connections.
E Levels		
No levels		
Protocols		
Automation/3rd part	y control	
Leitch Pass-Through	Serial	
NCB Compact	Serial	
NCB Sublime	Serial	1i
Pro-Bel SW-P-02	Serial	
Triton	Serial	
Routers (clients)		
Leitch Pass-Through	Serial	
MRP	IP	
NCB Compact	Serial	
NCB Sublime	Serial	
Pro-Bel SW-P-02	Serial	
Sony 9-pin	Serial	📕 📲 Login - 💌 💌
Triton	Serial	
Unconfigured		You are about to make changes to the system — that require certain rights.
Sublime devices		Dissee Ion in before proceeding
MP3C 1616	CP P D	
WF-3G-1010	OF N D	User name: admin
		Password:
		Login Cancel

The icon of the router should appear

Nevion Configurator	- Version 4.1.	.5	
File Current system V	Veb panel Tool	ls Help	
🚰 📂 🛃 🛛 🕅 Refresh 🗗	🛐 Upload 🛛 🚮 S	System Overviev	v 🇰 Levels 📺 Virtual Routers 📔 Salvos 🕞 Parameters 😑 Button Configurations IP Settin
Devices		Add and	n Overview remove devices and edit connections.
Sublime devices			
MP3G-1616	CP, R, D 🚺		
Protocols			
Automation/3rd party	control	1	MP3G-1616
Leitch Pass-Through	Serial		MP3G-1616
NCB Compact	Serial		
NCB Sublime	Serial		
Pro-Bel SW-P-02	Serial		
Triton	Serial		
Routers (clients)			
Leitch Pass-Through	Serial		
MRP	IP		
NCB Compact	Serial		
NCB Sublime	Serial		
Pro-Bel SW-P-02	Serial		
Sony 9-pin	Serial		
Triton	Serial		

From the Tool menu select "Firmware upgrade on serial port"

n	Nev	ion Configurate	or - Version	4.1	.5					
	File	Current system	Web panel	Too	s	Help				
Ľ	i 🖻	🚽 🔯 Refresh	🚹 Upload	đ	R	efresh F5		ers 📃 Salvos	Erameters	😑 Button (
	De	vices			IP Fi	settings rmware upgrade		ctions.		
	E S	ublime devices			FI	rmware upgrade on serial port	<u></u>			
	MF	P3G-1616	CP, R, D.		P	roduct Key Manager Ctrl+Shift+K	<u>°</u>			
6	= Pr	otocols			А	dvanced	•			
Ľ	Ξ Α	utomation/3rd par	rty control	2	0	ptions				
	Le	itch Pass-Through	Serial		-			6		
	NC	CB Compact	Serial			MP3	3G-161	16		
	NC	B Sublime	Serial							
	Pro	o-Bel SW-P-02	Serial							
	Tri	iton	Serial							
	🖃 R	outers (clients)								
	Le	itch Pass-Through	Serial		1					
	MF	Rb.	IP		1					
	NC	CB Compact	Serial		1					
	NC	B Sublime	Serial							
	Pro	o-Bel SW-P-02	Serial							
	So	ny 9-pin	Serial							
	Tri	ton	Serial							

Select the correct bin file and the corresponding serial port and click "Upgrade"

Upgrad	e firmware on serial port	2
Firmware		
1. Se Firm C:\L	ect firmware file vare file: ocuments and Settings\gkou\My Documents\Barco\Pi	
2. Se The	ect serial port levice is connected to:	5
3. Sta	s: Abort	
Help	Cic	se

Click "Yes" to select Sublime Data router

2. Select se	rial port
Sublime	type to be upgraded 🛛 🔀
3. (Please identify the connected Sublime type: Yes: Sublime Ported Data router (SL-D32P) No : Sublime control panel or video/audio router Yes No Cancel

While the unit is uploading the lights on the front will flash,

After completion of the upload, cycle power