


PDS

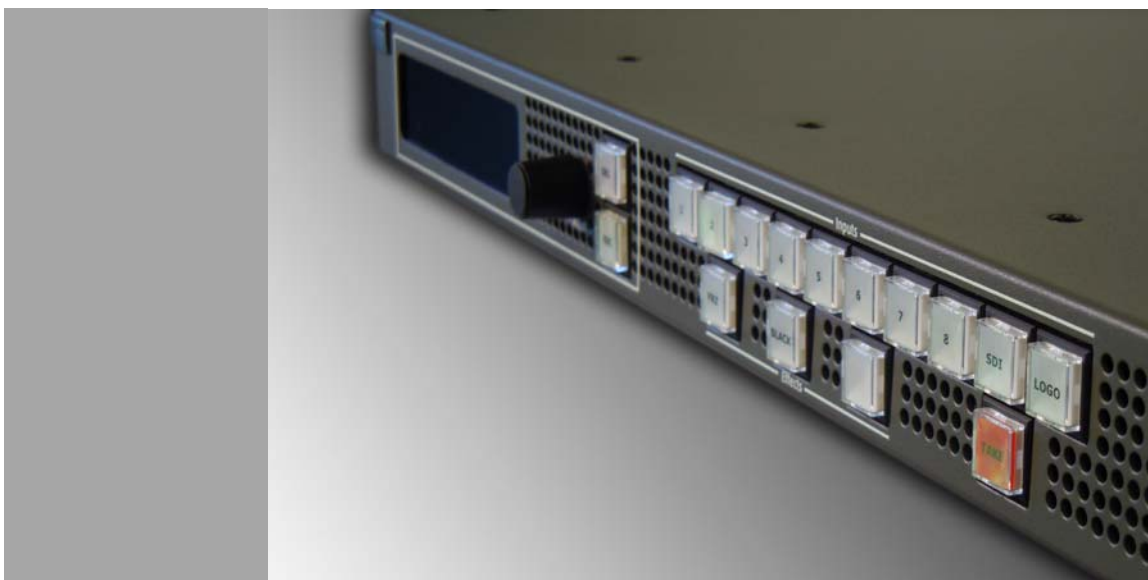

User's Guide

- Manual #: 26-1204000-00
 - Revision: 00
-



Copyright

© Barco. September 21, 2012

All rights reserved. No part of this document may be copied, reproduced or translated. It shall not otherwise be recorded, transmitted or stored in a retrieval system without the prior written consent of Barco.

Notice

Barco provides this manual “as is” without warranty of any kind, either expressed or implied, including but not limited to the implied warranties or merchantability and fitness for a particular purpose. Barco may make improvements and/or changes to the product(s) and/or the program(s) described in this publication at any time without notice.

This publication could contain technical inaccuracies or typographical errors. Changes are periodically made to the information in this publication; these changes are incorporated in new editions of this publication.

Federal Communications Commission (FCC) Statement

This equipment has been tested and found to comply with the limits for a class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area may cause harmful interference, in which case the user will be responsible for correcting any interference.

Guarantee and Compensation

Barco provides a guarantee relating to perfect manufacturing as part of the legally stipulated terms of guarantee. On receipt, the purchaser must immediately inspect all delivered goods for damage incurred during transport, as well as for material and manufacturing faults. Barco must be informed immediately in writing of any complaints.

The period of guarantee begins on the date of transfer of risks, in the case of special systems and software on the date of commissioning, at latest 30 days after the transfer of risks. In the event of justified notice of complaint, Barco can repair the fault or provide a replacement at its own discretion within an appropriate period. If this measure proves to be impossible or unsuccessful, the purchaser can demand a reduction in the purchase price or cancellation of the contract. All other claims, in particular those relating to compensation for direct or indirect damage, and also damage attributed to the operation of software as well as to other services provided by Barco, being a component of the system or independent service, will be deemed invalid provided the damage is not proven to be attributed to the absence of properties guaranteed in writing or due to the intent or gross negligence or part of Barco.

If the purchaser or a third party carries out modifications or repairs on goods delivered by Barco, or if the goods are handled incorrectly, in particular if the systems are commissioned operated incorrectly or if, after the transfer of risks, the goods are subject to influences not

agreed upon in the contract, all guarantee claims of the purchaser will be rendered invalid. Not included in the guarantee coverage are system failures which are attributed to programs or special electronic circuitry provided by the purchaser, e.g. interfaces. Normal wear as well as normal maintenance are not subject to the guarantee provided by Barco either.

The environmental conditions as well as the servicing and maintenance regulations specified in this manual must be complied with by the customer.

Trademarks

Brand and product names mentioned in this manual may be trademarks, registered trademarks or copyrights of their respective holders. All brand and product names mentioned in this manual serve as comments or examples and are not to be understood as advertising for the products or their manufacturers.

DisplayPort and the DisplayPort logo are trademarks or registered trademarks of the Video Electronics Standards Association (VESA) in the United States and other countries.

Company Address



Barco Media and Entertainment

11101 Trade Center Drive
Rancho Cordova, California 95670
USA

- Telephone: (916) 859-2500
- Fax: (916) 859-2515
- Website: www.barco.com

Barco N.V.

Noordlaan 5
8520 Kuurne
BELGIUM

- Telephone: +32 56.36.82.11
- Fax: +32 56.35.16.51
- Website: www.barco.com

Technical Support (USA)

- Telephone: (866) 374-7878 — 6 a.m. to 10 p.m. (PST), 7 days per week
- E-mail: folsomsupport@barco.com
- Online: www.barco.com/esupport

Technical Support (Europe, Middle East, Asia)

- Telephone: 0800900410
- Online: www.barco.com/support/eSupport.aspx

Operators Safety Summary

The general safety information in this summary is for operating personnel.

Do Not Remove Covers or Panels

There are no user-serviceable parts within the unit. Removal of the top cover will expose dangerous voltages. To avoid personal injury, do not remove the top cover. Do not operate the unit without the cover installed.

Power Source

This product is intended to operate from a power source that will not apply more than 230 volts rms between the supply conductors or between both supply conductor and ground. A protective ground connection by way of grounding conductor in the power cord is essential for safe operation.

Grounding the Product

This product is grounded through the grounding conductor of the power cord. To avoid electrical shock, plug the power cord into a properly wired receptacle before connecting to the product input or output terminals. A protective-ground connection by way of the grounding conductor in the power cord is essential for safe operation.

Use the Proper Power Cord

Use only the power cord and connector specified for your product. Use only a power cord that is in good condition. Refer cord and connector changes to qualified service personnel.

Use the Proper Fuse

To avoid fire hazard, use only the fuse having identical type, voltage rating, and current rating characteristics. Refer fuse replacement to qualified service personnel.

Do Not Operate in Explosive Atmospheres

To avoid explosion, do not operate this product in an explosive atmosphere.

Terms In This Manual and Equipment Labeling



WARNING

Highlights an operating procedure, practice, condition, statement, etc., which, if not strictly observed, could result in injury to or death of personnel.

Note

Highlights an essential operating procedure, condition or statement.



CAUTION

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



AVERTISSEMENT!

Le point d'exclamation dans un triangle équilatéral signale à alerter l'utilisateur qu'il y a des instructions d'opération et d'entretien très importantes dans la littérature qui accompagne l'appareil.



VORSICHT

Ein Ausrufungszeichen innerhalb eines gleichwinkligen Dreiecks dient dazu, den Benutzer auf wichtige Bedienungs- und Wartungsanweisungen in der dem Gerät beiliegenden Literatur aufmerksam zu machen.



Disposal of the Product (Waste Electrical and Electronic Equipment)

This symbol on the product indicates that, under the European Directive 2002/96/EC governing waste from electrical and electronic equipment, this product must not be disposed of with other municipal waste. Please dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

For more information about recycling of this product, please contact your local city office or your municipal waste disposal service. For details, please visit the Barco website at: <http://www.barco.com/en/AboutBarco/weee>



Turkey RoHS Compliance

Türkiye Cumhuriyeti: EEE Yönetmeliğine Uygundur
Republic of Turkey: In conformity with the EEE Regulation

中国大陆 RoHS

Chinese Mainland RoHS

根据中国大陆《电子信息产品污染控制管理办法》(也称为中国大陆 RoHS), 以下部分列出了 Barco 产品中可能包含的有毒和 / 或有害物质的名称和含量。中国大陆 RoHS 指令包含在中国信息产业部 MCV 标准: “电子信息产品中有毒物质的限量要求”中。

According to the “China Administration on Control of Pollution Caused by Electronic Information Products” (Also called RoHS of Chinese Mainland), the table below lists the names and contents of toxic and/or hazardous substances that Barco's product may contain. The RoHS of Chinese Mainland is included in the MCV standard of the Ministry of Information Industry of China, in the section “Limit Requirements of toxic substances in Electronic Information Products”.

零件项目 (名称) Component Name	有毒有害物质或元素 Hazardous Substances or Elements					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr6+)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
印制电路配件 Printed Circuit Assemblies	O	O	O	O	O	O
插入式印制电路配件 Plug in Printed Circuit Assembly	O	O	O	O	O	O
外接电 (线) 缆 External Cables	O	O	O	O	O	O
底架 Chassis	O	O	O	O	O	O
电源供应器 Power Supply Unit	O	O	O	O	O	O
内部线路 Internal wiring	O	O	O	O	O	O
显示 (器) Display	O	O	O	O	O	O
散热片 (器) Heatsinks	O	O	O	O	O	O
风扇 Fan	O	O	O	O	O	O
光盘说明书 CD Manual	O	O	O	O	O	O
正面 (前) 面板 Front panel	O	O	O	O	O	O
<p>O: 表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T 11363-2006 标准规定的限量要求以下。 O: Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in SJ/T11363-2006.</p> <p>X: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11363-2006 标准规定的限量要求。 X: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in SJ/T11363-2006.</p>						

在中国大陆销售的相应电子信息产品（EIP）都必须遵照中国大陆《电子信息产品污染控制标识要求》标准贴上环保使用期限（EFUP）标签。Barco 产品所采用的 EFUP 标签（请参阅实例，徽标内部的编号使用于制定产品）基于中国大陆的《电子信息产品环保使用期限通则》标准。



All Electronic Information Products (EIP) that are sold within Chinese Mainland must comply with the “Electronic Information Products Pollution Control Labeling Standard” of Chinese Mainland, marked with the Environmental Friendly Use Period (EFUP) logo. The number inside the EFUP logo that Barco uses (please refer to the photo) is based on the “Standard of Electronic Information Products Environmental Friendly Use Period” of Chinese Mainland.

Change History

The table below lists the changes to the PDS User's Guide.

Table 0-1. Change History

Rev	Date	ECP #	Description	Approved By
00	September 21, 2012	599163	Initial release	R. Pellicano



Table of Contents

Chapter 1	Introduction	1
	In This Chapter	1
	Chapter Structure	1
	How to Use This Guide	2
	Navigating	2
	Table of Contents and Index	2
	Conventions	2
	About the PDS	3
	Overview	3
	Features	3
	A Word About HDCP	4
	Connectivity Diagram	5
	Application Questions	6
Chapter 2	Hardware Orientation	7
	In This Chapter	7
	PDS Front Panel	8
	Display Section	9
	Inputs Section	10
	Effects Section	11
	Take Button	12
	PDS Rear Panel	13
Chapter 3	Installation	15
	In This Chapter	15
	Safety Precautions	16
	Unpacking and Inspection	16
	Site Preparation	16
	Rack-Mount Installation	16
	Cable and Adapter Information	17
	Power Cord and Line Voltage Selection	17
	Signal Installation	19
	Format Connection Table	20
Chapter 4	Operation	23
	In This Chapter	23
	Control Overview	24
	Power-Up Initialization	24
	Button States	25
	Quick Setup and Operations	25
	Menu Tree	27

Table of Contents

Using the Menu System	28
Quick Function Reference	30
Status Menu	33
Setup Menu	35
Input Menu	36
Input Format	37
Adjust On	38
Type	38
Colorspace	38
Auto Acquire	39
Aspect Ratio	40
Sizing Adjust	41
Timing Adjust	42
Adjusting Sample Phase	43
Contrast	44
Brightness	44
Color Balance	44
RGB Color Balance Menu	44
SMPTE Color Balance Menu	45
Processing	45
About Input Configuration Files	46
Save Config	46
Reset Config	47
Recall Config	48
Delete Config	48
Output Menu	50
Main	50
Output Format	50
Test Pattern	50
Output Adjust	51
Sync Settings	52
Gamma	52
Save Config	52
Preview Menu (PDS 902 Only)	53
Output Src	53
Output Format	54
Test Pattern	54
Sync Settings	55
Save Config	55
Logo Menu	57
User Preference Menu	58
Trans Time	58
Auto Acquire	59
Auto Input Cfg	60
Auto Input Save	60
Background	60
HDCP	61
Auto Take	61
Black Auto Take	61
Menu Context	62
System Menu	63
VFD Brightness	63
Ethernet	64

Serial Setup	66
Input EDID	67
DVI Cable Equal	68
Executive Mode	69
File Association	70
Temperature	71
Diagnostics	71
Save System State	72
Tech Support Menu	73
Factory Reset Menu	73
Firmware Upgrade Menu	74
Using Inputs	75
Input Selection Rules	75
Flip-flop Mode	76
Using Auto Acquire	77
Using HDCP	77
Using the Logo	78
Saving a Logo	79
Transitioning to a Logo	79
Deleting a Logo	80
Using Freeze	81
Using Black	81
Black Auto Take Off	81
Black Auto Take On	82
Using Front-Panel Lockout	83
Full Lockout Mode	83

Chapter 5

GUI Operations 85

In This Chapter	85
GUI Connection and Launch	86
GUI Operations on a PC	88
GUI Operations on a Mobile Device	89
Multiple Unit Control UI	90
Connection to the Multiple Unit Control UI	90
Adding Units to the Unit List	91
Controlling Multiple PDS Units	92
Save Setup	92

Chapter 6

Upgrading Firmware 93

In This Chapter	93
Firmware Upgrade Overview	94
Hardware Requirements	94
Firmware Requirements	94
Downloading Firmware via FTP or Web Site	95
Via FTP Site	95
Via Web Site	95
Upgrading Firmware Using the USB Port	96
Formatting the Flash Drive	96
Performing the Firmware Upgrade Using the USB Port	97
Upgrading Firmware Using the Web Upgrade	98

Table of Contents

Checking for Available Firmware Upgrades	98
Upgrading Firmware Using the Web Interface	99
Troubleshooting Ethernet Communication	103

Appendix A Specifications.....105

In This Appendix	105
Input Specifications	106
Output Specifications	106
Physical and Electrical Specifications	108
Communications Specifications	108
Agency Specifications	108
Pinouts	109
Analog 15-pin D Connector	109
DVI-I Connector	110
Ethernet Connector	111
Serial Connector	112

Appendix B Remote Control113

In This Appendix	113
Setting Up For The Encore or ScreenPRO-II Controller	113
Communicating with PDS	115
Command Protocol	116
Command Responses	116
Query Options	116
IBRT	116
Error Codes	118
Error Codes: General Failures	118
Error Codes: No Error	118
PDS Command List	119
Remote Commands	123
Ethernet Commands	123
DHCP	123
EMAC	123
GATEWAY	124
IP	124
SUBNET	124
Input Commands	125
BLKVID	125
CBLEQ	125
EDID	125
EDIDTYPE	125
FREEZE	126
IADJ	126
IADJRST	126
IAR	126
IAUTOACK	127
IAUTOC	127
IAVAIL	127
IBRT	128

ICDEL	128
ICNT	128
ICPHO	128
ICREC	129
ICRST	129
ICSAV	129
ICSP	130
IHATV	130
IHCROP	130
IHPAN	131
IHPOS	131
IHTOTAL	131
IHUE	131
IMAP	132
IRBRT	132
IRCNT	132
IRES	132
ISAT	133
ISEL	133
ISIZERST	134
ISLICE	134
ISMP	134
ISYNC	134
ITYPE	135
IVATV	135
IVCROP	136
IVPAN	136
IVPOS	136
IVTOTAL	136
PCOMP	136
TAKE	137
Output Commands	138
BLACK	138
OAVAIL	138
OCSAV	138
OGM	138
ORBM	138
ORES	139
OSRC	139
OSYNC	140
OTPM	140
OTPT	140
System Commands	142
AUTOACQ	142
AUTOCFG	142
AUTOSAVE	142
AUTOTAKE	142
BACKGND	142
BLKTRAN	143
CONMODE	143
CONTEXT	143
DIAG	143

Table of Contents

DIAGD	143
ENCOREIP	144
FPUUPDATE	144
ISTAT	144
LCLR	144
LDMP	144
LFEN	145
LINT	145
LOCKOUT	145
OSTAT	145
PREVIEW	145
PROGRAM	146
RESET	146
SAVE	146
SERIAL	146
TEMP	147
TRNTIME	147
UNITID	147
VER	147
VFDBRT	147
LOGO Commands	148
LOGODEL	148
LOGOSAVE	148
LOGOSEL	148
LOGOSTAT	148

Appendix C Contact Information 149

In This Appendix	149
Warranty	149
Return Material Authorization (RMA)	149
Contact Information	150

1. Introduction

In This Chapter

This chapter is designed to introduce you to the PDS User's Guide. Areas to be covered are:

- [Chapter Structure](#)
- [How to Use This Guide](#)
- [Conventions](#)
- [About the PDS](#)
- [Connectivity Diagram](#)
- [Application Questions](#)

Chapter Structure

The following chapters provide instructions for all aspects of PDS operations:

- Chapter 1, "[Introduction](#)" provides a system overview, a list of features, and a system connectivity diagram.
- Chapter 2, "[Hardware Orientation](#)" on page 7 provides detailed diagrams of the system's front and rear panels.
- Chapter 3, "[Installation](#)" on page 15 provides comprehensive system installation instructions.
- Chapter 4, "[Operation](#)" on page 23 provides a menu tree, plus comprehensive system operating instructions.
- Chapter 5, "[GUI Operations](#)" on page 85 provides launch and operating instructions for the system's web-based GUI.
- Chapter 6, "[Upgrading Firmware](#)" on page 93 outlines procedures for upgrading system software components.
- Appendix A, "[Specifications](#)" on page 105 lists the PDS's specifications.
- Appendix B, "[Remote Control](#)" on page 113 provides information regarding remote control protocol.
- Appendix C, "[Contact Information](#)" on page 149 lists important Barco contact, RMA, warranty and technical support details.

1. Introduction

How to Use This Guide

How to Use This Guide

This section provides important tips for streamlining your use of this User's Guide in its electronic "PDF" form.

Navigating

Use Acrobat Reader's "bookmarks" to navigate to the desired location. All chapter files have the same bookmark structure for instant navigation to any section. Please note:



- Extensive hyperlinks are provided within the chapters.
- Use Acrobat's "**Go to Previous View**" and "**Return to Next View**" buttons to trace your complete navigational path.
- Use the "**Previous Page**" and "**Next Page**" buttons to go to the previous or next page within a file.
- Use Acrobat's extensive search capabilities, such as the "**Find**" tool and "**Search Index**" tool to perform comprehensive searches as required.

Table of Contents and Index

Use the **Table of Contents** bookmarks to navigate a desired topic. Click any item to instantly jump to that section of the guide. You can also use the **Index** to jump to specific topics within a chapter. Each page number in the **Index** is a hyperlink.

Conventions

The following conventions are used throughout this guide:

- The symbol ■ denotes an operations procedure.
- The symbol ▲ denotes an example.
- Entries written in bold-face capital letters denote physical buttons or chassis connectors.

▲ Press **LOGO** to ...

- The term "**select**" is used as an abbreviation for "scroll to a selected menu line and press the **SEL** button."
- A sequence of menu steps is represented by the menu names, separated by arrows (>).

▲ **INPUT > Input Sizing > H Position**

... indicates the following sequence:

- a. From the **Main Menu**, select **INPUT** to display the **Input Menu**.
- b. Scroll to the **Input Sizing** line and press **SEL** to display the **Input Sizing Menu**.
- c. Scroll to the **H Position** line and press **SEL** to adjust the image's horizontal position.

About the PDS

The following topics are discussed in this section:

- [Overview](#)
- [Features](#)
- [A Word About HDCP](#)

Overview

PDS is a high-quality dual-channel presentation switcher designed to provide true seamless switching between various input sources. The PDS-902 offers all the features of the PDS-901, and it adds a scaled Preview mode that supports sizing and adjusting input layers before taking them to Program. High-quality image scaling is maintained throughout.

PDS offers straightforward and simple operating modes, and is ideal for use in live events, company boardrooms, hotel ballrooms, houses of worship, and in education and training facilities. As the ideal “simple” presentation switcher to learn and operate, PDS provides a full screen output only, with no PIP capability.

PDS accepts analog, DVI, and HD-SDI input sources and converts them to a wide variety of output formats. Output video is provided on analog and DVI connectors simultaneously. PDS also allows you to capture and store up to three images to be used as full-screen logos during the presentation.

Please note:

- To ensure trouble-free orientation, installation and operation of your PDS, please follow all procedures in the following chapters:
 - ~ Chapter 2, “[Hardware Orientation](#)” on page 7.
 - ~ Chapter 3, “[Installation](#)” on page 15.
 - ~ Chapter 4, “[Operation](#)” on page 23.
- Should you have any questions regarding the installation or operation of the PDS system, please consult with the factory. Refer to Appendix C, “[Contact Information](#)” on page 149 for contact details.

Features

The major features of the PDS system are:

- The system supports input and output resolutions up to UXGA, including all HD resolutions up to 1080p, eliminating the need to create custom output formats. NTSC and PAL are supported as inputs only.

Note

Outputs cannot be interlaced.

1. Introduction

About the PDS

- The PDS supports DVI, analog computer and video formats on the DVI-I inputs.
 - ~ HDCP protocol is supported, and the PDS is considered an HDCP repeater in this configuration. Incoming encrypted data is encrypted going out, and all analog outputs, plus the freeze and LOGO store functions are disabled when the PDS processes HDCP content. Refer to the [“A Word About HDCP”](#) section on page 4 for more details.
 - ~ 1080i RGB input is supported on the DVI digital input.
- A **Preview** mode lets you view and adjust layers before moving them to Program.
- The PDS stores and recalls up to three full-screen logos.
- The system provides true seamless switching between all inputs, including one of the three stored full-screen logos.
- An **Auto Take** feature (in the **User Preference Menu**) supports transitioning from one input source to another without pressing **TAKE**.
- The following scaling and de-interlacing features are provided:
 - ~ 10-bit scaling
 - ~ 10-bit 4:2:2 de-interlacer with diagonal filter
 - ~ 150 MHz maximum pixel rate
 - ~ Low video delay: Interlaced sources, 3 fields (max)
- The PDS provides the ability to “auto acquire” input sources. The system monitors inputs at all times, and if a timing change occurs, the system automatically reacquires and displays the source — once the timing has been measured.
- The PDS offers simple and intuitive menus:
 - ~ Presentations can be switched without accessing any setup menus.
 - ~ Two front-panel lockout modes enable you to lock out menu access, either completely or partially.
- The PDS provides an integrated test pattern generator.
- The PDS offers an 3G/HD/SD SDI input as standard.
- A built-in web-based GUI enables you to perform all setup and transition functions, just like the front panel.
- The File Association feature provides the ability to save and recall up to 64 input configuration files, and associate each of them with one or more inputs.

A Word About HDCP

The PDS supports High-Bandwidth Digital Content Protection (HDCP), an industry-wide content protection system designed to prevent illegal copying of digital audio and video content across interfaces such as DisplayPort (DP), High-Definition Multimedia Interface (HDMI), and Digital Visual Interface (DVI). HDCP prevents the display of encrypted content on devices that do not support content protection.

The HDCP format was designed by Intel® Corporation, and it uses an “authentication and key exchange” procedure to accomplish the required protection. For proper implementation, products that are compatible with the HDCP format require a secure connection to a compliant display, such as a projector or monitor.

When an HDCP-compliant display is connected to the PDS, an HDCP “session” is created. In this session (which is transparent to the user), “keys” are exchanged between the source device (e.g., a Blu-Ray player) and the HDCP-compliant display. The source device queries

the display to ensure that the equipment is HDCP compliant before video is displayed. Non-HDCP equipment such as a PC will work with any DVI-compliant display, but HDCP-compliant equipment shows protected content only on HDCP-compliant displays.

With the HDCP option enabled, the PDS accepts encrypted content from an external source, decrypts the signal for internal processing such as scaling or color balance, then re-encrypts the output video for display. During this process, all PDS output connectors that are not HDCP-compliant are turned off, when the protected content is selected to be shown on those outputs. In addition, if a non-HDCP compliant monitor is connected to the DVI Program output, Preview will show Black for an HDCP source regardless of the HDCP capability of the DVI monitor connected to the Preview output. This is to maintain the true "look-ahead" preview functionality of the PDS.

This feature is available on the PDS DVI input and output connections.

Please note the following important points:

- You can turn the HDCP option on or off. If the option is turned off and the signal is encrypted, the PDS does not send the signal to the output device.

Connectivity Diagram

The figure below illustrates a basic PDS system.

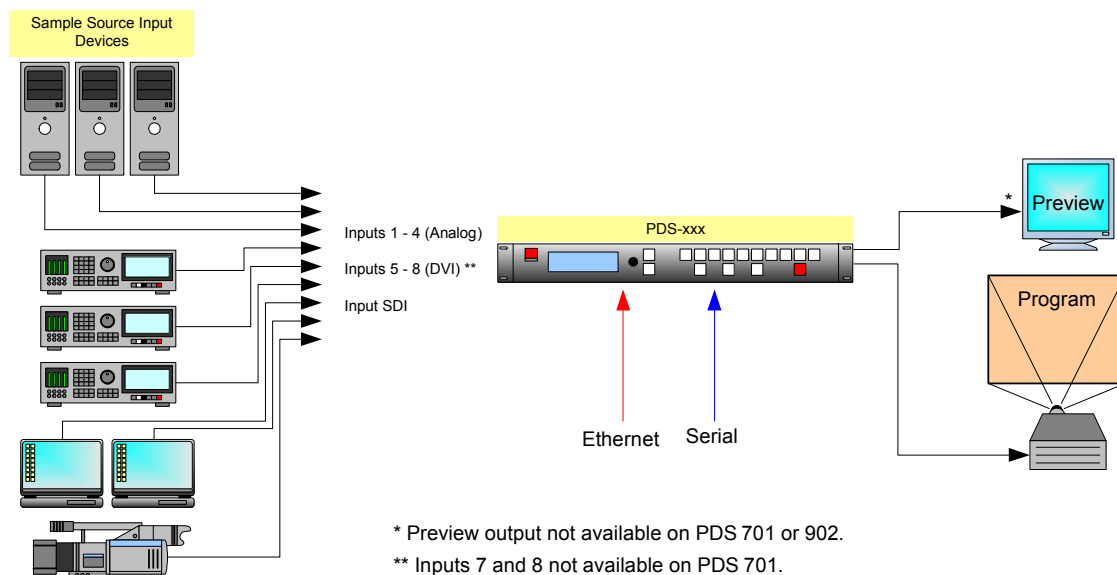


Figure 1-1. Block diagram, PDS system

In the diagram:

- Up to nine sources can be connected to the PDS:
 - ~ 4 x analog inputs (on HD-15 connectors), for a variety of YUV and RGBHV sources, including CVBS and Y/C.
 - ~ 4 x DVI inputs, for computer sources. These four DVI connectors also support analog RGB inputs, and these inputs are universal, and accept

1. Introduction

Application Questions

all types of sources — just like the four HD-15 connectors. (To connect analog sources, use a customer-supplied **DVI to HD-15** adapter.)

~ 1 x SD-SDI, HD-SDI, or 3G-SDI input.

- The PDS 902 connects to a Preview monitor via analog or DVI.
- The PDS connects to a projector (or other target device) via analog or DVI.

In Chapter 2, refer to the “[Inputs Section](#)” heading on page 10 for details on all inputs.

Application Questions

At Barco, we take pride in offering unique solutions to demanding technical problems. If you have application questions, require further information or would like to discuss your application requirements in more detail, please call (866) 469-8036. Our Customer Support Engineers will be happy to supply you with the support you need. Refer to Appendix C, “[Contact Information](#)” on page 149 for details.

2. Hardware Orientation

In This Chapter

This chapter provides detailed diagrams of the PDS's front and rear panels, along with comprehensive explanations of each.

The following topics are discussed:

- [PDS Front Panel](#)
- [PDS Rear Panel](#)

2. Hardware Orientation

PDS Front Panel

PDS Front Panel

The figure below illustrates the PDS front panel:

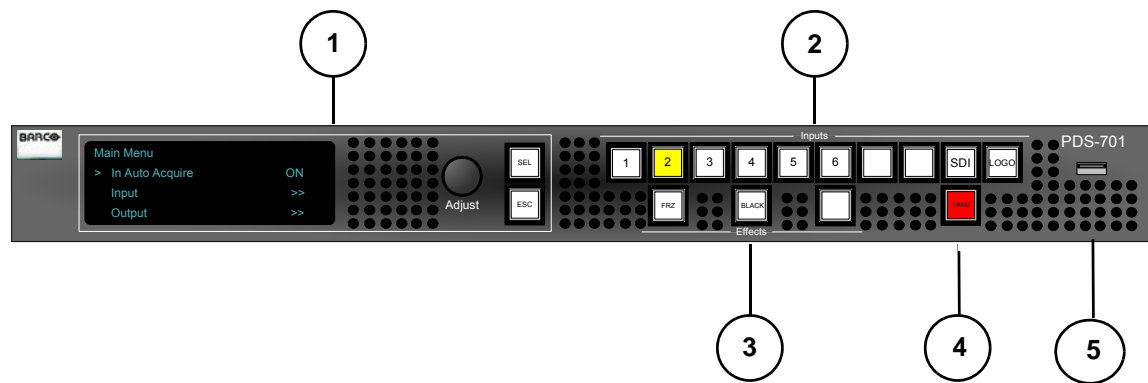


Figure 2-1. PDS Front Panel

1) Display Section	4) Take Button
2) Inputs Section	5) USB Port
3) Effects Section	

Following are descriptions of each front panel section:

1) Display Section

The **Display Section** includes a four-line display, the **ADJUST** knob and two “menu navigation” buttons: **SEL** and **ESC**. Refer to the “[Display Section](#)” heading on page 9 for complete details.

2) Inputs Section

The **Inputs Section** includes ten “source” buttons that enable you to select inputs and a full screen **LOGO**. Refer to the “[Inputs Section](#)” heading on page 10 for complete details.

3) Effects Section

The **Effects Section** provides three buttons that enable you to select the type of effect that you want to perform next. Refer to the “[Effects Section](#)” heading on page 11 for complete details.

4) Take Button

The red **TAKE** button initiates a transition to the selected source. Refer to the “[Take Button](#)” section on page 12 for details.

5) USB Port

The USB port can be used for upgrading system firmware. Refer to the “[Upgrading Firmware Using the USB Port](#)” section on page 96 for details.

Display Section

The figure below illustrates the **Display Section**:

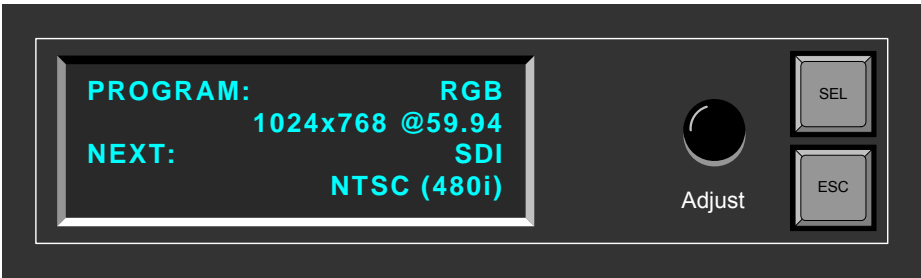


Figure 2-2. Display Section with sample Status Menu

Descriptions of each button and control are provided below:

- The **Menu Display** is a 4-line x 20-character Vacuum Fluorescent Display (VFD) that shows all PDS menus and sub-menus. Brightness is adjustable. The following illustration shows a typical PDS menu.



Figure 2-3. Sample Setup Menu Display


For all setup menus, please note:

- ~ The top line names the current menu, in all capital letters.
- ~ The navigation cursor (>) in the left-hand column indicates the current line on which action can be taken.
- ~ The double arrow (>>) indicates that a sub-menu is available.

Note

The **Status Menu** layout is different from the “setup” menu display. In Chapter 4, refer to the “[Status Menu](#)” section on page 33 for details.


In Chapter 4, refer to the “[Menu Tree](#)” section on page 27 for additional details on the system’s menu tree.



- **ADJUST** — use the **Adjust Knob** to scroll through all system menus.
 - ~ Turn the knob counter-clockwise (**CCW**) to scroll down.
 - ~ Turn the knob clockwise (**CW**) to scroll up.
- **SEL** — press to enter the setup menu tree (from the **Status Menu**), to enter a sub-menu, change a parameter, accept a parameter, or to answer “**Yes**” to certain menu queries.

2. Hardware Orientation

PDS Front Panel



- **ESC** — press to exit a menu without making changes, cancel an operation, to answer “**No**” to certain menu queries, and to return to the top **Status Menu**. Each press takes you back up the menu tree by one level.

Inputs Section

The figure below illustrates the **Inputs Section**:

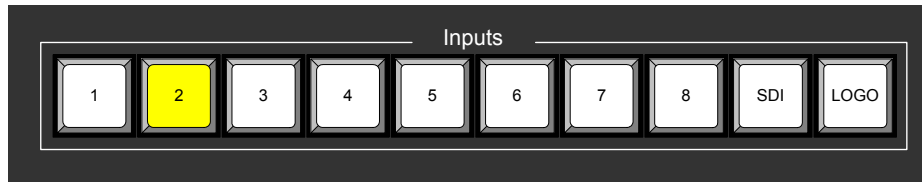


Figure 2-4. Inputs Section

The buttons in the **Inputs Section** enable you to select the source that you want to transition to Program. Each button corresponds to the similarly numbered input connector on the rear panel. You can also select the full screen LOGO as the transition source.

There are three button states:

- **Off** — the input is not selected for a transition.
- **Blinking** — the input is “pending” for the next transition.
 - ~ When a button is blinking **slow**, it is ready to be transitioned to Program.


Note

If an input button is blinking slow, and the **Status Menu** shows “**Invalid Signal**,” the system has attempted to acquire the source, but has failed.


- **Lit Solid** — the input is on Program.

In Chapter 4, refer to the “**Flip-flop Mode**” section on page 76 for additional information about button behavior when **TAKE** is pressed.


Following are descriptions of each “input” button in the section:



- Buttons **1** through **4** enable you to select physical inputs **1** through **4** (respectively) from the rear panel HD-15 connectors.
- Buttons **5** and **8** enable you to select physical inputs **5** and **8** (respectively) from the rear panel DVI-I connectors. Please note:
 - ~ If a DVI signal is present, the DVI (digital) source is used from the DVI-I connector’s digital pins.
 - ~ If a DVI signal is not present, the selection defaults to the analog signals that are on the DVI-I connector’s analog pins. Note that a customer-supplied **DVI to HD-15** adapter is required to connect to the analog pins.



- The **SDI** button selects the SD-SDI, HD-SDI, or 3G-SDI input source.
- The **LOGO** button selects the stored “full screen” LOGO image for the next transition. If no image is stored, the transition will be to Black. Use the menu to select one of three stored LOGOs for use. In Chapter 4, refer to the [“Using the Logo”](#) section on page 78 for details.



Effects Section

The figure below illustrates the **Effects Section**:

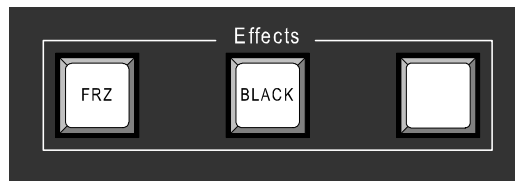



Figure 2-5. Effects Section

The buttons in the **Effects Section** enable you to freeze the selected source on Program and transition to black.

Following are descriptions of each “effects” button:



- The **FRZ** button instantly freezes and unfreezes the current Program source. When the source is frozen, the button is lit solid. In Chapter 4, refer to the [“Using Freeze”](#) section on page 81 for details.



- The **BLACK** button enables you to transition to or from black. The button performs one of two functions, depending on the way the button is defined in the **User Preferences Menu**.
 - ~ If “**Black Auto Take**” is **Off**:
 - Press **BLACK** to pend a transition to or from black. The button blinks to indicate “pending.”
 - Press **TAKE** to perform the transition to or from black.
 - If the transition is “**to**” black, the button lights solid when black is on Program.
 - If the transition is “**from**” black, the button turns off when the selected source is fully on Program.

2. Hardware Orientation

PDS Front Panel

~ If “**Black Auto Take**” is **On**:

- Press **BLACK** to immediately transition to/from black.
 - If the transition is “**to**” black, the button blinks fast during the transition, then lights solid when black is on Program.
 - If the transition is “**from**” black, the button blinks fast during the transition, then turns off when the selected source is on Program.

Important

Regardless of the current **Black Auto Take** mode, if you select (or pend) **BLACK**, the system will not transition to the selected “next” source until black is fully on Program.

In Chapter 4, refer to the “[Using Black](#)” section on page 81 for details.

Take Button



Press **TAKE** to mix the pending (blinking) source to Program, at the current transition rate. Using the **Setup Menu**, you can adjust the transition time from 0 to 12 seconds. If the transition time is set to 0, the transition is a cut. Please note:

- Each time **TAKE** is pressed, the current source on Program and the pending source flip-flop. In Chapter 4, refer to the “[Flip-flop Mode](#)” section on page 76 for additional details.
- The **TAKE** button is also used to transition to/from black, when the “**Black Auto Take**” function is **On** in the **User Preference Menu**.

In Chapter 4, refer to the “[User Preference Menu](#)” section on page 58 for details on the **User Preference Menu**.

PDS Rear Panel

The figures below illustrate the rear panels for PDS-902, PDS-901, and PDS-701:

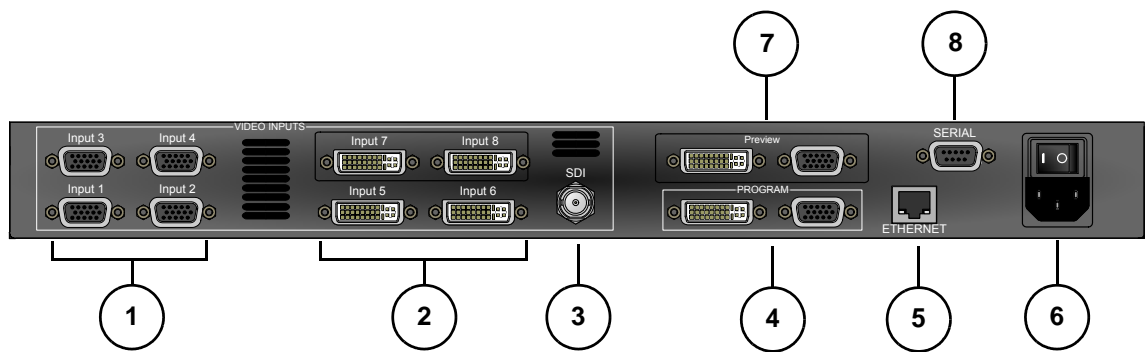


Figure 2-1. PDS-902 Rear Panel

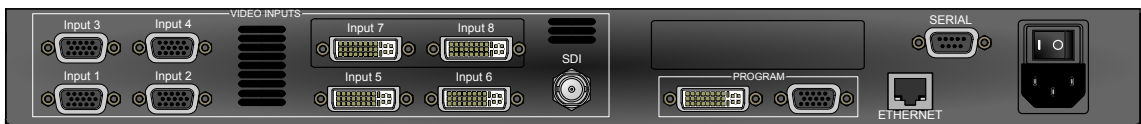


Figure 2-1. PDS-901 Rear Panel

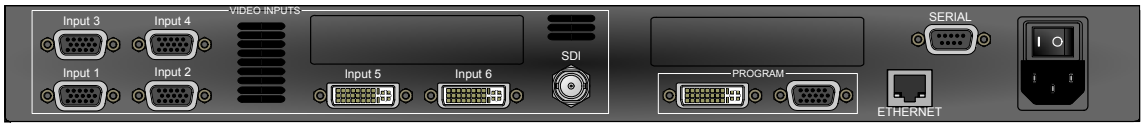


Figure 2-1. PDS-701 Rear Panel

1) Analog Inputs	4) Main Outputs	7) Preview Outputs
2) DVI and Analog Inputs	5) Ethernet	8) Serial
3) 3G/HD/SD SDI Input	6) AC Power	

Following are descriptions of each rear panel connector:

1) Analog Inputs

Four HD-15 connectors are provided for the system's **Analog** inputs. Please note:

- ~ Each input provides 10-bits/color sampling at a maximum 150 MHz.
- ~ Each input supports 1:1 sampling up to 1920x1080@60 Hz. Sources with native pixel rates greater than 150 MHz will be filtered and undersampled at 150 Mhz. These include:
 - 1600x1200@60 (162.0MHz)
 - 1920x1080p@60 (173.0 MHz)

2. Hardware Orientation

PDS Rear Panel

- 1920x1200@60 (193.25 MHz)
- 2048x1080p@60 (183.75 MHz)

~ Composite and S-Video formats are supported.

In Chapter 3, refer to the “[Format Connection Table](#)” section on page 20 for a table of analog inputs that you can connect using a customer-supplied breakout cable. In Appendix A, refer to the “[Analog 15-pin D Connector](#)” section on page 109 for pinouts.

2) DVI and Analog Inputs

Four DVI-I connectors are provided on the PDS-902 and PDS-901, and two on the PDS-701, for both digital and analog inputs.

- ~ Using the connector’s digital pins, an 8-bit digital input is supported.
- ~ Using the connector’s analog pins, RGBHV, analog composite, S-Video, and YUV formats are supported. A customer-supplied breakout cable or **DVI to HD-15** adapter is required for these connections.

In Appendix A, refer to the “[DVI-I Connector](#)” section on page 110 for pinouts.

3) 3G/HD/SD SDI Input

One BNC connector is provided for the SD-SDI, HD-SDI, or 3G-SDI input.

4) Main Outputs

Two connectors are provided for the PDS’s main program outputs. Both outputs have the same resolution, and both can be used simultaneously.

- ~ One DVI-I connector is provided for the system’s digital program output. There are no analog outputs on this connector. In Appendix A, refer to the “[DVI-I Connector](#)” section on page 110 for pinouts.

Note

The DVI-I connector allows you to use both **DVI-D** and **DVI-I** cables as required.

- ~ One HD-15 connector is provided for the system’s analog output. In Appendix A, refer to the “[Analog 15-pin D Connector](#)” section on page 109 for pinouts

5) Ethernet

One RJ-45 connector is provided for 10/100BaseT **Ethernet** communications with the PDS system. The port is used for running the built-in web-based GUI, for diagnostics, or for command-line operations via Telnet (using port 23).

▲ telnet 192.168.0.10 23

In Appendix A, refer to the “[Ethernet Connector](#)” section on page 111 for pinouts.

6) AC Power

One **AC Connector** is provided for connecting PDS to AC. The integral switch turns the chassis on and off. In Appendix A, refer to the “[Physical and Electrical Specifications](#)” section on page 108 for power details.

7) Preview Outputs

Two outputs are provided on the PDS-902 for connecting to the Preview monitor: an HD-15 connector for analog monitors and a DVI connector for digital displays.

8) Serial

One DB-9 connector is provided for **Serial** communications with the PDS system. The port is also used for diagnostics or command-line operations.

3. Installation

In This Chapter

This chapter provides detailed instructions for installing the PDS hardware. The following topics are discussed:

- [Safety Precautions](#)
- [Unpacking and Inspection](#)
- [Site Preparation](#)
- [Rack-Mount Installation](#)
- [Cable and Adapter Information](#)
- [Signal Installation](#)
- [Format Connection Table](#)

3. Installation

Safety Precautions

Safety Precautions

For all PDS installation procedures, observe the following important safety and handling rules to avoid damage to yourself and the equipment:

- To protect users from electric shock, ensure that the power supplies for each unit connect to earth via the ground wire provided in the AC power cord.
- The AC Socket-outlet should be installed near the equipment and be easily accessible.

Unpacking and Inspection

Before opening the PDS shipping box, inspect it for damage. If you find any damage, notify the shipping carrier immediately for all claims adjustments. As you open the box, compare its contents against the packing slip. If you find any shortages, contact your sales representative.

The PDS shipping box contains the PDS unit, a power cord, and a CD. Once you have removed all the components from their packaging and checked that all the components are present, visually inspect the unit to ensure there was no damage during shipping. If there is damage, notify the shipping carrier immediately for all claims adjustments.

Site Preparation

The environment in which you install your PDS should be clean, properly lit, free from static, and have adequate power, ventilation, and space for all components.

Rack-Mount Installation

The PDS chassis is designed to be rack mounted and is supplied with front rack-mount hardware.

Note

The PDS chassis can also be used in a “tabletop” configuration, without rack mounting.

When rack mounting the PDS chassis, remember the following important points:

- Maximum ambient operating temperature for the unit is 40 degrees C.
- Leave at least one inch of space (front and rear) to ensure that the airflow through the fan and vent holes is not restricted.
- When installing multiple units into a rack, distribute them evenly to prevent hazardous conditions that may be created by uneven weight distribution.

- Rack mount each PDS chassis from the front rack ears using four rack screws (not supplied). Rack threads may be metric or otherwise — depending upon the rack type.
- Install the *lower* of the two mounting holes first.

Cable and Adapter Information

The table below provides information regarding cables used with the PDS. When connecting to an PDS, use high-quality shielded cables.

Table 3-1. PDS System Cables

Cable	Description	Note
Remote Connections		
RJ-45 Ethernet Cable	For use with PDS Web Interface	Customer Supplied
LED Display Connections		
RJ-45 Ethernet Cable, cat5 or better	For connection to your LED display.	Customer Supplied
Power Connections		
AC Power Cord	AC Power, 7 foot, 10A	1 Cord Supplied

Power Cord and Line Voltage Selection

The PDS is rated to operate with the following specifications:

Input Power: 100-240 VAC, 50-60 Hz

Power Consumption: 100 Watts maximum

The PDS performs line voltage selection automatically. No user controls are required. The AC power cords must be accessible so that they can be removed during field servicing.



Warning

When the PDS is used in the 230-volt mode, a UL listed line cord rated for 250 volts at 15 amps must be used and must conform to IEC-227 and IEC-245 standards. This cord will be fitted with a tandem prong-type plug.

The rear panel ON/OFF switch does not disconnect the unit from input AC power. To facilitate disconnection of AC power, the power cord must be connected to an accessible outlet near the unit.

Building Branch Circuit Protection:
For 115 V use 20 A. For 230 V use 8 A.

3. Installation

Cable and Adapter Information

**Avertissement**

La choix de la ligne de voltage se réalise automatiquement par le PDS Transformateur Graphique. On n'a pas besoin du controller usager pour la choix de la ligne de voltage.

**Warnung**

Das PDS gerät mu beim Anschlu an 240V ~ mit einer vom VDE auf 250V/10A geprüften Netzleitung mit einem Schukostecker ausgestattet sein.

Signal Installation

The figure below illustrates a sample PDS system. Use this figure for reference during the signal installation process.

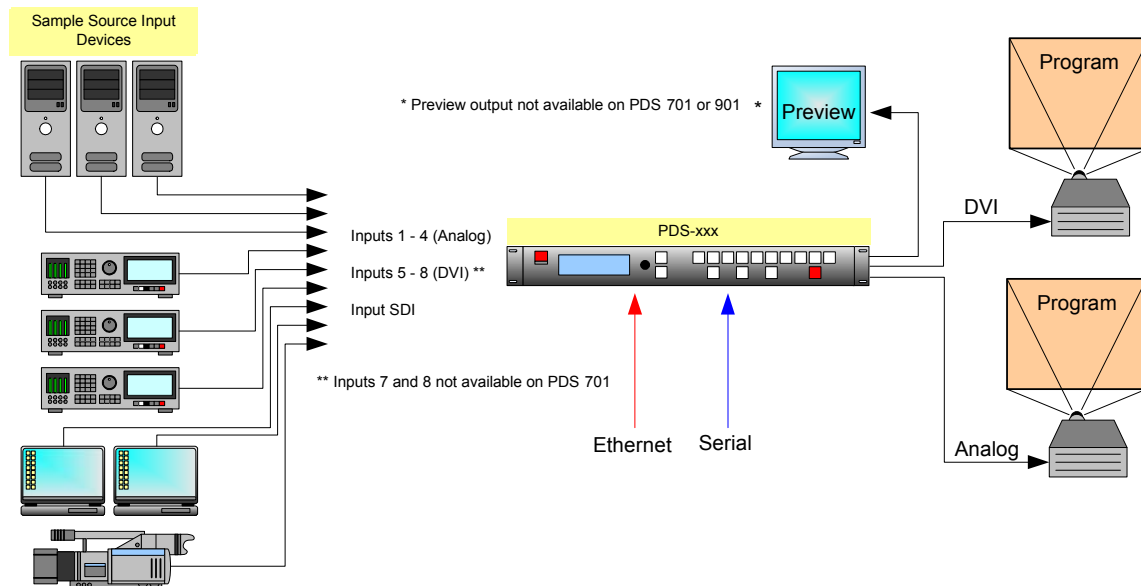


Figure 3-1. PDS System Diagram (sample)

■ Use the following steps to install signals to/from the PDS:

1. Input connections — any combination of inputs can be connected.

- As required, connect analog RGBHV sources to **Inputs 1 through 4**. Refer to the [Format Connection Table](#) section on page 20 for a table of analog input combinations.
- As required, connect DVI sources to **Inputs 5 through 8** (using the connector's digital pins). Inputs 7 and 8 are not available on PDS-701.
- As required, connect analog sources to **Inputs 5 through 8** (using the connector's analog pins). A customer-supplied breakout cable or **DVI to HD-15** adapter is required for this connection. Inputs 7 and 8 are not available on PDS-701.
- As required, connect an HD-SDI or SD-SDI source to **Input SDI**.

2. Output connections — up to three outputs can be connected:

- If you are connecting the PDS to a digital projector (for example) or other target device, connect the **DVI Output** to the projector's DVI input.
- If you are connecting the PDS to an analog projector (for example) or other target device, connect the **Analog (HD-15) Output** to the projector's analog input.
- If you are connecting the PDS 902 to a Preview monitor, connect the **Preview DVI or Analog (HD-15) Output** to the monitor.

3. Installation

Format Connection Table

3. **GUI connection** — to configure your system to run from the built-in web-based GUI, perform the following steps:
 - a. Ensure that your PC (or laptop) uses Windows® 7, Windows® 2000, or Windows XP. If using a mobile device, ensure that it uses one of the following operating systems:
 - IOS 4+
 - Android 2.3+
 - Android with Chrome®
 - BB OS 6+
 - BB Tablet OS 1+
 - b. Ensure that your PC (or laptop) has a web browser installed. The following browsers are supported:
 - Internet Explorer® 10+
 - Mozilla Firefox® 14+
 - Google Chrome® Version 19.0+
 - Safari
 - c. Connect the PDS's Ethernet port to a Switch.
 - d. Connect the Switch to your PC (or laptop).

This completes the required "physical" connections. Refer to Chapter 5, "[GUI Operations](#)" on page 85 for installation and operating instructions.

4. **Communications connection** — two methods are available for remote control:
 - a. Connect the PDS's **Ethernet** port to an Ethernet switch, and connect the switch to the other Ethernet devices in your local system. This enables you to communicate with the PDS via Telnet. In Appendix B, refer to the "[Communicating with PDS](#)" section on page 115 for details.
 - b. For a serial remote connection, connect the PDS's **Serial** port to the serial port of a laptop or a PC. In Appendix B, refer to the "[Communicating with PDS](#)" section on page 115 for details

This completes system signal installation. Please continue with system setup, menu orientation and operations, as outlined in Chapter 4, "[Operation](#)" on page 23.

Format Connection Table

Use the following table to connect various source formats to the PDS, using the analog HD-15 connectors (on **Inputs 1** through **4**). Please note:

- **RGB format** — typical devices: Computers
- **YUV or YP_bP_r (Betacam) format** — typical devices: DVD player, Betacam deck

Using a customer supplied VGA to 5 x BNC breakout cable, multiple input combinations

3. Installation

Format Connection Table

are possible. Cells with checks denote the connections required for the indicated format.

Table 3-2. Analog Input Combinations using Breakout Cable

Breakout Cable Wire Color	Composite Video	S-Video (Y/C)	YUV (YP _b P _r)	RGB Sync on Green	RGB Comp Sync	RGB Separate H V
R			✓ (P _r)	✓	✓	✓
G	✓	✓ (Lum)	✓ (Lum)	✓	✓	✓
B		✓ (Chrom)	✓ (P _b)	✓	✓	✓
H Sync					✓	✓
V Sync						✓

Please contact **Barco Technical Support** for information on obtaining breakout cables. In Appendix C, refer to the [“Contact Information”](#) section on page 150 for details.

3. Installation

Format Connection Table

4. Operation

In This Chapter

This chapter provides comprehensive menu descriptions and detailed operating instructions for the PDS. The following topics are discussed:

- [Control Overview](#)
- [Power-Up Initialization](#)
- [Button States](#)
- [Quick Setup and Operations](#)
- [Menu Tree](#)
- [Using the Menu System](#)
- [Quick Function Reference](#)
- [Status Menu](#)
- [Setup Menu](#)
- [Using Inputs](#)
- [Using the Logo](#)
- [Using Freeze](#)
- [Using Black](#)
- [Using Front-Panel Lockout](#)

4. Operation

Control Overview

Control Overview

There are several ways to control the PDS:

- The front panel is ideal for all basic operations. Available controls include the **Display Section** and the buttons in the **Inputs Section** and the **Effects Section**.
- The built-in web-based GUI is ideal for intuitive point-and-click operations. Refer to Chapter 5, “[GUI Operations](#)” on page 85 for additional details.
- The PDS can also be controlled remotely via **Ethernet** or **Serial** communications. See Appendix B “[Remote Control](#)” on page 113 for additional details.

Power-Up Initialization

After connecting power to the PDS, locate the power switch on the back of the chassis, and turn power **ON**. While the system is initializing, the following messages are displayed:

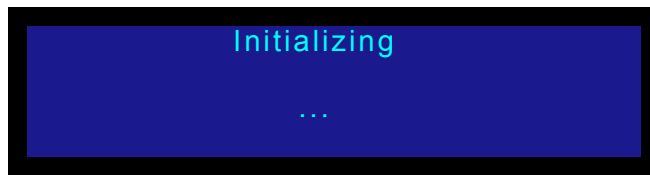


Figure 4-1. System Initialization Message 1 (sample)

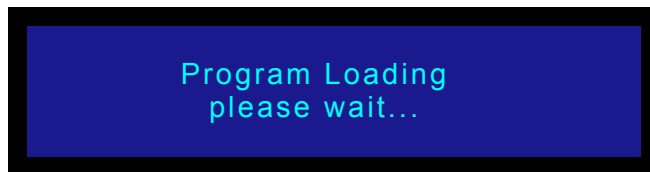


Figure 4-2. System Initialization Message 2 (sample)



Figure 4-3. System Initialization Message 4 (sample)

The “version” line in the above menu shows the software version that is currently installed. This version number changes as software upgrades are released.

When you first start up a PDS that has stored logos, a message like the one in the following

illustration appears during initialization:

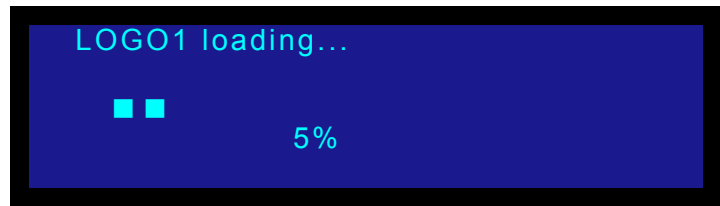


Figure 4-4. Logo Initialization Message (sample)

After system initialization is complete, the **Status Menu** appears.

Button States

Remember that there are three states for the buttons in the **Inputs Section**:

- **Off** — the input is not selected for a transition.
- **Blinking** — the blinking status depends on the type of button:
 - ~ For an **input** button:
 - When blinking **slow**, the input is ready to be transitioned to Program.
 - ~ For an **effect** button (**BLACK**):
 - When blinking **slow**, the button's "auto take" mode is **OFF**, and the effect is pending for the next transition.
- **Lit Solid** — the input or the effect is on Program.

Remember also that when you press **TAKE**, the PDS automatically flip-flops the current source on Program with the "pending" source. Refer to the "[Flip-flop Mode](#)" section on page 76 for additional information.

Quick Setup and Operations

For the optimum speed in setting up and operating your system, use the following steps. For reference, links are provided to the appropriate sections in this guide.

1. **Connect power** — Ensure that power is properly connected to the PDS. (Chapter 3, "[Installation](#)," page 15.)
2. **Connect inputs** — Connect all input sources to the PDS. (Chapter 3, "[Signal Installation](#)," page 19.)
3. **Connect outputs** — Connect the output(s) of the PDS to your projector(s) or other target devices. (Chapter 3, "[Signal Installation](#)," page 19.)
4. **Turn on power** — Turn on power to the PDS, your projector(s), and to all peripheral equipment. (This chapter, "[Power-Up Initialization](#)," page 24.)
5. **Factory reset** — If you are using the PDS for the first time, or if you are using a PDS that has just returned from another event, perform a full factory reset to restore system configurations. (This chapter, "[Factory Reset Menu](#)," page 73.)

4. Operation

Quick Setup and Operations

6. **Launch GUI** — (**Optional**) If you want to run the system from the web-based GUI, ensure that Ethernet is connected between your PC and the PDS, then launch the GUI. (Chapter 5, "[GUI Operations](#)," page 85.)
7. **Set output format** — Set the desired output resolution and frame rate. (This chapter, "[Output Format](#)," page 50.)
8. **Enable test pattern** — Turn on the desired test pattern, verify that you have an image, and make the necessary adjustments. When complete, turn off the test pattern. (This chapter, "[Test Pattern](#)," page 50.)
9. **Save output configuration** — After completing all output adjustments, save the output configuration. (This chapter, "[Save Config](#)," page 52.)
10. **Select and adjust inputs** — As required, select an input, and perform the necessary adjustments. (This chapter, "[Input Menu](#)," page 36.)
11. **Save input configuration** — After completing all adjustments for an input, save the input configuration. (This chapter, "[Save Config](#)," page 46.)
12. **Repeat for each input** — repeat steps 10 and 11 for each input that you have connected to the PDS.
13. **Adjust system parameters** — As required, adjust all desired system parameters such as transition time, display brightness, and all user preferences. (This chapter, "[Trans Time](#)," page 58 and "[System Menu](#)," page 63.)
14. **Save system configuration** — After completing all system adjustments, save the system configuration. (This chapter, "[Save System State](#)," page 72.)
15. (**Optional**) **Remote Control** — To control the PDS remotely, ensure that Ethernet or Serial communications are connected, then establish communications and issue commands. (Appendix B, "[Remote Control](#)," page 113.)
16. **Ready to roll** — With all output, input and system configurations saved, press the desired input button, and press **TAKE**.

Note

For advanced system operations, specific system "tweaks" and operating descriptions on every feature, please start with the "[Quick Function Reference](#)" section on page 30, and select the function that you wish to perform.

Menu Tree

The figure below illustrates the entire PDS menu tree. Please use this diagram for reference as you learn how to operate the system.

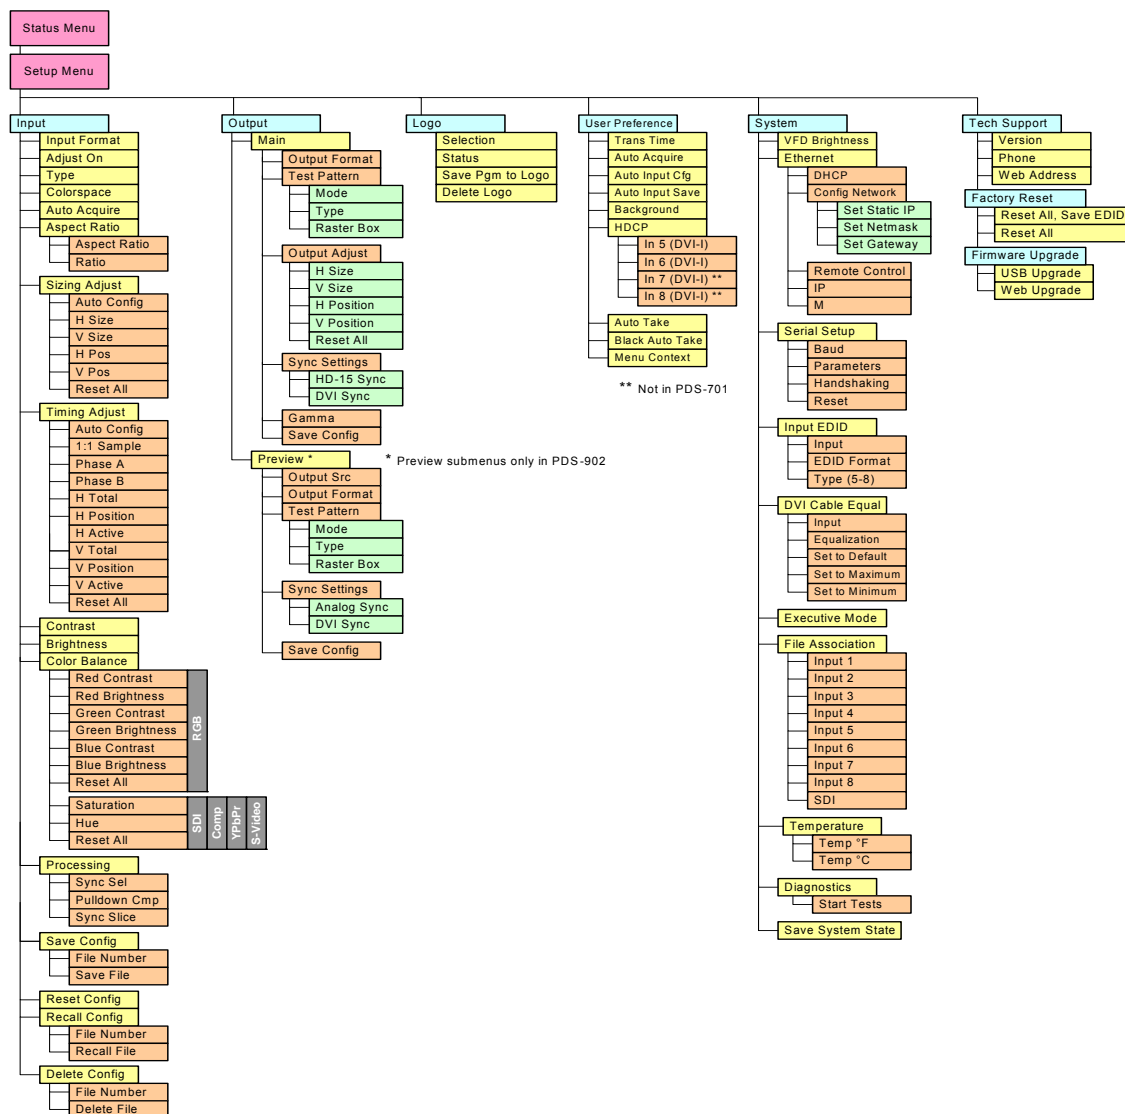


Figure 4-5. PDS Menu Tree

* The “Auto Config” selection in the Sizing Adjust and Timing Adjust menu is only available when an analog input is chosen, except for analog NTSC and PAL.

4. Operation

Using the Menu System

Using the Menu System

This section lists the rules and conventions for using PDS's menu system. For reference, the figure below illustrates the **Setup Menu**:



Figure 4-6. Setup Menu (sample)

For all setup menus, please note the following important menu rules and conventions:

- The top line names the current menu, in all capital letters.
- Subsequent lines typically display two fields:
 - ~ For a listed **function**, the left-hand field names the function, and the right-hand field is the function's current parameter or value.
 - ~ For a listed **sub-menu**, the left-hand field names the sub-menu that you can access, and the right-hand field displays the double arrow (>>), indicating that a sub-menu is available.
- The “navigation” **cursor** (>) in the left-hand column indicates the current line on which action can be taken. This arrow “scrolls” as you rotate the knob.
- Scrolling:
 - ~ Turn the **ADJUST** knob counter-clockwise (**CCW**) to scroll down.
 - ~ Turn the **ADJUST** knob clockwise (**CW**) to scroll up.
- To enter a sub-menu, scroll to the desired line and press **SEL**.

Note

Throughout this chapter, the term “**select**” is used as an abbreviation for “scroll to a menu line and press **SEL**.”

▲ Select the **Input** field to...

- To change a parameter, scroll to the desired line and press **SEL**. The cursor changes to the “edit” cursor (#). Use the **ADJUST** knob to modify the value:
 - ~ Turn the **ADJUST** knob **CW** to increase a value.
 - ~ Turn the **ADJUST** knob **CCW** to decrease a value.
- To accept a parameter or value, press **SEL**. The edit cursor changes back to the navigation cursor.

Note

You must press **SEL** to activate a PDS function.

- In the “edit” mode, to exit (or cancel) without changing the original parameter, press **ESC**.
- To navigate back up the menu structure, press **ESC**. Each press takes you back up the menu tree by one level.

4. Operation

Using the Menu System

- The **SEL** button is also used to answer “**Yes**” to certain menu queries. The **ESC** button is also used to answer “**No**” to certain menu queries.

Note

The display itself is four lines high, and the **ADJUST** knob is used to scroll through the various lines. Throughout this chapter, *entire* menus will be shown for clarity — rather than a series of four-line sections.

- If a value is displayed between brackets, (e.g., **[SMPTE]**) this indicates that the value can not be changed.

4. Operation

Quick Function Reference

Quick Function Reference

Use the following table to quickly access the proper section for a specific function. Both hyperlinks and page numbers are provided.

Table 4-1. PDS Quick Function Reference Table

How to:	Use the Following Section:	Page
Adjust background color	Background	60
Adjust gamma	Gamma	52
Adjust image brightness	Brightness	44
Adjust image color balance	Color Balance	44
Adjust image contrast	Contrast	44
Adjust input processing	Processing	45
Adjust input timing	Sizing Adjust	41
Adjust transition time	Trans Time	58
Associate configuration files to inputs	File Association	70
Check software version	Tech Support Menu	73
Contact Tech Support	Tech Support Menu	73
Delete input configuration	Reset Config	47
Display a test pattern	Test Pattern	50
Display the raster box	Test Pattern	50
Identify button states	Button States	25
Learn the menu tree	Menu Tree	27
Lock out the front panel completely	Full Lockout Mode	83
Lock out the front panel, except inputs	Executive Mode	69
Perform factory reset	Factory Reset Menu	73
Perform quick setup and operations	Quick Setup and Operations	25
Perform system diagnostics	Diagnostics	71
Power up the system	Power-Up Initialization	24
Reset input configuration	Save Config	46
Reset system	Factory Reset Menu	73
Save input configuration	Save Config	46
Save output configuration	Save Config	52
Save system state	Save System State	72
Select inputs	Input Selection Rules	75

4. Operation

Quick Function Reference

Table 4-1. PDS Quick Function Reference Table (Continued)

How to:	Use the Following Section:	Page
Set Auto Input Cfg mode	Auto Input Cfg	60
Set Auto Input Save mode	Auto Input Save	60
Set Auto Take mode	Auto Take	61
Set Black Auto Take mode	Black Auto Take	61
Set color input space	Colorspace	38
Set DVI cable equalization	DVI Cable Equal	68
Set Ethernet parameters	Ethernet	64
Set Auto Acquire mode	Auto Acquire	59
Set input format	Input Format	37
Set input type	Type	38
Set Menu Context mode	Menu Context	62
Set or change multiple input configurations	File Association	70
Set or change a single input configuration	Recall Config	48
Set output format	Output Format	50
Set Preview or Program mode	Adjust On	38
Set Serial port parameters	Serial Setup	66
Set up EDID	Input EDID	67
Set up Logo	Logo Menu	57
Set up sync	Sync Settings	52
Set user preferences	User Preference Menu	58
Set VFD brightness	VFD Brightness	63
Understand auto acquire	Using Auto Acquire	77
Use Black	Using Black	81
Use Freeze	Using Freeze	81
Use HDCP	Using HDCP	77
Use inputs	Using Inputs	75
Use the Input Menu	Input Menu	36
Use the Logo	Using the Logo	78
Use the Logo Menu	Logo Menu	57
Use the menu system	Using the Menu System	28
Use the Output Menu	Output Menu	50
Use the Preview Menu	Preview Menu (PDS 902 Only)	53
Use the Setup Menu	Setup Menu	35

4. Operation

Quick Function Reference

Table 4-1. PDS Quick Function Reference Table (Continued)

How to:	Use the Following Section:	Page
Use the Status Menu	Status Menu	33
Use the System Menu	System Menu	63
Use the User Preference Menu	User Preference Menu	58
View chassis temperature	Temperature	71
View Logo status	Logo Menu	57
View software version	Tech Support Menu	73
View Tech Support number	Tech Support Menu	73

Status Menu

The **Status Menu** is the system's top level display, which appears by default after the PDS boots up.

- To return to the **Status Menu** from any point within the **Setup Menu**, press **ESC** repeatedly.
- To display the **Setup Menu** from the **Status Menu**, press **SEL**.

The figure below illustrates a sample **Status Menu**:



Figure 4-7. Status Menu (sample)

The **Status Menu** provides information about the current input on Program (the button that is lit solid), and the input that is *next* to be transitioned to Program (the button that is blinking). The **Status Menu** always updates as “current” and “next” sources change.

Please note:

- If **Menu Context** is **ON** (in the **User Preference Menu**), selecting a different input for the “next” transition automatically displays the **Input Menu**. This menu always reflects the source currently on Program. To return to the **Status Menu**, press **ESC** repeatedly.
- If **Menu Context** is **OFF**, the **Status Menu** remains on display when you select a different input.

In the **Status Menu**, the variable fields are as follows:

- **Program Input Type** — Specifies the type of input signal currently on Program.
- **Program Input Format** — Indicates the current input video format, in the form:

Hact x Vact @ Vr Hz

▲ 1280x1024@60 Hz

If the currently selected input does not have a valid input signal, the **Input Format** field displays **Invalid Signal**.

Please note the following conventions for displaying resolutions:

Table 4-2. Status Menu Conventions

Convention	Description
Hact x Vact @ Vr	No symbols. The current format is an exact match from the table. The format has not been “best guessed” or saved.
Hact x Vact @ Vr	Asterisks. The format has been “best guessed.”
[Hact x Vact @ Vr]	Brackets. The exact table match has been saved.
[*Hact x Vact @ Vr*]	Brackets plus Asterisks. The best guessed format has been saved.

4. Operation

Status Menu

- **Next Input Type** — indicates the next input type on Program, and (if applicable), the system's HDCP status. The following labels can appear:
 - ~ HDCP
 - ~ DVI HDCP is OFF.

Important

The label "DVI HDCP is OFF" will appear for any input in which HDCP has been set to OFF within the HDCP menu under User Preference.

- **Next Input Format** — Indicates the input formats on Program, in the form:

Hact x Vact @ Vr Hz

▲ 1400x1050@59.94 Hz

Setup Menu

After PDS initialization is complete, the **Status Menu** appears. This is the system's top-level menu. Refer to the "[Status Menu](#)" section on page 33 for details.

To display the **Setup Menu** from the **Status Menu**, press **SEL**.

Note

When you make changes to input, output and system parameters, your "configuration" information can be stored in non-volatile memory — provided that you perform a "**Save Config**" operation. In this way, your settings will be recalled automatically each time the unit is turned on. Note that if the "**Auto Input Save**" function is enabled in the **User Preferences Menu**, the system automatically saves inputs.

The figure below illustrates the **Setup Menu**:

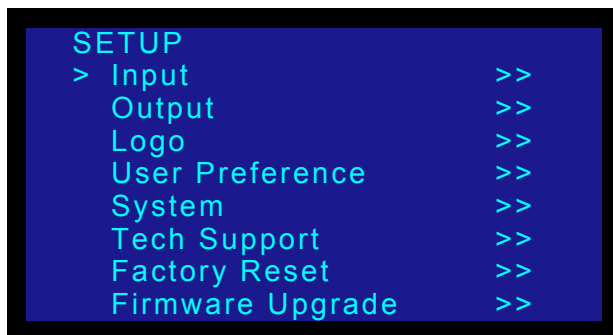


Figure 4-8. Setup Menu (sample)

Following are descriptions of each **Setup Menu** function:

- [Input Menu](#)
- [Output Menu](#)
- [Preview Menu \(PDS 902 Only\)](#)
- [Logo Menu](#)
- [User Preference Menu](#)
- [System Menu](#)
- [Tech Support Menu](#)
- [Factory Reset Menu](#)
- [Firmware Upgrade Menu](#)

4. Operation

Setup Menu

Input Menu

From the **Setup Menu**, select **Input** to display the **Input Menu**. The **Input Menu** enables you to set parameters for the selected input on Program.

Important

When **LOGO** is selected, only the **Adjust On** and **Auto Acquire** input menu functions are available for adjustment.

The format of the selected input on Program is shown on the second line.

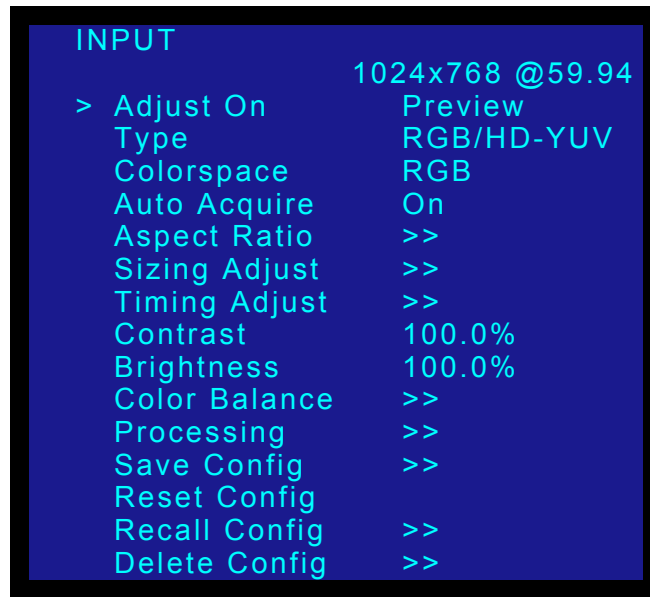


Figure 4-9. Input Menu (sample)

The **Input Menu** can be used in two ways:

- Press an input button *first*, **TAKE** the input to Program, then use the menu to set input parameters.
- While you are already in the **Input Menu**, press a *different* input button and **TAKE** it to Program. The fields update to reflect the values for the new input.

Note


Changing the parameters for one input does not affect the input configuration of the other inputs.

The following sections provide detailed information about **Input Menu** functions:

- [Input Format](#)
- [Adjust On](#)
- [Type](#)
- [Colorspace](#)
- [Auto Acquire](#)
- [Sizing Adjust](#)
- [Contrast](#)
- [Brightness](#)
- [Color Balance](#)
- [Processing](#)
- [About Input Configuration Files](#)
- [Save Config](#)
- [Reset Config](#)
- [Recall Config](#)
- [Delete Config](#)

Input Format




From the **Input Menu**, select the top **Input Format** line to view the “auto-acquired” format for the selected input, or to change the format. The format is shown in the following form:

Hact x Vact @ Vr Hz
 1024x768@59.94

Please note the following important points:

- If you select an input and it does not have a valid signal, “**Invalid Signal**” appears.
- If an input was previously valid and its signal is lost, the “**Invalid Signal**” message appears.
- When **Auto Acquire** is **ON** (in the **User Preferences Menu**), the input video format for **non-digital sources** will be detected in the following search order:
 - ~ The saved file as defined in the **File Association Menu**
 - ~ The library of saved configurations for the selected input
 - ~ A best guess (to the closest video format in the library)

For **digital sources**, when **Auto Acquire** is **ON**, the search order is:

- ~ The saved configuration file as defined in the **File Association Menu**
- ~ Your library of saved files
- ~ A direct measurement of the signal
- If the video format is a “best guess” as determined by the “auto acquire” mode, it is displayed (only in the **Status Menu**) within asterisks.
 *1024x768@60.11*
- If you select an input that has been saved (using the **Save Config** function), the video format is displayed (only in the **Status Menu**) within brackets.
 [1024x768@59.94] This example is a saved “exact match” from the format table (or library).
 [*1024x768@59.90*] This example is a saved “best guess.”
- When **Auto Acquire** is **OFF**, the system attempts to lock to the signal using the configuration defined in the **File Association Menu** for each input channel. If the input signal is too different from the saved configuration to be usable, the display indicates “**Invalid Signal**.”

4. Operation

Setup Menu

Adjust On

In the **Input Menu**, the **Adjust On** field indicates whether any changes you make using the **Input Menu** will be applied to the Preview or Program source.

For example, if you select Preview, as shown in the illustration below, and change the Background, Color Balance, or other parameters using the **Input Menu**, you can view those changes on the Preview source — while the Program source remains unchanged.

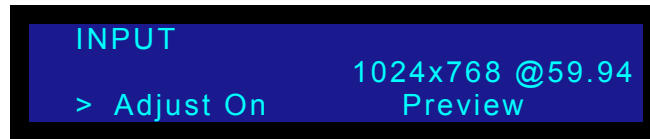


Figure 4-10. Adjust On Field

If both paths are using the same input source, only the selected path is modified.

When **LOGO** is selected, only the **Adjust On** and **Auto Acquire** input menu functions are available for adjustment.

Type

In the **Input Menu**, the **Type** field shows the currently selected input type, and enables you to change the type if required. The available types depend on the selected input:

- For inputs 1 - 4: **CVBS**, **Y/C**, **YPBPR**, **RGB/HD-YUV**
- For inputs 5 - 8 (when Digital): **DVI**
- For inputs 5 - 8 (when Analog): **CVBS**, **Y/C**, **YPBPR**, **RGB/HD-YUV**
- For the **SDI** input: **[SDI]**

Note

The SDI input always shows its type in brackets (e.g., **[SDI]**), given that this input type cannot be changed.

Colorspace

From the **Input Menu**, select **Colorspace** to change the color space for the selected input on Program. Values depend on the selected input. Please note:

- The default selection for **YP_bP_r** or **YUV** is **SMPTE**.
- The **Colorspace Menu** allows selection between these two values when the input is analog (excluding CVBS, Y/C) or DVI.
- When either the CVBS or Y/C input is selected, only **[SMPTE]** is shown.

- When the following formats are detected as either SD-SDI, HD-SDI, or 3G-SDI, only **[SMPTE]** is shown.

~ NTSC (480i)	~ 1920x1080p @30
~ PAL (576i)	~ 1920x1080sF@23.98
~ 1280x720p @50	~ 1920x1080sF@24
~ 1280x720p @59.94	~ 1920x1080i @50
~ 1280x720p @60	~ 1920x1080i @59.94
~ 1920x1080p @23.98	~ 1920x1080i @60
~ 1920x1080p @24	~ 1920x1080p @50
~ 1920x1080p @25	~ 1920x1080p @59.94
~ 1920x1080p @29.97	~ 1920x1080p @60
~ 2048x1080p @23.98	~ 2048x1080p @24
~ 2048x1080p @25	~ 2048x1080p @29.97
~ 2048x1080p @30	~ 2048x1080p @47.95
~ 2048x1080p @48	~ 2048x1080p @50
~ 2048x1080p @59.94	~ 2048x1080p @60

Auto Acquire

The **Auto Acquire** field is only adjustable between **ON** and **OFF** when **Auto Acquire** is set to **INPUT** in the **User Preference Menu** (refer to the [“User Preference Menu”](#) section on page 58).

When **Auto Acquire** is **ON**, and an input has a saved configuration file, the system attempts to use the saved file. If the input timing matches the timing in the saved configuration file, the saved file is used.

The system always performs a full sync (timing) acquisition on the selected input signal under the following conditions:

- When an input *without* a saved configuration file is selected
- When the input type is changed
- When the input signal's sync rate is changed
- When an input *with* a saved configuration file is selected, but the input timing is different from the saved configuration

When **Auto Acquire** is **ON**, and the input source is **non-digital**, the system uses the following library search order:

- Saved configuration files defined in the **File Association Menu** for each input channel
- The user's library of saved files
- A best guess

When **Auto Acquire** is **ON**, and the input source is **digital**, the system uses the following search order:

- Saved configuration files defined in the **File Association Menu** for each input channel
- The user's library of saved files

4. Operation

Setup Menu

- Direct measurement of the signal

If the input signal's timing is too different from the saved configuration, a good lock may not be possible. In this situation, the “**Invalid Signal**” message is displayed, and the video output will be black. You will also see “**Invalid Signal**” if the configuration file for an input has been deleted.

When **Auto Acquire** is **OFF**, dial in your timing parameters manually.

Please note the following important points:

- It is recommended that you leave the **Auto Acquire** mode **ON**. Then, if the timing changes on any input (whether or not you have a saved config file), you will always get an output image. On the other hand, if the mode is **OFF** and the input timing changes, the output will be black.
- When the **Auto Acquire** mode is **ON**, the PDS automatically detects and acquires the input video type and resolution (in most cases), and limits menu selections to those applicable to the detected video type.
- If you are an advanced user and you know the exact timing parameters for your input(s), you can turn the **Auto Acquire** mode **OFF**, and dial in your timing parameters manually.

Tip

If you have already saved configuration files for your inputs, it is recommended that you turn the **Auto Acquire** mode **OFF**. This provides the fastest transition times. When the mode is **ON**, transition times will be greater, due to the time required to analyze the input timing for each source.

Aspect Ratio

From the **Input Menu**, select **Aspect Ratio** to display the **Aspect Ratio Menu**, which allows you to set a pre-defined or custom ratio for the input.



Figure 4-11. Aspect Ratio Menu (sample)

The following functions are available:

- **Aspect Ratio** — This function allow you to adjust the image to one of the following values: **1:1**, **3:2**, **4:3**, **5:4**, **16:9**, **Custom**.
- **Ratio** — If **Custom** is selected, the **Ratio** line appears:
 - ~ **Adjustment range:** 0.750 to 3.000. The default value depends on the last **Aspect Ratio** selected before **Custom** was chosen.
 - ~ Note that the PDS displays the input video aspect ratio according to the input format detected. For example:
 - ▲ Computer video at 1280x1024@60Hz defaults to 5:4 aspect ratio.
 - ▲ NTSC video defaults to 4:3, HDTV 1080i video defaults to 16:9.

Sizing Adjust

From the **Input Menu**, select **Sizing Adjust** to display the **Sizing Adjust Menu**, which allows for exact positioning of the input's active area.

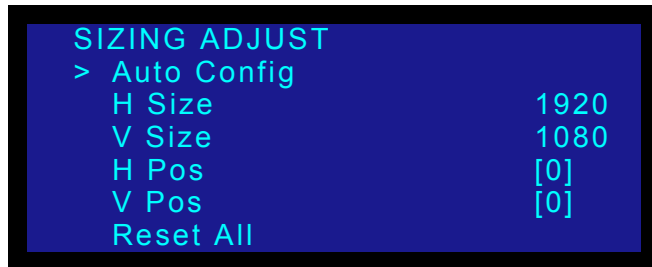


Figure 4-12. Sizing Adjust Menu (sample)

The following functions are available:

- **Size and Position** — These functions allow you to size the image, and then position it within the selected aspect ratio. The full-screen nature of the final output will be maintained.
 - ~ Select **H Size** to size both the left and right edges simultaneously, removing unwanted left/right input edge pixels from the output “window”. Values are in pixels. The output “window” is maintained in both size and aspect ratio.
 - ~ Select **V Size** to size both the top and bottom edges simultaneously, removing unwanted top/bottom input edge pixels from the output “window”. Values are in lines. The output “window” is maintained in both size and aspect ratio.

Note

For both **H Size** and **V Size**, the function always cuts *into* the visible image, equally on both sides, and never exposes video outside the source’s active area. As you size, the PDS scales the input up to fit the selected aspect ratio.

Note

The maximum allowable H/V size is up to 33% of the input’s corresponding active area. For example, for a 1280x1024 input, the maximum **H Size** is 422 and the maximum **V Size** is 336.

- ~ Select **H Pos** to pan a “sized” image left and right — within the selected aspect ratio. Values are in pixels. The value reads **[0]** if the image has not been sized horizontally.
- ~ Select **V Pos** to pan a “sized” image up and down — within the selected aspect ratio. Values are in lines. The value reads **[0]** if the image has not been sized vertically.

Note

If both **H Size** and **H Position** are greater than 0, and **H Size** is adjusted so that it approaches 0, at a calculated limit, **H Position** automatically adjusts itself to approach 0. This same rule holds true for **V Size** and **V Position**.

4. Operation

Setup Menu

Timing Adjust

From the **Input Menu**, select **Timing Adjust** to display the **Timing Adjust Menu**, which allows for adjustments to input sampling, sampling phase, pixel counts, and line counts.

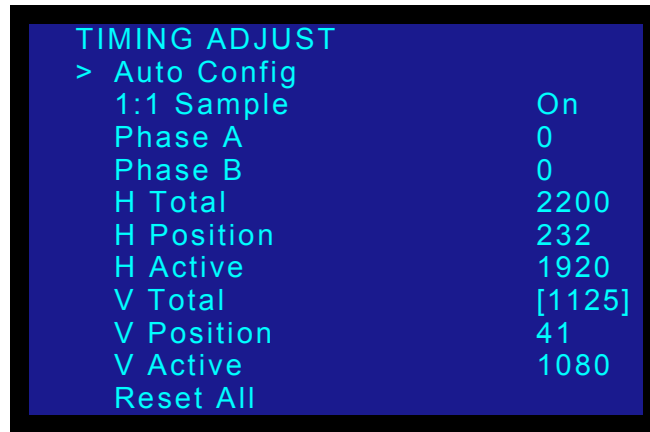


Figure 4-13. Timing Adjust Menu (sample)

Note

Timing Adjust Menu settings apply to *analog input sources* only, *except* for NTSC and PAL sources. For all digital sources and analog NTSC or PAL sources, these fields are informational only and will be bracketed.

The following functions are available:

- **Sampling** — Select this function to change the sampling for the selected input. Available values are: **Off** and **On** (default). Please note:
 - ~ When **1:1 Sample** is **On**, the system provides pixel-for-pixel sampling, and generally better image quality.
 - ~ When **1:1 Sample** is **Off**, the system performs multiple samples for every pixel, with a resulting “softer” image.
 - ~ **1:1 Sample** can only be changed for RGB and YP_bP_r analog inputs, except analog NTSC or PAL formats.
 - ~ All other input types have defined sample clocks that are inherently **1:1**. If the input is set to one of the other types, the value is **[On]**.
- **Phase A, Phase B** — These two selections are advanced features which enable you to adjust the sample phase of the system’s two scalers. Typically, they do not need to be adjusted. Refer to the “[Adjusting Sample Phase](#)” section on page 43 for instructions.

The six “**Total/Position/Active**” values are initially filled in by the **Auto Config** command, or set to their default values. You can adjust values for Analog RGB or YP_bP_r sources only. Digital and decoded sources show values in brackets.

Please note:

- When **1:1 Sample** is set to **On**, values are the true timing measurements for the analog RGB or YP_bP_r inputs.
- When **1:1 Sample** is set to **Off**, values represent the oversampling factor being used.

For all **Horizontal** “active area” fields, all units are measured in pixels:

- **H Total** — adjusts the total pixel count per line. This value cannot be adjusted if the input type is **DVI / SDI**.

For all **Vertical** “active area” fields, all unit are measured in lines.

- **V Total** — indicates the total line count per frame. This value is measured, and can never be adjusted. Its value will always be shown in brackets.

Adjusting Sample Phase

The PDS has two A-to-D converters, which are referred to as **Phase A** and **Phase B** in the **Timing Adjust Menu**. The sample phase value of each scaler can be changed by the **Auto Config** menu option, or set to the default value of **0** (zero). If required, advanced users can fine-tune the image by adjusting the sample clock phase of each scaler directly — *but only for inputs whose “type” is analog*.

- **Adjustment range:** -16 to 15
- **Default:** 0

Note

Auto Config will only show in the **Sizing Adjust** or **Timing Adjust** menu when the input source is analog, except for analog NTSC or PAL formats.

- Use the following steps to adjust sample clock phase of each scaler, for inputs whose “type” is analog.
 1. From the **Input Menu**, navigate to the **Input Sizing Menu**, and scroll to the **Phase A** or **Phase B** line.
 2. In the **Inputs Section**, select an input whose “type” is analog.
 3. **TAKE** the input to Program. The button lights solid.
 4. Pend the *same input* for the next transition. In this mode, only one button will now be lit solid, and no buttons will be blinking.
 5. On the **Input Sizing Menu**, note that one of the two **Phase** lines will be bracketed, and the other will be unbracketed. When you press **TAKE**, the brackets will switch positions. The un-bracketed line is the active scaler.



Figure 4-14. Timing Adjust Menu, phase indication of active scaler

6. On the selected input, put up a **Burst** pattern. For example, if the source is a computer, use a program such as **DisplayMate®** to generate the pattern.
7. Scroll to the unbracketed **Phase** line, and press **SEL**.
8. Use the **Adjust** knob to tweak the burst pattern for the maximum visual clarity and a minimum amount of visual noise, then press **SEL** to accept the new value.
9. Press **TAKE** to activate the other scaler.
10. Repeat steps 7 and 8 for the other scaler.

4. Operation

Setup Menu

11. Press **ESC** to return to the **Input Menu**.
12. Scroll to the **Save Config** line, and press **SEL** to save the configuration for the selected input.
13. Repeat the entire adjustment procedure from step 1, for all remaining inputs whose “type” is analog — and be sure to save the input configuration each time you complete an adjustment for a selected input.

Contrast

From the **Input Menu**, select **Contrast** to change the contrast of the selected input.

- **Adjustment range:** 75.0% to 125.0%
- **Default:** 100%

Brightness

From the **Input Menu**, select **Brightness** to change the brightness of the selected input.

- **Adjustment range:** 75.0% to 125.0%
- **Default:** 100%

Color Balance

From the **Input Menu**, select **Color Balance** to display one of two available **Color Balance Menus**. The menu that appears depends on the current input's colorspace. See “Colorspace” on page 38. Each menu allows you to adjust the input's color balance parameters.

- [RGB Color Balance Menu](#)
- [SMPTE Color Balance Menu](#)

RGB Color Balance Menu

If the current input's colorspace is set to **RGB**, the **Color Balance Menu** appears:



Figure 4-15. Color Balance Menu (RGB sample)

Each of the individual contrast and brightness settings operates in conjunction with the “global” contrast and brightness settings in the **Input Menu**.

- **Adjustment range** (all values): -25.0% to +25.0%
- **Default** (all values): 0.0%
- Select **Reset All** to set all values back to their default settings.

SMPTE Color Balance Menu

If the current input's colorspace is set to **SMPTE**, the **Color Balance Menu** appears:



Figure 4-16. Color Balance Menu (SMPTE sample)

Please note:

- **Saturation** is measured in percentage.
 - ~ **Adjustment range** (Composite, S-Video, YP_bP_r, SDI): 0% to 150% (100% nominal)
- **Hue** is measured in degrees, and is [N/A] for YP_bP_r and SDI inputs.
 - ~ **Adjustment range**: -90 to +90
- Select **Reset All** to set all values back to their default settings.

Processing

From the **Input Menu**, select **Processing** to display the **Processing Menu**:



Figure 4-17. Processing Menu (sample)

The following functions are available:

- **Sync Selection** — This function applies only to **Analog RGB** inputs. The PDS automatically selects the syncs for digital sources, composite, S-video, and YP_bP_r inputs. For these inputs, the value field indicates **[N/A]**.
 The sync choices are **Auto**, **H/V** (horizontal/vertical sync), **CSync** (composite sync) and **SOG** (sync on green).
 - ~ In **Auto** mode, the system finds sync in any of the three possible sources.
 - If one of the sources is chosen, the system uses only that input as a sync source.
 - If the system does not find sync at that source, it acts as if it is in **Auto** mode.
 - ~ The default selection for Analog RGB inputs is **Auto**.
- **Pulldown Compensation** — This function only applies to standard video (component, s-video, composite and SD/HD SDI) inputs. The mode, which detects the 3:2 film pulldown sequence, should be turned **ON** to properly process video derived from film source material.

4. Operation

Setup Menu

- ~ **Adjustment range:** OFF, ON
- ~ **Default:** OFF
- **Sync Slice** — This function selects the sync comparator threshold for RGsB (RGB with Sync on Green) or YP_bP_r analog component video sources. When PDS detects Macrovision copy protection on the incoming YP_bP_r NTSC/PAL video, the **Sync Slice** value is automatically repositioned to 60mV to account for the reduced amplitude sync pulse.
 - ~ **Adjustment range:** 8mV to 256mV, adjustable in steps of 8mV
 - ~ **Default:** 128mV

About Input Configuration Files

The PDS supports saving up to 64 input configuration files in non-volatile memory, each of which is available to the nine physical inputs (**1** through **8** and **SDI**).

Input configuration files contain settings that govern everything from pixel resolution to aspect ratio and color balance — any setting you can view or change using the **Input Menu**. By default, an input's configuration file number is the same as the number of the input — Input 1 is assigned to configuration file number 1, and so on. You can set, delete, save, or recall the configuration file for an input. You can associate any number of saved files to any number of inputs.

When you change the configuration file for an input, the timing in the new configuration file must match the input's timing. For example, if the input uses NTSC (720 x 480) timing, that input cannot use a configuration file that uses WXGA (1280 X 768).

When you delete user-defined configuration files, those files are no longer available for use by any input.

For more information about using input configuration files, refer to the following sections:

- [Save Config](#)
- [Reset Config](#)
- [Recall Config](#)
- [Delete Config](#)

Save Config

After you use the **Input Menu** to change one or more input settings, you can save the changes to non-volatile memory by selecting **Save Config**. You can save the changes to the current configuration file for the selected input, or to a different file.

■ To save changes to an input's configuration, use the following procedure:

1. Select **Save Config** from the **Input Menu**. The menu shown in the following illustration appears:



Figure 4-18. Save Config Menu (sample)

2. Select a value for **File Number**, or keep the default file number.

If you save to another configuration file, the **File Association Menu** is updated to associate the new file to the current input. For more information about the **File Association Menu**, refer to the [“File Association”](#) section on page 70.

Important

You can assign a configuration file to more than one input. If you do so, you must exercise caution when deleting the file, because it will be deleted for all inputs.

3. Scroll down to **Save File** and press **SEL**.

A confirmation message is briefly displayed, after which the system returns to the **Input Menu**.

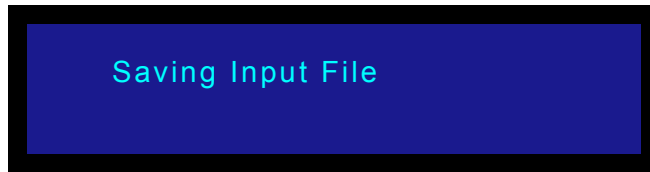


Figure 4-19. Saving Input File message (sample)

If you change a setting in the **Input Menu** and press **ESC** *without* saving changes, your change will not be restored the next time you select the input or power up the system. The system displays the following prompt:

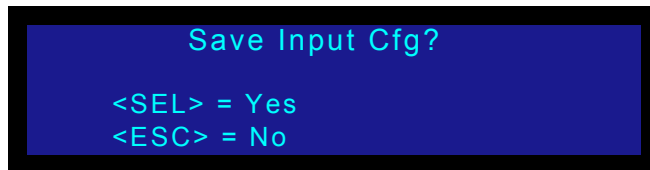


Figure 4-20. Save Input Configuration Prompt (sample)

- Press **SEL** to save changes.
- Press **ESC** to exit without saving.

Reset Config

From the **Input Menu**, select **Reset Config** to remove all user-entered configuration settings from the current input on Program, and restore the input's parameters from the system's internal library values. When you select **Reset Config**, you will be prompted to reset (**SEL**) or continue without resetting (**ESC**).

Note that if the current format was derived as a best guess, those “guess” values are restored when you press **SEL**.

Note

Resetting configuration parameters does not change the configuration file associated with the input — it simply assigns the restored parameters to the existing configuration file. The file number shown in the **File Association Menu** does not change.

4. Operation

Setup Menu

Recall Config

From the **Input Menu**, select **Recall Config** to restore a configuration file that was previously associated with the current input. Using the **Recall Config Menu** shown in the following illustration, you can change from the current configuration file for the input to any saved configuration file:



Figure 4-21. Recall Config Menu (sample)

A number in brackets indicates the only file that is available for recall. If no files are available, a message will be displayed to indicate that there are no saved files.

After you select a file number and choose **Recall File**, press **SEL** to initiate the recall or **ESC** to continue using the current configuration.

When you press **SEL**, if the input timing matches the timing in the recalled input configuration file, the input uses the recalled configuration file immediately. The **File Association Menu** is also updated to reflect your change.

If the input and configuration file timings do not match and **Auto Acquire** is **ON**, an “auto acquire” will be performed. For more information about this function, refer to the [“Using Auto Acquire”](#) section on page 77.

Delete Config

From the **Input Menu**, select **Delete Config** to delete any *saved* configuration file. A deleted configuration file cannot be recalled by any input.

After you delete a configuration file, what happens the next time you select an input that uses the file depends on whether **Auto Acquire** is **ON** (in the **User Preference Menu**). When **Auto Acquire** is **ON** and an input does *not* have a saved configuration file, the PDS does a full sync (timing) acquisition on the selected input signal.

When **Auto Acquire** is **OFF**, the system will use the configuration file defined in the **File Association Menu**, to the greatest extent possible. If the input does not have a saved configuration file, the PDS displays the “**Invalid Signal**” message and the video output is black.

For more information about **Auto Acquire**, refer to the [“Using Auto Acquire”](#) section on page 77 and the [“Auto Acquire”](#) section on page 77.

- Use the following procedure to delete a configuration file:

1. From the **Input Menu**, select **Delete Config**. The menu shown in the following illustration is displayed:



Figure 4-22. Delete Config Menu (sample)

4. Operation

Setup Menu

The value of **File Number** is set to the current configuration file for the input. You can either delete this file, select another saved configuration file and delete it, or press **ESC** to continue without deleting.

2. Select a file to delete. Then, scroll down to **Delete File** and press **SEL**.

A confirmation message is briefly displayed, after which the system returns to the **Input Menu**:



Figure 4-23. Deleting Input Configuration Message (sample)

Important

You can assign a configuration file to more than one input. If you do so, you must exercise caution when deleting the file, because it will be deleted for all inputs.

4. Operation

Setup Menu

Output Menu

From the **Setup Menu**, select **Output** to display the **Output Menu**.



Figure 4-24. Output Menu (sample)

Following are descriptions of each **Output Menu** function:

- [Main](#)
- [Preview Menu \(PDS 902 Only\)](#)

Main

Following are descriptions of each **Output Menu** function:

- [Output Format](#)
- [Test Pattern](#)
- [Output Adjust](#)
- [Sync Settings](#)
- [Gamma](#)
- [Save Config](#)

Output Format

From the **Output Menu**, select the top **Output Format** line to view or change the current output format. This line indicates the format in the following form:

Hact x Vact @ Vr Hz

The output format for the PDS can be set to any of the progressive outputs.

Note

The output format is not updated until **SEL** is pressed.

Test Pattern

From the **Output Menu**, select **Test Pattern** to display the **Test Patterns Menu**:



Figure 4-25. Test Patterns Menu (sample)

The following functions are available on the menu:

- **Mode** — This function enables or disables the test pattern generator.

- **Type** — This function enables you to select a test pattern. Available choices are:

~ H Ramp	~ Gray Steps 1
~ V Ramp	~ Gray Steps 2
~ 100% Col Bars	~ White
~ 16 x 16 Grid	~ Black
~ 32 x 32 Grid	~ Red
~ Burst	~ Green
~ 75% Col bars	~ Blue
~ 50% Gray	
- **Raster Box** — This function enables or disables the raster box on the output.
 - ~ When turned **ON**, the system displays a one-pixel border around the active output area. Note that the raster box includes gaps that enable you to precisely align the input video to fill the output raster.
 - ~ When turned **OFF**, the output is clean, without the border.

Output Adjust

From the **Output Menu**, select **Output Adjust** to scale the entire output to fit the venue's physical setup (e.g., curtains, drapes, and off-axis projection).

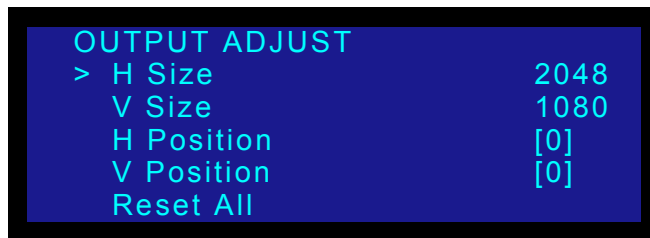


Figure 4-26. Output Adjust Menu (sample)

This adjustment must be performed while you view the projector's output on your screen. When you enter this menu, a solid white raster box appears at the size and position specified within the menu. The selected input is temporarily turned off, and the output video is black. As you adjust H and V size and position, the raster box adjusts accordingly. When you exit the menu, the raster box is cleared, and the selected input will be scaled to fit within this exact size and position.

The following functions are available:

- **H Size** — This function adjusts the horizontal size in pixels.
- **V Size** — This function adjusts the vertical size in lines.
- **H Position** — This function is bracketed when H Size is at its maximum setting as governed by the currently selected output format. When you adjust H Size below its maximum value, this field becomes active, enabling you to adjust horizontal position in pixels. Positioning is limited to the overall maximum H Size "space", and the image cannot be moved off screen.
- **V Position** — This function is bracketed when V Size is at its maximum setting as governed by the currently selected output format. When you adjust V Size below its maximum value, this field becomes active, enabling you to adjust vertical

4. Operation

Setup Menu

position in lines. Positioning is limited to the overall maximum V Size “space”, and the image cannot be moved off screen.

- **Reset All**— This function resets H and V Size to the currently selected output format resolution, and H and V Position to [0].

Sync Settings

From the **Output Menu**, select **Sync Setup** to display the **Output Sync Select Menu**:

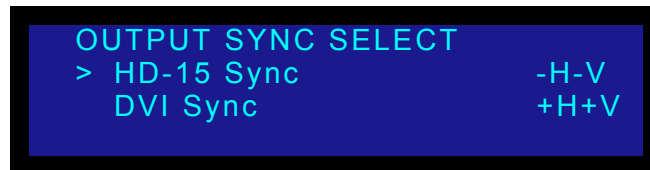


Figure 4-27. Output Sync Select Menu (sample)

The **Output Sync Select Menu** enables you to independently adjust the output sync polarity of the Analog and DVI outputs. The following functions are available:

- **HD-15 Sync** — This field sets the analog output sync polarity.
 - ~ **Values:** CSync, -H-V, -H+V, +H-V, +H+V
 - ~ **Default:** -H-V
- **DVI Sync** — This field sets the DVI output sync polarity.
 - ~ **Values:** -H-V, -H+V, +H-V, +H+V
 - ~ **Default:** +H+V

Gamma

From the **Output Menu**, select **Gamma** to specify the output Gamma.

- **Adjustment range:** 1.0 to 3.0, in steps of 0.1
- **Default:** 1.0

Save Config

From the **Output Menu**, select **Save Config** to save the current output configuration. A message is briefly shown, after which the system returns to the **Output Menu**.



Figure 4-28. Saving Output Configuration Message

Please note the following important points regarding the output configuration file:

- When you perform the **Save Config** function, all configuration parameters from the **Output Menu** are saved in non-volatile memory. If you *do not* perform the function, output data will not be restored upon the next system power up.

- If you make a change in the **Output Menu**, and attempt to exit the menu (by pressing **ESC**) *without* saving changes, the system displays the following prompt:

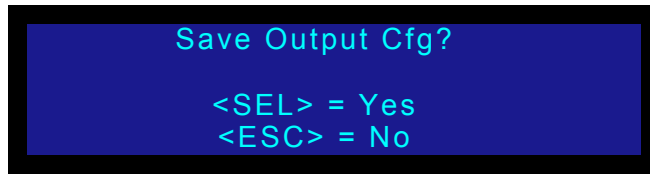


Figure 4-29. Save Output Configuration Prompt

- ~ Select **Yes** (**SEL**) to save changes.
- ~ Select **No** (**ESC**) to continue operation without saving the changes.

Preview Menu (PDS 902 Only)

From the **Output Menu**, select **Preview** to configure the PDS's Preview output. The Preview output allows you to view, resize, and otherwise adjust the input source before taking it to Program. You can preview each of the input sources (**1** through **8**, **SDI** and **LOGO**). The input source is scaled to the selectable progressive resolution and output on the DVI Digital and HD-15 analog VGA connectors.

The following illustration shows the **Preview Menu**:

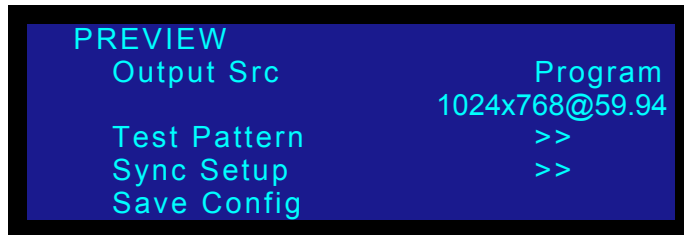


Figure 4-30. Preview Menu (sample)

Note

After you view and adjust a source on the preview monitor, and press **TAKE** to bring it to Program, the preview and Program images exchange positions, or “flip-flop,” as described in the “[Flip-flop Mode](#)” section on page 76. There is a slight delay in the image exchange between the preview output and the Program output. The preview image appears slightly after the Program image.

The following sections provide detailed information about **Preview Menu** functions:

- [Output Src](#)
- [Output Format](#)
- [Test Pattern](#)
- [Sync Settings](#)
- [Save Config](#)

Output Src

In the **Preview Menu**, choose **Output Src** to select the source to be displayed on the preview monitor. The source can be either **Preview** or **Program**.

4. Operation

Setup Menu

- Choose **Preview** to display on the preview monitor the “pending” source.
- Choose **Program** to display on the preview monitor the same source that is on Program.

Output Format

In the **Preview Menu**, the **[output_format]** field displays the format of the output, in the following form:

Hact x Vact @ Vr Hz

▲ 1024x768@59.94

The output format for the PDS can be set to any of the progressive outputs.

Note

The output format is not updated until you press **SEL**.

To make pixel-for-pixel adjustments, set the Preview and Program resolutions to be the same, as shown in the following illustration:

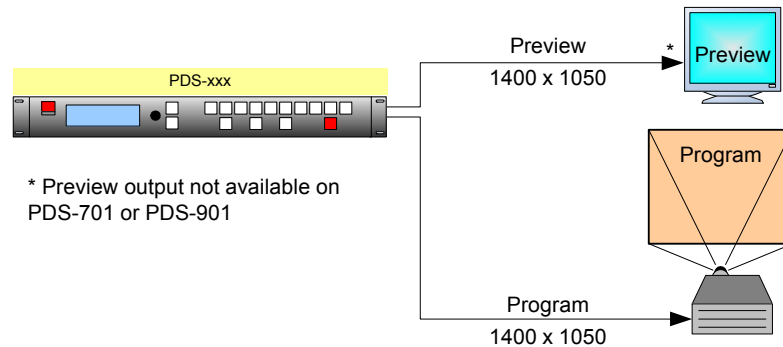


Figure 4-31. Matching Preview and Program Resolutions

If you do not need to make pixel-perfect adjustments to the Preview image, the resolutions of the Preview and Program outputs do not need to be the same, as shown in the following illustration:

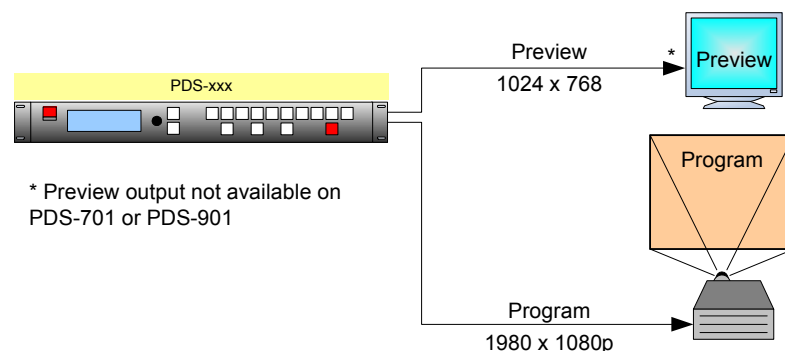


Figure 4-32. Different Preview and Program Resolutions

Test Pattern

In the **Preview Menu**, the **Test Patterns** submenu provides the following options:

4. Operation

Setup Menu

- **Mode** enables or disables the test pattern generator. The values are **ON** and **OFF**.
- **Type** provides a list of the available test patterns. The choices are:
 - ~ H Ramp
 - ~ V Ramp
 - ~ 100% Col Bars
 - ~ 16 x 16 Grid
 - ~ 32 x 32 Grid
 - ~ Burst
 - ~ 75% Col bars
 - ~ 50% Gray
 - ~ Gray Steps 1
 - ~ Gray Steps 2
 - ~ White
 - ~ Black
 - ~ Red
 - ~ Green
 - ~ Blue
- **Raster Box** — This function enables or disables the raster box on the Preview output.
 - ~ When turned **ON**, the system displays a one-pixel border around the active output area. Note that the raster box includes gaps that enable you to precisely align the input video to fill the output raster.
 - ~ When turned **OFF**, the output is clean, without the border.

Sync Settings

From the **Preview Menu**, select **Sync Setup** to independently adjust the output sync polarity of the analog and DVI outputs of the Preview. The **Preview Sync Menu** looks like the one in the following illustration.



Figure 4-33. Preview Sync Setup Menu (sample)

The selectable values are:

- **Analog Sync** — This field sets the analog output sync polarity.
 - ~ **Values:** -H-V, -H+V, +H-V, +H+V
 - ~ **Default:** -H-V
- **DVI Sync** — This field sets the DVI output sync polarity.
 - ~ **Values:** -H-V, -H+V, +H-V, +H+V
 - ~ **Default:** +H+V

Save Config

After you make changes using the **Preview Menu**, use the **Save** function to store them in non-volatile memory. Your configuration parameters will then persist across power cycles.

If you do not choose **Save** after making changes, you are prompted to do so with a

4. Operation

Setup Menu

message like the one shown in the following illustration.

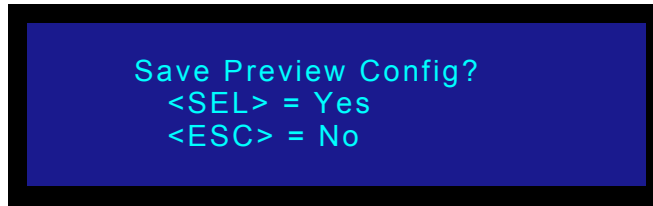


Figure 4-34. Save Preview Configuration Prompt (sample)

- Press **SEL** to save your changes.
- Press **ESC** to continue without saving your changes.

If you do not save your changes, your settings will not be restored the next time the system is powered up or the input is selected.

Logo Menu

A logo is a full-screen video source that, when you transition to it, appears *on top* of all other sources. From the **Setup Menu**, select **Logo** to display the **Logo Menu**, which enables you select, save and delete up to three full-screen logos.

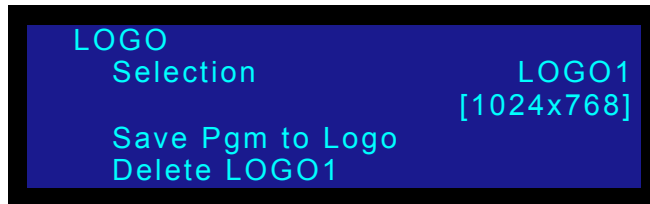


Figure 4-35. Logo Menu (sample)

Following are descriptions of each **Logo Menu** function:

- **Selection** — This field enables you to select the desired Logo.
 - ~ **Selections:** LOGO1, LOGO2 and LOGO3
 - ~ **Default:** LOGO1
- **Status [resolution]** — This field shows the current resolution of the saved Logo, if the output resolution matches the resolution at which the Logo was captured. The field shows [EMPTY] if nothing has been saved at the selected location, or [INVALID [resolution]] — e.g. [INVALID 1600x1200] — if the Logo resolution does not match the current output resolution.

Because the field is not user selectable, all data is shown between brackets.
- **Save Pgm to Logo** — Choose this field and press **SEL** to save the current input (on Program) to the selected Logo memory register. The **Save Pgm to Logo** field does not appear if the Logo is pending or on Program.
- **Delete Logo** — Choose this field and press **SEL** to delete the Logo from the selected memory register. The **Delete Logo** field does not appear if the Logo is pending or on Program.

Refer to the [“Using the Logo”](#) section on page 78 for more information on using Logos.

4. Operation

Setup Menu

User Preference Menu

From the **Setup Menu**, select **User Preference** to display the **User Preference Menu**:

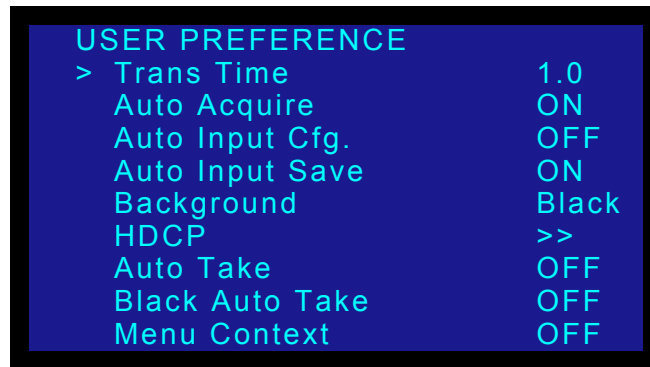


Figure 4-36. User Preference Menu (sample)

The following functions are available:

- [Trans Time](#)
- [Auto Acquire](#)
- [Auto Input Cfg](#)
- [Auto Input Save](#)
- [Background](#)
- [HDCP](#)
- [Auto Take](#)
- [Black Auto Take](#)
- [Menu Context](#)

Trans Time

From the **Setup Menu**, select **Trans Time** to change the current transition rate that is used when you mix between inputs and when you transition to/from black.

Following are two illustrations of the transition interval:

- **Standard Mix** — When transitioning between inputs and the logo, or transitioning to/from black, the PDS functions as a seamless switcher. The transition interval is defined as the total time required to mix to the new source, or fade to/from black.

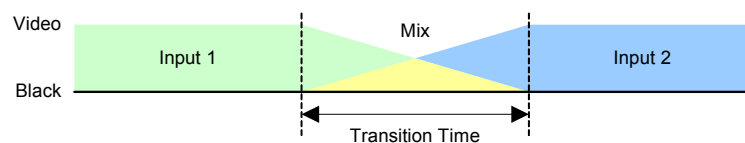


Figure 4-37. Transition interval diagram — mix between sources

Note that transition times are specified for switching applications with **Auto Acquire** turned **OFF**. When **Auto Acquire** is **ON**, the transition time is greater, due to the additional time required to analyze the input video timing.

Transition values are listed below:

- **Adjustment range:** 0.0 - 12.0 seconds (0.0 is a cut)
- **Default:** 1.0 seconds

Auto Acquire

The **Auto Acquire** function enables or disables the **Input > “Auto Acquire”** mode, which acquires a signal for the input. Values for Auto Acquire are: **ALLOFF**, **ALL ON** (default), and **Input**.

When **Auto Acquire** is **ALL ON**, and an input has a saved configuration file, the system attempts to use the saved file. If the input timing matches the timing in the saved configuration file, the saved file is used.

The system always performs a full sync (timing) acquisition on the selected input signal under the following conditions:

- When an input *without* a saved configuration file is selected
- When the input type is changed
- When the input signal's sync rate is changed
- When an input *with* a saved configuration file is selected, but the input timing is different from the saved configuration

When **Auto Acquire** is **ALL ON**, and the input source is **non-digital**, the system uses the following library search order:

- Saved configuration files defined in the **File Association Menu** for each input channel
- The user's library of saved files
- A best guess

When **Auto Acquire** is **ALL ON**, and the input source is **digital**, the system uses the following search order:

- Saved configuration files defined in the **File Association Menu** for each input channel
- The user's library of saved files
- Direct measurement of the signal

If the input signal's timing is too different from the saved configuration, a good lock may not be possible. In this situation, the “**Invalid Signal**” message is displayed, and the video output will be black. You will also see “**Invalid Signal**” if the configuration file for an input has been deleted.

When Auto Acquire is INPUT, Auto Acquire can be adjusted to be ON or OFF on an Input by Input basis within the Input setup menu.

Please note the following important points:

- It is recommended that you leave the **Auto Acquire** mode **ALL ON**. Then, if the timing changes on any input (whether or not you have a saved config file), you will always get an output image. On the other hand, if the mode is **ALLOFF** and the input timing changes, the output will be black.
- When the **Auto Acquire** mode is **ALL ON**, the PDS automatically detects and acquires the input video type and resolution (in most cases), and limits menu selections to those applicable to the detected video type.

4. Operation

Setup Menu

- If you are an advanced user and you know the exact timing parameters for your input(s), you can turn the **Auto Acquire** mode **ALLOFF**, and dial in your timing parameters manually.

Tip

If you have already saved configuration files for your inputs, it is recommended that you turn the **Auto Acquire** mode **ALLOFF**. This provides the fastest transition times. When the mode is **ALL ON**, transition times will be greater, due to the time required to analyze the input timing for each source.

Auto Input Cfg

The **Auto Input Cfg** function enables or disables the automatic input configuration mode. Values are: **ON** and **OFF** (default).

Note

This is the “automatic” version of the manual **Auto Input Cfg** mode, which is located in the **Input Sizing Menu**. Refer to the “[Sizing Adjust](#)” section on page 41 for details.

- When **ON**, the system automatically finds the first and last pixel on each edge of the selected input, and ensures (to the best possible extent) that the entire image is visible. In addition, the system automatically phases the input to determine the correct sampling phase.

These functions will only be performed under the following conditions:

- ~ When an input *without* a saved configuration file is selected.
 - ~ When the input signal changes sync rates.
 - ~ When an input *with* a saved configuration file is selected, but the input timing is different from the saved configuration.
- When **OFF**, the system uses the last known configuration for each input, to the greatest extent possible.

Auto Input Save

When the **Auto Input Save** mode is enabled, the system automatically saves the selected input after it has been acquired for the first time. If the **Auto Acquire** mode is **OFF**, the field has no effect. The default is **OFF**.


Background

From the **User Preference Menu**, select **Background** to change the system’s background color between “**Black**” and “**Gray**.” This is a global setting.

When set to **Gray**, you can clearly see the edges of an input, particularly when the input’s aspect ratio does not match the output’s aspect ratio. Note that the background selection persists between source changes.

HDCP

The **HDCP Submenu**, shown in the following illustration, lets you set HDCP capability for inputs. For an introduction to HDCP, see [“A Word About HDCP”](#) on page 4.

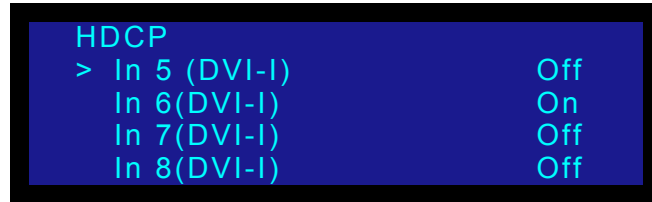

The HDCP setting is either **ON** or **OFF**. You can set this capability for the following inputs and outputs:

- **In 5 (DVI-I)** — The default setting is **OFF**.
- **In 6 (DVI-I)** — The default setting is **OFF**.
- **In 7 (DVI-I)** — The default setting is **OFF**.
- **In 8 (DVI-I)** — The default setting is **OFF**.

Note

In 7 and In 8 are not available for selection in PDS-701 units.

■ To turn HDCP capability on or off, use the following procedure:

1. On the **Setup Menu**, select **User Preference**.
2. On the **User Preference**, select **HDCP**. The **HDCP Submenu** appears.
3. Select an input or output and turn the **ADJUST** knob once. Then press **SEL**.

Auto Take

The **Auto Take** mode allows you to bring an input source to Program by simply pressing an input button (**1** through **8**, **SDI**, or **LOGO**), and without requiring a Take.

Regardless of your **Auto Acquire** settings, the input button you select blinks slow, to indicate that the system is performing an action such as an auto acquire, file association, or another action. When the system completes its tasks for the input, the button lights solid and the source goes to Program automatically.

- When **ON**, **Auto Take** overrides user preferences for **Black Auto Take**. The value for this menu item is bracketed.
- When **OFF**, the selected input button blinks slow. Press **TAKE** to perform the transition.

Black Auto Take

The **Black Auto Take** function controls the behavior of the **BLACK** button:

- When **ON**, the **BLACK** button transitions the Program output to/from black, as soon as the button is pushed.
- When **OFF**, the **BLACK** button blinks when pressed, to indicate “pending.” Press **TAKE** to perform a transition to/from black.

Refer to the [“Using Black”](#) section on page 81 for details.

4. Operation

Setup Menu

Menu Context

The **Menu Context** function determines the behavior of certain menus when an **Input** or **LOGO** button is pressed. The following conditions apply:

- When **ON**, regardless of the current menu, the **Input Menu** or **Logo Menu** will automatically be displayed when the associated button is pressed.
- When **OFF**, menu context does not change when an **Input** or **LOGO** button is pressed.

System Menu

From the **Setup Menu**, select **System** to display the **System Menu**, which enables you to adjust VFD brightness, input configurations, front panel lockout modes, Ethernet parameters and many other “system” related functions:



Figure 4-38. System Menu (sample)

The following sections describe each **System Menu** function:

- [VFD Brightness](#)
- [Ethernet](#)
- [Serial Setup](#)
- [Input EDID](#)
- [DVI Cable Equal](#)
- [Executive Mode](#)
- [File Association](#)
- [Temperature](#)
- [Diagnostics](#)
- [Save System State](#)

VFD Brightness

From the **System Menu**, select **VFD Brightness** to control the intensity of the front panel VFD (vacuum fluorescent display).

- **Adjustment range:** 1 - 8 (1 is the dimmest setting)
- **Default:** 5

Note

It is recommend that you use a low intensity setting to avoid “burn-in” of the display.

4. Operation

Setup Menu

Ethernet

From the **System Menu**, select **Ethernet** to display the **Ethernet Menu**:

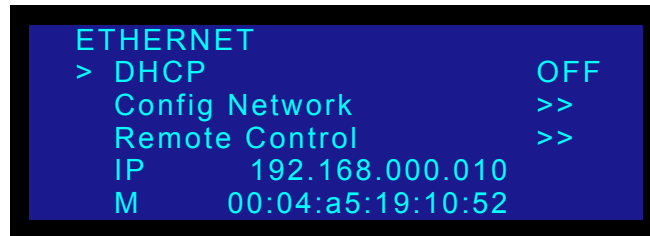


Figure 4-39. Ethernet Menu (sample)

The following Ethernet functions are available:

- **DHCP** — DHCP can be turned **OFF** or **ON**.
 - ~ When **OFF**, the **Config Network** field appears, which enables you to manually enter a static IP address, Subnet mask and Gateway.

Note

Always consult with your network administrator to obtain valid IP, subnet mask and gateway addresses.

- ~ When **ON**, the PDS queries the DHCP server for a valid IP address, and the **Config Network** field is hidden.
 - If the PDS finds a DHCP server and receives an IP address, the address is displayed.
 - If a server is not found, an IP address is not assigned. The address display in the menu will be 000.000.000.000.
- **Config Network** — select this function to display the **Config Network Menu**, which enables you to choose the specific Ethernet address you wish to change.



Figure 4-40. Config Network Menu (sample)

- ~ Select **Set Static IP** to display the **Static IP Menu**, which enables you to set a static IP address when a DHCP server is not available. The editing procedure is discussed below.

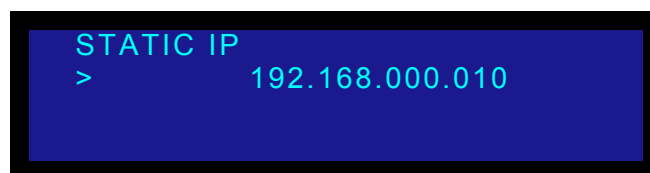


Figure 4-41. Static IP Menu (sample)

- ~ Select **Set Netmask** to display the **Netmask Menu**, which enables you to set a netmask. The editing procedure is discussed below.



Figure 4-42. Netmask Menu (sample)

- ~ Select **Set Gateway** to display the **Gateway Menu**, which enables you to set a gateway. The editing procedure is discussed below.



Figure 4-43. Gateway Menu (sample)

- Use the following steps to edit the IP address, Netmask or Gateway. Valid fields range from 000 to 255.
 - a. Press **SEL** to begin editing. This action highlights the first digit, and displays the carat “^.”
 - b. Use the **ADJUST** knob to move the carat left and right through the address.
 - c. When the desired digit is highlighted, press **SEL** to edit the value. The carat changes to the pound sign “#.”
 - d. Use the **ADJUST** knob to select the desired value (0 - 9).
 - e. Once the value is selected, press **SEL** to “accept” the new value. The pound sign “#” changes back to the carat “^.”
 - f. Repeat the process from step **b** for all additional digits that you wish to change.
 - g. When complete, press **ESC** to display the **Apply Changes Menu**.
 - Select **Yes (SEL)** to apply all changes.
 - Select **No (ESC)** to exit the procedure without saving changes.

In each case, system returns to the root menu.

When Ethernet setup is complete, you can communicate with the PDS via the Ethernet port.

- ~ In Appendix B, refer to the “[Remote Commands](#)” section on page 123 for details on communicating with the PDS via Telnet.
- ~ In Chapter 5, refer to the “[GUI Connection and Launch](#)” section on page 86 for details on running the web-based GUI.

4. Operation

Setup Menu

- **Remote Control** — This function sets up the PDS for remote control.



Figure 4-44. Remote Control Submenu (sample)

For complete details, see “[Appendix B](#)” on page 113.

- **IP** — The **IP** line is an information-only line that shows the current IP address in all modes (with DHCP on or off). If an IP address has not been established (no DHCP server found, or the network cable is not connected), the address reads “000.000.000.000.”

Note

The PDS’s default IP address is **192.168.0.10**

- **M** — The **M** line is an information-only line that shows the MAC (hardware) address of the unit’s Ethernet port.

Serial Setup

From the **System Menu**, select **Serial Setup** to display the **Serial Setup Menu**, which enables you to set system RS-232 parameters for the serial port.

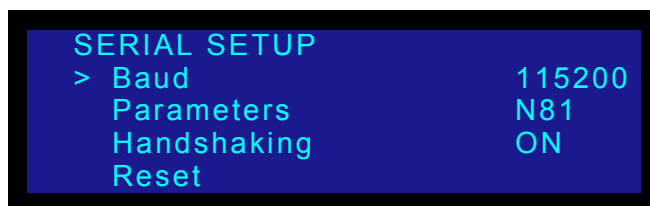


Figure 4-45. Serial Setup Menu (sample)

The following functions are available:

- **Baud** — Use this function to set the baud rate.
 - ~ **Adjustment range:** 9600, 38400, 57600 and 115200
 - ~ **Default:** 115200
- **Parameters** — This function is a combined setting of Parity, Data Bits and Stop bits (in this order).
 - ~ **Adjustment range:** N81, E71, O71, E72, O72
 - ~ **Default:** N81
- **Handshaking** — This is a status field for the hardware flow of the serial port.
 - ~ **Default:** OFF (the only valid value)

By default, RTS/CTS and DSR/DTR are ignored.
- **Reset** — Use this function to reset all serial values to their default settings.

Input EDID

From the **System Menu**, select **Input EDID** to display the **Input EDID Menu**, which enables you to update the preferred EDID (Extended Display Identification Data) resolution for the PDS.



Figure 4-46. Input EDID Menu (sample)

Important

This menu is designed for advanced users only. Do not reprogram EDID unless it is necessary.

EDID is a VESA standard data format that contains information about a display device and its capabilities, including the preferred (as well as the allowed) device resolutions.

The PDS's EDID file is stored in non-volatile memory. This file is read by a computer's DVI graphics card during boot-up, when its DVI output is connected to a DVI-I input connector on the PDS system. The PDS must be powered on first for the EDID information to be read.

The following functions are available:

- **Input** — selects the inputs that you wish to program: **ALL**, **1**, **2**, **3**, **4**, **5**, **6**, **7**, or **8**.
- **EDID Format** — displays the current EDID format, and enables you to select a new format to program into memory. Press **SEL** to program the preferred DVI resolution, as defined on the **EDID Format** line.

Note

The PDS can program the EDID EEPROM with the DVI cable connected.

When **SEL** is pressed, the following message is briefly displayed.

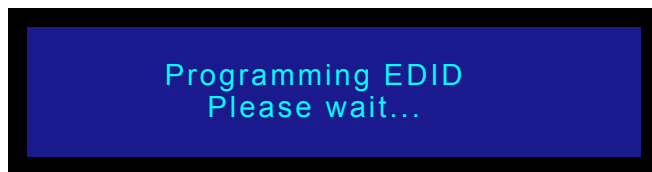


Figure 4-47. Programming EDID Message 1

4. Operation

Setup Menu

If the programming is successful, the following message is displayed:

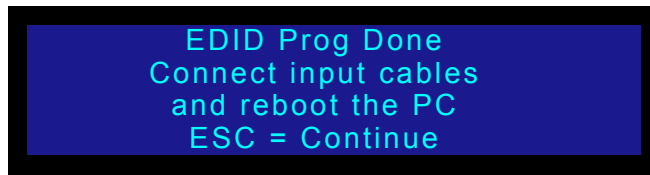


Figure 4-48. Programming EDID Message 2

Note

At this point, reboot the external computer(s) in order for the new EDID information to be read, and the new preferred resolution to become available.

If the EDID programming failed, the following message will be displayed:

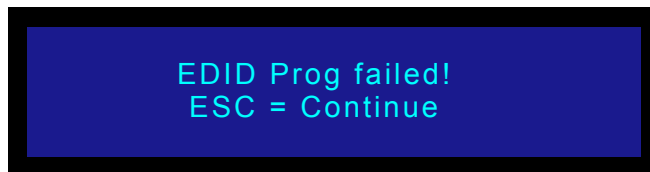


Figure 4-49. EDID Programming Failed Message

If this message persists, please contact customer service for technical support.

- **Type (5 to 8)** — This field applies to inputs **5** through **8** only, allowing you to select between **Digital** or **Analog** EDID for these inputs. Please note:
 - ~ When the **Input** field is set to **5** through **8**, the **Type** field is selectable between **ANALOG** or **DIGITAL**, and the current **Type** is reflected. Changing this field triggers the programming process as soon as **SEL** is pressed, using the currently shown resolution in the **Format** field.
 - ~ When **ALL** is selected in the **Input** field, the **Type** field reflects Input **5**. Any triggering of the programming process changes inputs **5** through **8** to the selected option in this field.

DVI Cable Equal

From the **System Menu**, select **DVI Cable Equal** to display the **DVI Cable Equalizer Menu**, which enables you to adjust input cable equalization parameters for both DVI inputs simultaneously, or individually for inputs **5** through **8**.

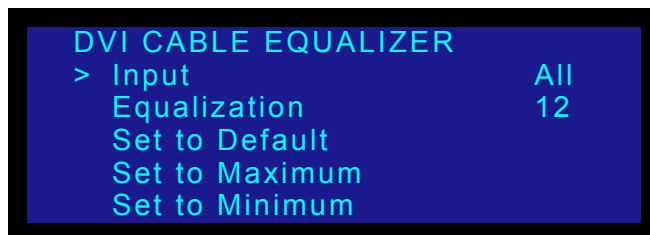


Figure 4-50. DVI Cable Equalizer Menu (sample)

The following functions are available:

- **Input** — selects the exact inputs that you wish to set: **ALL** (inputs **5** through **8**), **5** (individually), **6** (individually), **7** (individually), or **8** (individually).

Note

Inputs **5** through **8** do not need to be selected on the front panel for this menu to change, and to apply the equalization settings.

- **Equalization** — The equalization adjustment range is from **0** (short cable equalization) to **15** (long cable equalization). The default value is **12**, which indicates “moderate” equalization.

In general, the default should be adequate for most users, unless cables longer than 5M are used, and unless your signals are running at high pixel clock rates (e.g., UXGA).

- **Set to Default** — sets the Equalization field to the default setting of 12.

Note

Equalization is a subjective “visual” adjustment, which depends on three important factors: cable length, signal quality and cable quality. If you adjust the equalization, optimize the setting for the lowest amount of visual artifacts.

- **Set to Maximum** — sets the Equalization field to the maximum setting of 15.
- **Set to Minimum** — sets the Equalization field to the minimum setting of 0.

Executive Mode

From the **System Menu**, select **Executive Mode** to initiate a limited front-panel lockout. Executive mode enables seamless transitions between input sources *without* the need to press **TAKE**. In executive lockout mode:

- Button pushes will be ignored for all buttons *except* the nine **input buttons** and **LOGO**. All turns of the rotary knobs will be ignored.
- To take an input source to Program, press the input or **LOGO** button *without* pressing **TAKE**. The transition is seamless, even if you have **Auto Take** (in the **User Preference Menu**) turned off.
- All Ethernet and serial communications commands will function normally.
- All button lights will continue to reflect the proper state of the inputs.

■ Use the following steps to enable and disable executive lockout mode:

1. From the **Setup Menu**, choose the **System Menu**.
2. Select **Executive Mode**. The following submenu appears:

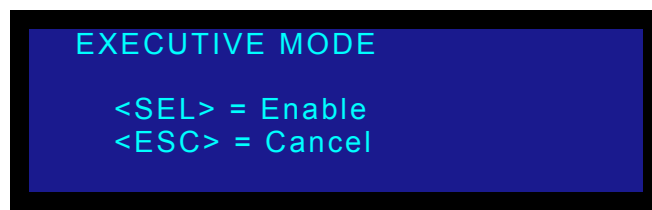


Figure 4-51. Executive Mode Menu (sample)

4. Operation

Setup Menu

3. Press **SEL**. The confirmation message shown in the following illustration appears:



Figure 4-52. Executive Mode Confirmation Message

4. Press an **input button** or **LOGO**.

The button will blink slow to indicate that the input is ready to be taken to Program. The input source signal automatically goes to Program without requiring a Take, regardless of your **Auto Take** setting.

5. To disable the front panel executive lockout mode, press and hold the **SEL** and **ESC** buttons simultaneously for 3 seconds. When the button combination is detected, the system returns to the menu that was displayed before executive lockout mode was enabled.

File Association

From the **System Menu**, select **File Association** to display the **File Association Menu**, which enables you to select or change a configuration file for each of nine physical inputs (1 through 8 and **SDI**). The configuration file contains settings that govern everything from pixel resolution to aspect ratio and color balance — any setting you can change using the **Input Menu**. The PDS can store up to 64 input configuration files in non-volatile memory.

Each time you press an input button, the PDS uses the configuration file associated with that input. The file is designated by a number from 1 to 64. The default file for each input is the same as the input number—Input 1 uses configuration file 1, and so on. The default file for the SDI input is 9.

You can view and change the current setting for each input by using the **File Association Menu**, shown in the following illustration:

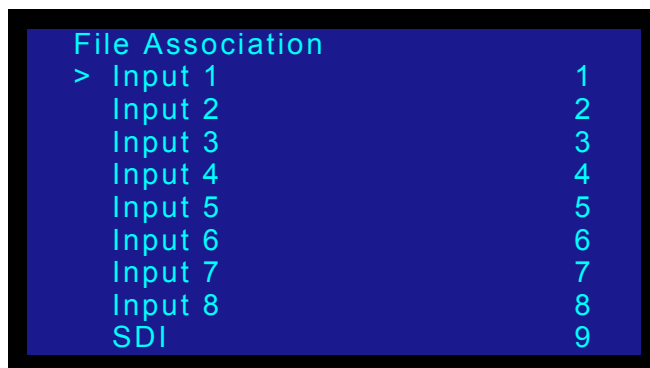


Figure 4-53. File Association Menu (sample)

When you associate a configuration file with a specific input, the file is used by any input source connected to that input.

To change a setting, scroll to an input number and press **SEL**. Choose a new configuration file and press **SEL** again. The change takes effect the next time the input button is pressed.

Refer to the “[About Input Configuration Files](#)” section on page 46 for additional information about setting, recalling, saving and deleting input configuration files.

Temperature

From the **System Menu**, select **Temperature** to display the **System Temperature Menu**.

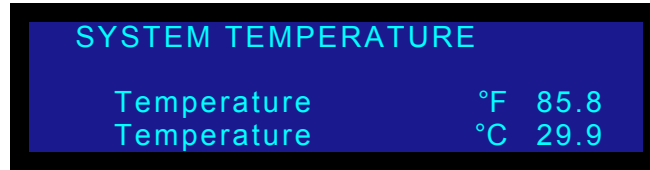


Figure 4-54. System Temperature Menu (sample)

The **System Temperature Menu** indicates the chassis’ internal temperature in both Celsius and Fahrenheit. When the menu is displayed, temperature values update every 4 seconds.

Note that the PDS measures the internal temperature for an “over-temp” condition every 5 minutes. If the system’s internal temperature exceeds 122° F (50° C), the following message appears:

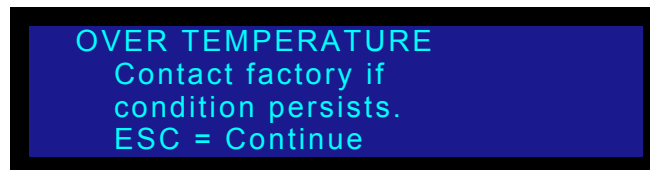


Figure 4-55. Over Temperature Warning

To clear the message and continue operations, press **ESC**.

Note

This message is a warning only, which does not prevent the operation of the PDS. If this message appears, it is recommended that you contact Barco Customer Service.

Diagnostics

From the **System Menu**, select **Diagnostics** to display the **Diagnostics Menu**:

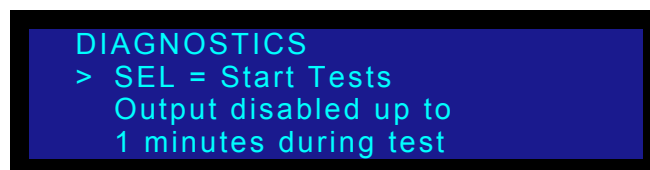


Figure 4-56. Diagnostics Menu

4. Operation

Setup Menu

If you suspect a problem with the PDS, press **SEL** to run a series of internal diagnostic tests. The menu will report back “**PASS**” or “**FAIL**.”

Note

If the menu reports “**FAIL**,” contact Barco Customer Service. In Appendix C, refer to the “[Contact Information](#)” section on page 150 for contact details.

Save System State

From the **System Menu**, select **Save Config** to save all current “system” settings so that they may be restored at power up. A message is briefly shown, after which the PDS returns to the **System Menu**.

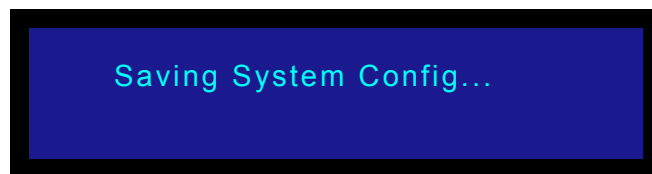


Figure 4-57. Saving System Configuration Message

Please note the following important points regarding the system configuration file:

- When you perform the **Save Config** function, all configuration parameters from the **System Menu** are saved in non-volatile memory. If you *do not* perform the function, data will not be restored upon the next system power up sequence.
- This command also saves the current **input** as the default power-up selection.

Note

If you want the PDS to always power up and acquire an input other than input 1, perform the **Save System State** command while the desired input is selected on Program.

- If you *do not* perform the **Save System State** function, data will not be restored upon the next system power up sequence.
- If you make a change in the **System Menu** and attempt to exit the menu (by pressing **ESC**) *without* saving changes, the system displays the following prompt::

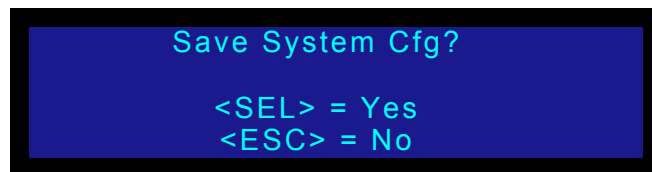


Figure 4-58. Save System Configuration Prompt

- ~ Select **Yes** (**SEL**) to save changes.
- ~ Select **No** (**ESC**) to continue operation without saving the changes.

Tech Support Menu

From the **Setup Menu**, select **Tech Support** to display the **Tech Support Menu**:



Figure 4-59. Tech Support Menu

The **Tech Support Menu** displays the following information:

- **Version** — displays the current version of installed operating firmware. This number changes when you update system software. In Chapter 6, refer to the [“Firmware Upgrade Overview”](#) section on page 94 for update instructions.
- **Phone** — lists the technical support phone number.
- **Website Support Address**— lists the web address for technical support.

Factory Reset Menu

From the **Main Menu**, select **Factory Reset** to display the **Factory Reset Menu**:

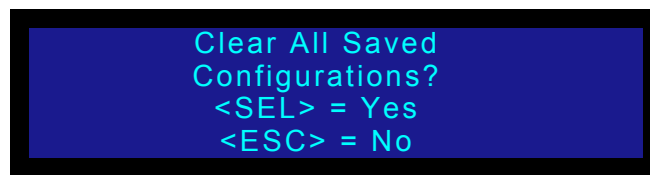


Figure 4-60. Factory Reset Menu

This function enables you to reset the PDS to its factory default condition, in which all user-defined input, output and system configuration files are deleted. When the command is executed, a confirmation menu is shown.

- Press **SEL** to reset the system.
- Press **ESC** to cancel the operation, and return to the **Setup Menu**.

The following attributes constitute a “factory default” condition:

- Input **1** is on Program.
- The **Output** is set to 1024x768@59.94.
- The **Output Raster Box** is **OFF**.
- The **Status Menu** is displayed.
- All menu items are set to their default values (as specified in this chapter).

4. Operation

Setup Menu

- The serial port is set to the following default values:
 - ~ **Baud:** 115200
 - ~ **Parameters:** N81 (No Parity, 8 Data Bits, 1 Stop Bit)
 - ~ **Handshaking:** OFF

Note

When "Reset All, Save EDID" is selected, the unit will return to a default configuration as noted above, with the exception of EDID, which will NOT be changed.

Firmware Upgrade Menu

For details about upgrading firmware, see "[Upgrading Firmware](#)" on page 93.

Using Inputs

This section provides background information and instructions for using inputs. The following topics are discussed:

- [Input Selection Rules](#)
- [Flip-flop Mode](#)
- [Using Auto Acquire](#)
- [Using HDCP](#)

Input Selection Rules

■ To transition an input to Program:

1. Select the desired input in the **Inputs Section**. Once a button is pressed, it blinks, indicating that the source is “pending.”
2. Press **TAKE** to transition the input to Program, using the current transition rate (as entered on the **Setup Menu**).

Note

Whenever **TAKE** is pressed, the PDS flip-flops sources in the **Inputs Section**. Refer to the “[Flip-flop Mode](#)” section on page 76 for additional information.

Please note the following important points:

- All input buttons are selectable, whether or not they are physically connected, and whether or not they have valid signals.
 - ~ When a button is blinking **slow**, it is ready to be transitioned to Program.

Note

If an input button is blinking slow and the **Status Menu** shows “**Invalid Signal**,” the system has attempted to acquire the source, but has failed.

- When the **Status Menu** is on and you select an input, one of two actions occur:
 - ~ The **Input Menu** automatically appears if **Menu Context** is **ON** (in the **User Preference Menu**).
 - ~ The **Status Menu** remains on display if **Menu Context** is **OFF**.
- The “**Invalid Signal**” message appears under the following conditions:
 - ~ If you select an input, and it does not have a valid signal.
 - ~ If an input was previously valid and its signal is lost.
 - ~ If the current “user-selected” format does not match the *detected* input signal for the selected input.
- For information about using the system in conjunction with HDCP inputs, refer to the “[Using HDCP](#)” section on page 77.

4. Operation

Using Inputs

Flip-flop Mode

Whenever you press **TAKE** to mix between inputs (including the **LOGO**), the PDS automatically flip-flops inputs. Two actions occur when **TAKE** is pressed:

- The blinking “next” source transitions to Program. Once it is fully on Program, the button lights solid.
- The previous (solid) source on Program automatically becomes the pending “next” source, and the button blinks.

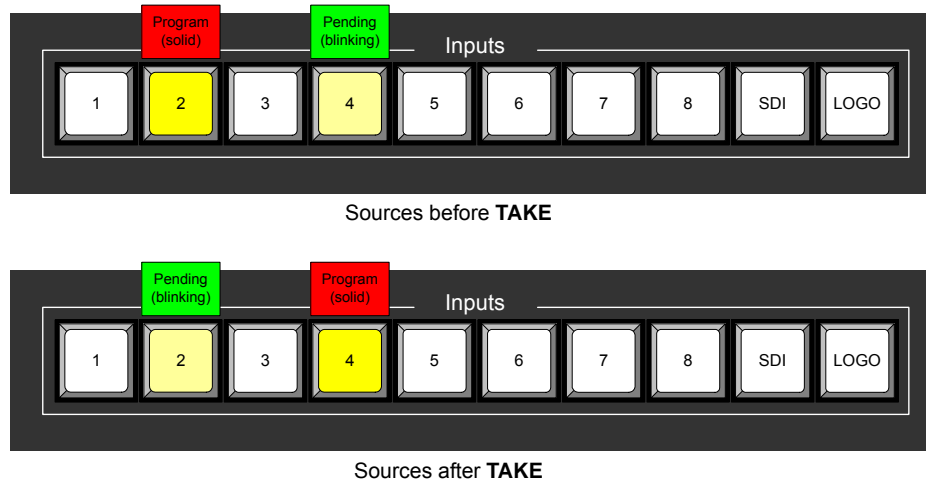


Figure 4-61. Flip-flop mode, before and after TAKE

Repeatedly pressing **TAKE** continues to flip-flop the current and pending sources in this manner. Please note:

- If **Black Auto Take** is **OFF** (in the **User Preference Menu**), you must press **TAKE** to transition to black. If a source is pending, the source flip-flops to Program — after the system is fully in black.
- If **Black Auto Take** is **ON**, simply press **BLACK** to transition to black. If a source is pending, it *remains* pending after the transition. There is no flip-flop.

Using Auto Acquire

Please note the following important points regarding the **Auto Acquire** mode:

- If **Auto Acquire** is **ON** and a valid input is selected that does *not* have a saved **Input Config** file associated with it, the system attempts to acquire the source and save an **Input Config** file. This process *may* take a few moments.

Note

The **Input Config** file will only be saved if the "**Auto Input Save**" mode is **ON** in the **User Preference Menu**.

- If an input is selected that *does* have a saved **Input Config** file associated with it, the (blinking) source will transition to program after **TAKE** is pressed.
- When the system performs an **Auto Acquire** for **Inputs 5** through **8**, the PDS first checks for a DVI signal. If not found, the system looks for a valid analog signal.
- If **Auto Acquire** is **OFF** and a valid input is selected (either with or without a saved **Input Config** file), the system compares the library file to the input's incoming timing.
 - ~ If the timings match, the system transitions to the input after **TAKE** is pressed.
 - ~ If the timings do not match, the "**Invalid Signal**" message appears, and the system transitions to black after **TAKE** is pressed.

Using HDCP

Note

As a prerequisite, ensure that you have read the "[A Word About HDCP](#)" section in Chapter 1 on page 4 prior to reading this section.

With PDS, the HDCP mode is essentially automatic. Provided that you connect an HDCP compliant monitor, you can select and switch between unprotected sources and "protected" HDCP sources (e.g., a Blu-Ray player) without restriction.

- Inputs **1** through **4** (analog) are unprotected sources.
- Inputs **5** through **8** (analog) are unprotected sources.
- Inputs **5** through **8** (digital) are protected when an HDCP source is connected.

Please note the following important points regarding HDCP operations:

- When the input signal is an HDCP source on DVI inputs **5** through **8** and a valid HDCP monitor is connected, the following actions occur:
 - ~ The PDS's analog output is disabled.
 - ~ You cannot store a logo from a "protected" source. However, "unprotected" logos that are already stored in the system can be switched to Program.
 - ~ You cannot use the **FRZ** button.

4. Operation

Using the Logo

Using the Logo

A **logo** is a full-screen video source which, when transitioned to Program, appears on top of all other sources. The PDS can store up to three logos in non-volatile memory.

The PDS enables you to transition to or from a full-screen logo, in the same way that you transition to or from video inputs. When you press **TAKE**, the system transitions the selected logo to or from Program at the current transition rate, and the sources flip-flop in the manner described in the “[Flip-flop Mode](#)” section on page 76.

Please note the following important points:

- A logo will be labeled **INVALID** if it was captured at a resolution that does not match the current output resolution. The resolution at which it was captured will also be displayed — e.g., [**INVALID 1600x1200**].
- If you scroll to an invalid logo, the **LOGO** button cannot be activated. The following message will appear.

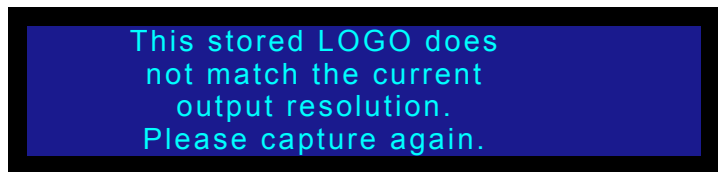


Figure 4-62. LOGO Output Resolution Message (sample)

- If **LOGO** is selected when there are no saved or valid logos, the following message will appear:



Figure 4-63. LOGO Error Message (sample)

- When you first start up a PDS that has stored logos, a message like the one in the following illustration appears during initialization:

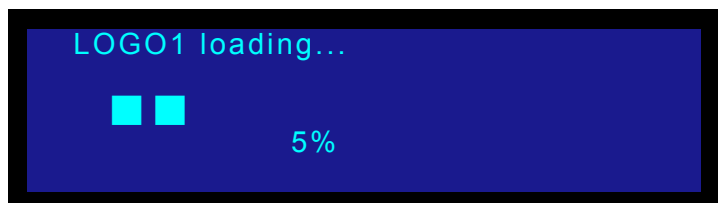


Figure 4-64. LOGO Initialization Message (sample)

Ensure that you are familiar with the **Logo Menu**. Refer to the “[Logo Menu](#)” section on page 57 for details.

Saving a Logo



- Use the following steps to capture and store a logo:
 1. To capture and store a full-screen logo, first select the input that you wish to store, and transition it to Program with a **TAKE**.
 2. From the **Setup Menu**, select **Logo** to display the **Logo Menu**.



Figure 4-65. Logo Menu (sample)

3. In the **Selection** field, press **SEL** and choose the “register” into which you want to save the logo (e.g., LOGO1, LOGO2 or LOGO3). Press **SEL** again.
4. Scroll to the **Save Pgm to Logo** field, and press **SEL** to save the input as a full-screen logo.

Note

When a logo is pending or already on Program, the **Save Pgm to Logo** field does not appear.

5. Repeat steps 1 through 4 to save up to two additional logos.

Important

When a “protected” HDCP source is selected (inputs 5 through 8), you cannot save a logo.

Transitioning to a Logo

- To transition from the source on Program to a saved logo:
 1. With an output source on Program, press the **LOGO** button. Please note:
 - ~ If **Menu Context** is **ON** (in the **User Preference Menu**), the **Logo Menu** automatically appears when the **LOGO** button is pressed.
 - ~ If **Menu Context** is **OFF**, the **Status Menu** (or the current menu) remains on when the **LOGO** button is pressed.

The **LOGO** button blinks “slow” to indicate that a logo is pending, and the **Logo Menu** appears:



Figure 4-66. Logo Menu — Selecting a Logo

4. Operation

Using the Logo

2. Press **SEL** and scroll to select a saved logo.

Logos appear in this list only if their resolution matches the output resolution.

3. Press **TAKE**.

The logo appears on Program and the **LOGO Setup Menu** displays the logo number in brackets, as shown in the following illustration:



Figure 4-67. Logo Menu — Logo on Program

Note

When the system transitions to the logo, the PDS flip-flops sources in the **Inputs Section**. Refer to the [“Flip-flop Mode”](#) section on page 76 for additional information.

Deleting a Logo

- Use the following procedure to delete a saved logo:

1. In the **Logo Menu**, scroll to Selection and press **SEL**.
2. Select the logo to delete. Press **SEL**.

The **DELETE LOGO** line displays the logo number you selected.

3. Scroll to **DELETE LOGO** and press **SEL**. A message like the one in the following illustration appears:


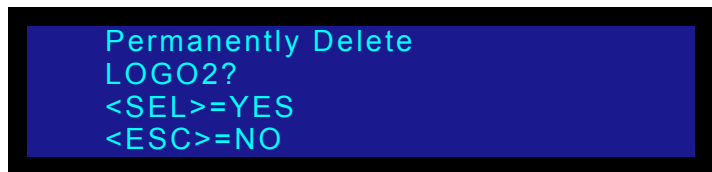


Figure 4-68. Delete Logo Message (sample)

4. Press **SEL** to delete the logo, or **ESC** to continue without deleting.

Using Freeze

You can use the FRZ (Freeze) button to create a still image from a video image, typically for use as a full-screen logo.




■ Use the following steps to freeze and un-freeze an input:

1. Select the desired input and transition it to program with a **TAKE**.
2. Press **FRZ** to immediately freeze the source. The button lights.
3. To un-freeze the source, press **FRZ** again. The light turns off.

Important

When a “protected” HDCP source is selected (inputs **5** through **8**), you cannot use the **FRZ** button.

Using Black



The **BLACK** button is used to transition the system’s output to/from black, no matter what combination of sources are currently on Program. For example:

- If a *single source* is on Program (e.g., **Input 1**), the system will mix to black at the current transition rate.

When **BLACK** is pressed, one of two different actions can occur, depending on how the “**Black Auto Take**” function is set in the **User Preference Menu**.

- [Black Auto Take Off](#)
- [Black Auto Take On](#)

Note

Refer to the “[User Preference Menu](#)” section on page 58 for details on setting parameters in the **User Preference Menu**.

Black Auto Take Off

When the “**Black Auto Take**” function is **OFF** in the **User Preference Menu**, you must use the **TAKE** button to transition to/from black.

■ Use the following steps to transition to/from black, when **Black Auto Take** is **OFF**:

1. Press **BLACK**. The button blinks to indicate that a transition to/from black is pending.
2. Press **TAKE**. The system transitions to/from black, at the current transition rate. Please note:
 - ~ If the transition is “to” black, the **BLACK** button lights solid when black is fully on Program.

4. Operation

Using Black

- ~ If the transition is “**from**” black, the **BLACK** button automatically turns off when the selected source is fully on Program.

Important

When the **Black Auto Take** function is **OFF**, if a source is pending when **TAKE** is pressed, that source transitions to Program *after* black is fully reached, and sources flip-flop in the normal manner. If you do not want to transition to a new source, simply press the button that is solidly lit.

Black Auto Take On

When the “**Black Auto Take**” function is **ON** in the **User Preference Menu**, you *do not* need to press **TAKE** to perform a transition to/from black. The transition occurs immediately, once **BLACK** is pressed.

- Use the following steps to transition to/from black, when **Black Auto Take** is **ON**:

1. Press **BLACK**. The system immediately transitions to/from black, at the current transition rate.

Please note:

- ~ If the transition is “**to**” black, the **BLACK** button blinks during the transition interval, then lights solid when black is on Program.
- ~ If the transition is “**from**” black, the **BLACK** button blinks during the transition interval, then automatically turns off when the selected source is fully on Program.

Important

When the **Black Auto Take** function is **ON**, if a different source is pending when **TAKE** is pressed, that source *remains pending* (blinking) *after* black is fully reached. The system does not transition to the pending source, and sources do not flip-flop. If desired, you can transition to the pending source *underneath* black, by pressing **TAKE** in the normal manner, and then pressing **BLACK** to immediately fade up to the new source.

Using Front-Panel Lockout

The PDS includes two front-panel lockout modes:

- Full lockout mode, which locks the front panel from all source selections
- Executive mode, which locks all front panel selections *except* the nine input buttons (**1** through **8** and **SDI**) and **LOGO**. In executive mode, the user can transition from one input source to another without pressing **TAKE**.

Full Lockout Mode

In the full lockout mode:

- All button pushes and all turns of the rotary knobs will be ignored.
- All Ethernet and serial communications commands will function normally.
- All button lights will continue to reflect the proper state of the inputs.

■ Use the following steps to fully lock and unlock the front panel:

1. Press and hold the **SEL** and **ESC** buttons simultaneously for 3 seconds. Once this button combination has been detected, the following display appears:

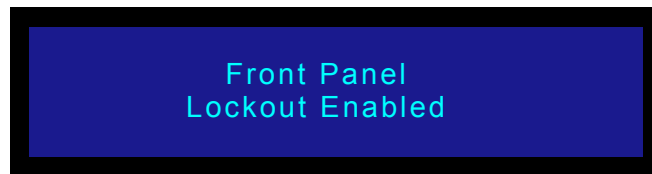


Figure 4-69. System Message: Lockout Enabled

2. To disable the front panel full lockout mode, press and hold the **SEL** and **ESC** buttons simultaneously for 3 seconds. When the button combination is detected, the system returns to the menu that was displayed before full lockout mode was enabled.

See also “[Executive Mode](#)” on page 69.

4. Operation

Using Front-Panel Lockout

5. GUI Operations

In This Chapter

This chapter provides connection, launch and operating instructions for the system's web-based GUI, which enables you to perform all PDS setup and transition functions, just like the system's "physical" front panel.

The following topics are discussed:

- [GUI Connection and Launch](#)
- [GUI Operations on a PC](#)
- [GUI Operations on a Mobile Device](#)

5. GUI Operations

GUI Connection and Launch

GUI Connection and Launch

■ Use the following steps to connect a PC, laptop, or mobile device and launch the GUI:

1. Ensure that your PC (or laptop) uses Windows® 7, Windows® 2000, or Windows XP. If using a mobile device, ensure that it uses one of the following operating systems:
 - ~ IOS 4+
 - ~ Android 2.3+
 - ~ Android with Chrome®
 - ~ BB OS 6+
 - ~ BB Tablet OS 1+
2. Ensure that your PC (or laptop) has a web browser installed. The following browsers are supported:
 - ~ Internet Explorer® 10+
 - ~ Mozilla Firefox® 14+
 - ~ Google Chrome® Version 19.0+
 - ~ Safari
3. Connect the PDS's Ethernet port to a Switch.
4. Connect the Switch to your PC (or laptop).
5. Power-up the PDS.
6. Note the PDS's *current* IP address:
 - a. From the **Status Menu**, press **SEL** to display the **Setup Menu**.
 - b. Select **System** to display the **System Menu**.
 - c. Select **Ethernet** to display the **Ethernet Menu**.
 - d. Make a note of the information on the **IP** line, which shows the current IP address in all modes (with DHCP on or off).

Note

The default IP address is **192.168.0.10**.

7. On your PC (or laptop), open up a web browser.
8. In the browser's address bar, enter the PDS's IP address as shown in the following illustration.




Figure 5-1. Address bar with sample IP address

Note

Avoid using leading zeros in the IP address. If your display panel shows 192.168.000.010, for example, type the address as shown in the preceding illustration, not as shown on the display.

5. GUI Operations

GUI Connection and Launch

- When the PC establishes communications with the PDS, several web pages are downloaded into the PC, and the PDS **Home Page** appears:



Figure 5-2. PDS Home Page

- Click the **Control Application GUI** link to launch the GUI. The **GUI Status Menu** page appears, as shown below:

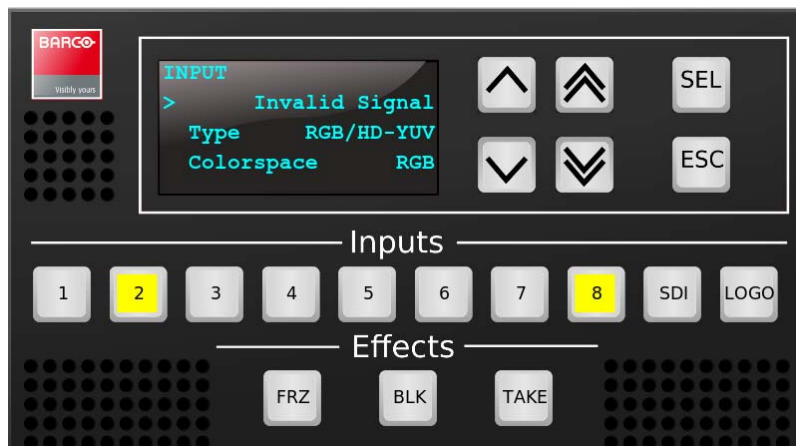


Figure 5-3. PDS GUI Status Menu

- The PDS GUI is now ready for use. Refer to the [“GUI Operations on a PC”](#) section on page 88 for important operating notes.

Note

If you have trouble establishing communications between your PC and the PDS, in Chapter 6, refer to the [“Troubleshooting Ethernet Communication”](#) section on page 103 for instructions.

5. GUI Operations

GUI Operations on a PC

GUI Operations on a PC

The figure below illustrates a sample GUI screen, as seen on a PC:

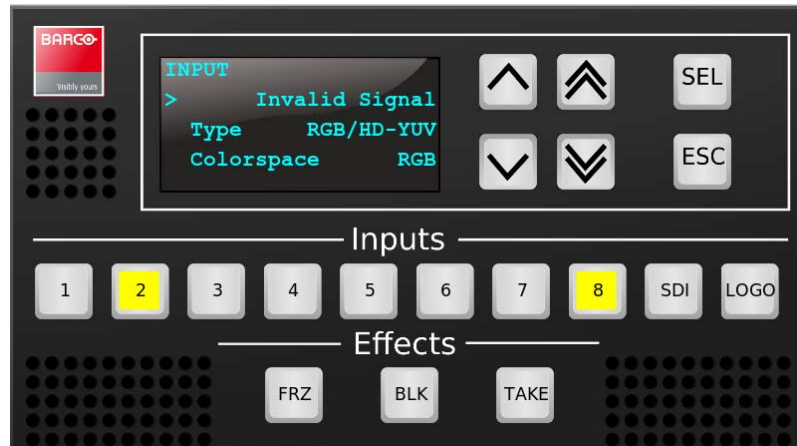


Figure 5-4. PDS PC GUI Setup Menu

Running the PDS GUI is virtually identical to running the system from the physical front panel. The similarities are:

- All control panel sections and menus are the same. In Chapter 4, refer to the [“Using the Menu System”](#) section on page 28 for details.
- All input, transition, and “effect” selection methods are the same. In Chapter 4, refer to the [“Using Inputs”](#) section on page 75 for details.
- All button states are the same. In Chapter 4, refer to the [“Button States”](#) section on page 25 for details.

The differences are:

- “Click” instead of press.
- Use the **Up/Down** arrows in place of the **ADJUST** knob:
 - ~ Click the **Up Arrow** to scroll up the menu tree.
 - ~ Click the **Down Arrow** to scroll down the menu tree.
- All actions taken on the GUI are mirrored on the physical front panel.
- You can not enter or leave the **Front Panel Lockout** mode from the GUI.

The double up/down arrows can be used to make coarse menu adjustments. For example, the “Brightness” field is a percentage, 100.0. The single up/down arrow will adjust this field in 0.1% increments; the double up/down arrow will adjust the field in 4.0% increments.



GUI Operations on a Mobile Device

The figure below illustrates a sample GUI screen, as seen on a mobile device. It has the same controls as those for a PC, described in “[GUI Operations on a PC](#)” on page 88.



Figure 5-5. PDS Cell-Phone GUI Setup Menu

5. GUI Operations

Multiple Unit Control UI

Multiple Unit Control UI

The Multiple Unit Control User Interface (UI) allows an operator to control multiple PDS units on the same network via a web browser, without installing a separate control application. After discovery and setup of the PDS units in the UI, one or more units can be enabled to accept source changes or transitions. After this is done, selection of any input, including Logo or initiation of a transition, will happen on the selected PDS units.

Use the following steps to setup and start using this UI to control multiple PDS units.

Connection to the Multiple Unit Control UI

1. Ensure each PDS unit is connected to the network and configured with a proper Ethernet IP address. Refer to the “Ethernet” section in chapter 4 for more information.
2. Access the PDS Home Page on one of the units. Refer to “GUI Connection and Launch” on page 86.
3. Select “Multiple Unit Control UI” from the PDS Home Page. The PDS Multiple Unit Control UI will appear.



Figure 5-6. PDS Multiple Unit Control User Interface (UI)

Adding Units to the Unit List

1. Select the “Discover” tab (next to the “Edit” tab) in the upper right window of the PDS Multiple Unit Control UI. The PDS Discover Menu will appear.

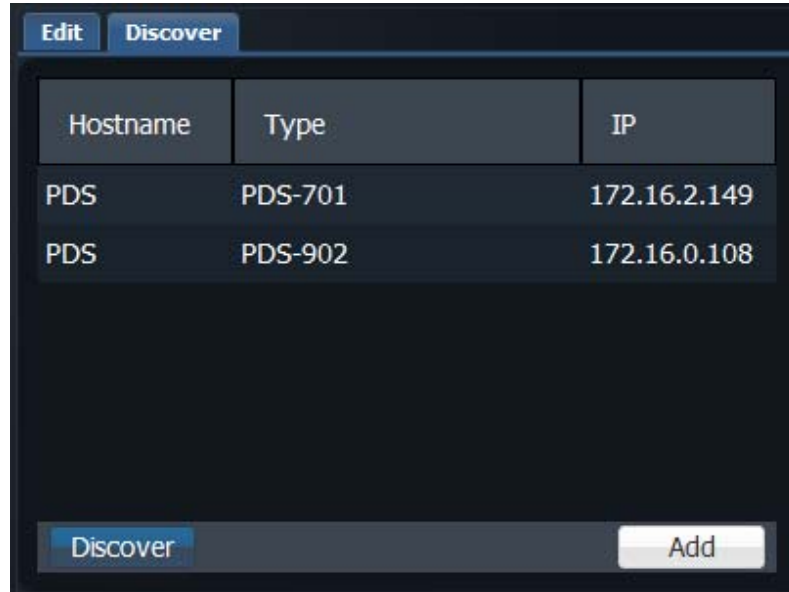


Figure 5-7. PDS Discover Menu

2. Press the “Discover” button in lower left corner of this window. The UI will query the network and find all available PDS units.
3. Highlight one or more units in the list (use CTRL + Left Mouse Click to highlight multiple units) and press “Add” to move them to the “Unit List”.

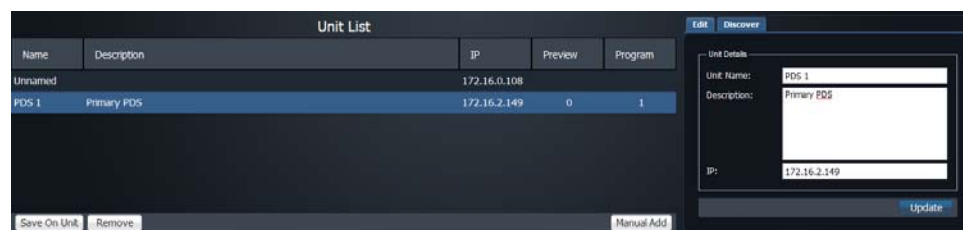


Figure 5-8. PDS Unit List

4. Use the “Edit” window to make changes to the Unit Name, Description or IP Address, as necessary. Then select “Update”. The control section will be displayed.

Note

Units can be manually added by selecting the “Manual Add” button in the lower right corner of the “Unit List” window. Use the “Edit” window to update the Unit Details for these manually added units.

5. GUI Operations

Multiple Unit Control UI

Note

The IP field in the Edit window cannot be updated for PDS units when the Status of that unit is “Connected”.

Controlling Multiple PDS Units



Figure 5-9. Control Section of the PDS Multiple Unit Control UI

The control section of the UI gives the operator control over the multiple PDS units. Each PDS in the unit list is represented with a status window. This window reports the Name of the PDS unit, what source is on Preview and Program, and whether the unit is currently connected to the network.

This control section shows up to four PDS units at any given time. Use the highlighted arrow buttons to scroll to other PDS units if more than four units are currently configured in the Unit List.

Using a mouse or other pointing device, left-click anywhere within a PDS status window to select or deselect that PDS. When selected, the entire window will highlight blue. Unselected PDS units will be grey.

When the desired PDS units are selected, use the mouse to select any of the inputs or Logo in the bus below the status windows. These selections will be made in Preview. Select the TAKE button to initiate a transition of Preview to Program for the selected PDS units.

For the selected PDS units, keyboard shortcuts can also be used to select inputs, Logo, or Take as follows:

Table 5-1. PDS Keyboard Shortcuts for Multiple Unit Control

Keyboard Shortcut	PDS Operation
1 - 8	Selects Inputs 1 – 8
9, S or s	Selects SDI Input
0, L or l	Selects Logo Input
T or t	Selects Take

Save Setup

1. In the middle-left of the PDS Multiple Unit Control UI, click the “Save On Unit” button to save the current Multiple Unit Control UI configuration to the PDS that was used to connect to the Multiple Unit Control UI.

6. Upgrading Firmware

In This Chapter

This chapter provides detailed instructions for upgrading PDS system firmware. The following topics are discussed:

- [Firmware Upgrade Overview](#)
- [Hardware Requirements](#)
- [Firmware Requirements](#)
- [Downloading Firmware via FTP or Web Site](#)
- [Upgrading Firmware Using the USB Port](#)
- [Upgrading Firmware Using the Web Upgrade](#)

6. Upgrading Firmware

Firmware Upgrade Overview

Firmware Upgrade Overview

Firmware files for the PDS are loaded into the hardware at power-up. These files are stored in the unit's onboard flash memory. The PDS's system firmware can be easily upgraded using the steps described in the sections that follow.

Hardware Requirements

The following hardware items are required for upgrading PDS firmware:

- IBM compatible computer with an available Ethernet port
- Local Ethernet network, including an Ethernet switch

Firmware Requirements

The following list outlines firmware requirements for upgrading the PDS's firmware:

- Ensure that your PC (or laptop) uses the Windows® 7, Windows® 2000, or Windows XP operating systems.
- Ensure that your PC (or laptop) has a web browser installed, such as Windows Internet Explorer® or Mozilla Firefox®.
- If using the Safari web browser, ensure that the following is NOT checked under Safari --> Preferences --> General menu:
 - ~ Open "safe" files after downloading.

Firmware files can be downloaded from either the Barco Folsom FTP site or the Barco website, as described in the following ["Downloading Firmware via FTP or Web Site"](#) section.

Downloading Firmware via FTP or Web Site

Two different methods can be used to download PDS firmware:

- [Via FTP Site](#)
- [Via Web Site](#)

Via FTP Site

Barco Folsom's FTP site address is: <ftp.folsom.com>

■ To download firmware from the FTP site:

1. Create a target folder on your PC or USB Flash drive (e.g., PDS).
2. Ensure that your PC is connected to the internet.
3. Log on to the FTP site using one of the following methods:
 - a. If you are using an FTP client such as **Ipswitch WS_FTP Professional**, log on to our site as follows:
 - **FTP Site:** <ftp.folsom.com>
 - **User name:** anonymous
 - **Password:** your email address
 - ▲ **Example:** johndoe@somecompany.com
 - b. If you are using a web browser, point the browser to:
<ftp://ftp.folsom.com>

Note

If you are using **Internet Explorer 7** or **8**, after entering the FTP address, click **Page**, and then click **Open FTP Site in Windows Explorer**.

- c. To use Windows Explorer, right-click the **Start** button, then click **Explore**. When the Explorer window opens, enter the FTP site in the address bar.
4. Once logged on, navigate to the following directory:
<ftp://ftp.folsom.com/Image Processing/PDS/>
 5. Transfer the following file to the target folder on your PC:
PDS_Rev##.##.zip
 6. Go to the folder that was used to save the downloaded file and "unzip" the contents of this file.
 7. Please continue with the "[Upgrading Firmware Using the Web Upgrade](#)" section on page 98 or "[Upgrading Firmware Using the USB Port](#)" section on page 96.

Via Web Site

Barco's web site address is: www.barco.com

■ To download firmware from the web site:

1. Create a target folder on your PC or USB Flash drive (e.g., PDS).

6. Upgrading Firmware

Upgrading Firmware Using the USB Port

2. Ensure that your PC is connected to the internet.
3. On the web, navigate to:
<http://www.barco.com>
4. Navigate to the “PDS Series” home page:
<http://www.barco.com/en/products-solutions/image-processing/presentation-switchers/easy-to-use-digital-switchers.aspx>
5. Navigate to the “**Downloads**” tab **Flash software**, and download the latest version of code:
PDS Series Software - v###.##.##.##
6. When the **File Download Dialog** appears, click **Save**.
7. When the **Save As Dialog** appears, navigate to the target folder and click **Save**.
8. Go to the folder that was used to save the downloaded file and "unzip" the contents of this file.
9. Please continue with the “[Upgrading Firmware Using the Web Upgrade](#)” section on page 98 or “[Upgrading Firmware Using the USB Port](#)” section on page 96.

Upgrading Firmware Using the USB Port

PDS firmware can be downloaded from the FTP or Web site to a USB memory stick. This involves plugging the USB stick into the PDS, going to a menu in the PDS, and initiating the transfer of the file from the USB stick to the PDS.

First, ensure that your flash drive is formatted to use the FAT32 file system. If necessary, reformat the drive as described in the following section. When the drive is properly formatted, refer to [Performing the Firmware Upgrade Using the USB Port](#) on page 97 for the upgrade procedure.

Formatting the Flash Drive

Ensure that the drive contains no data.



Reformatting the flash drive erases existing data. To avoid losing data, download to a computer or a secure site any files you wish to keep, then format the drive.

- Then use the following procedure to format the flash drive:
 1. Insert the flash drive into a Windows PC or laptop's USB port.
 2. Select **Start > My Computer**.
 3. On the **My Computer** screen, right-click the drive that represents the flash drive.
 4. Select **Format** from the menu that appears. The **Format Removable Disk** screen appears.
 5. Select **FAT32** as the file system, and **Quick Format** under **Format Options**, as shown in the following illustration.

6. Upgrading Firmware

Upgrading Firmware Using the USB Port

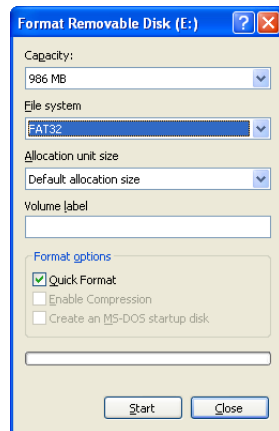


Figure 6-1. Format Removable Disk Window

6. Then click **Start**. A message appears, warning that data will be erased during the formatting process.
 - ~ Click **OK** to continue.
 - ~ Click **Cancel** to halt the process.
7. If you click **OK**, a confirmation message appears after a few seconds. The flash drive is now ready to use.

If you click **Cancel**, you can delete data or download it to the computer, then retry the formatting operation.

Performing the Firmware Upgrade Using the USB Port

Important

After unzipping the firmware upgrade downloaded from the Barco Web Site or FTP site, make sure the PDS_##_##.tar.gz file is in a directory named "PDS" before inserting the USB Flash drive into the PDS's USB port.

- To upgrade the PDS firmware via the USB port, use the following procedure:
 1. Insert the USB Flash drive into the PDS's USB port.
 2. Select **Firmware Upgrade** from the **Setup Menu**. The **Firmware Upgrade Submenu** appears.



Figure 6-2. Code Upgrade Submenu

6. Upgrading Firmware

Upgrading Firmware Using the Web Upgrade

3. Select **USB Code Upgrade**. The menu shown in the following illustration appears.



Figure 6-3. USB Code Upgrade Menu

4. Scroll to the file you want to use, and press **SEL**.
5. Scroll to **Upgrade** and press **SEL** again.

A progress message appears.

Note

Do not remove the flash drive or power down the PDS until the firmware file is uploaded to the PDS.

When the file is loaded, the PDS powers down and reboots.

Upgrading Firmware Using the Web Upgrade

Checking for Available Firmware Upgrades

- To determine whether a new version of the PDS firmware is available, use the following procedure:
 1. Verify that the PDS has internet access. Contact your system administrator if necessary.
 2. Select **Setup > Firmware Upgrade > Web Upgrade**. The submenu shown in the following illustration appears.

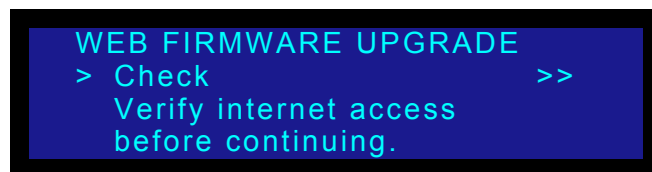


Figure 6-4. Web Firmware Upgrade Submenu

3. Select **Check**.

6. Upgrading Firmware

Upgrading Firmware Using the Web Upgrade

4. A message informs you if a new firmware version is available.

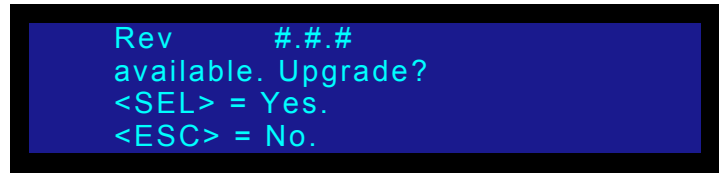


Figure 6-5. Firmware Version-Upgrade Message

5. Press <SEL> to start the upgrade. A message will inform you to "Please wait..."



Figure 6-6. Upgrade Wait Message

6. After the upgrade is finished, the PDS will automatically reboot.



Figure 6-7. Resetting Message

If you are not connected to the internet, a message prompts you to check the connection.

Upgrading Firmware Using the Web Interface

- Use the following steps to upgrade PDS software:
 1. Ensure that your PC (or laptop) uses Windows® 7, Windows® 2000, or Windows XP.
 2. xConnect the PDS's Ethernet port to a Switch.
 3. Connect the Switch to your PC (or laptop).
 4. Power-up the PDS.
 5. Note the PDS's *current* IP address:
 - a. From the **Status Menu**, press **SEL** to display the **Setup Menu**.
 - b. Select **System** to display the **System Menu**.
 - c. Select **Ethernet** to display the **Ethernet Menu**.

6. Upgrading Firmware

Upgrading Firmware Using the Web Upgrade

- d. Make a note of the information on the **IP** line, which shows the current IP address in all modes (with DHCP on or off).

Note

The default IP address is **192.168.0.10**.

6. On your PC (or laptop), open up a web browser.
7. In the browser's address bar, enter the PDS's IP address.




Figure 6-8. Address bar with sample IP address

Note

Avoid using leading zeros in the IP address. If your display panel shows 192.168.000.010, for example, type the address as shown in the preceding illustration, not as shown on the display.

8. When the PC establishes communications with the PDS, several web pages are downloaded into the PC, and the PDS **Home Page** appears:

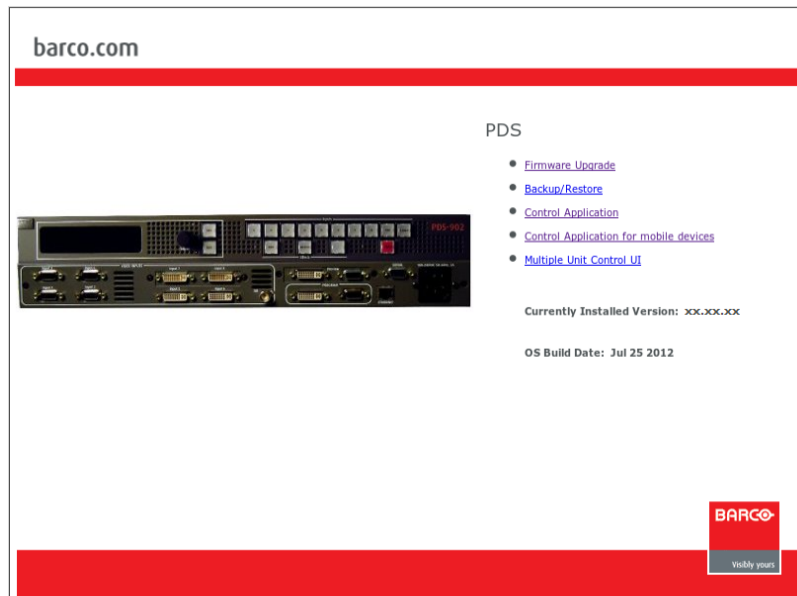


Figure 6-9. PDS Home Page

6. Upgrading Firmware

Upgrading Firmware Using the Web Upgrade

- Click the **Firmware Upgrade** link to continue the upgrade process. The **Select File** page appears, as shown below:

barco.com

PDS Upgrade - Select File

Select file to upload, then click the 'Start Upgrade' button

No file chosen

Example: <Model>_01_00.tar.gz

Currently Installed Version: 00.00.10B

BARCO
Visibly yours

Figure 6-10. PDS Select File Page

- Click the **Browse** button, and navigate to the folder on your PC where you saved the latest version of code.
- In the **Upload Dialog**, select the file:
PDS_##_##.tar.gz
... and click **Open**.
- In the **Select File** page, click **Start Upgrade**.
The **Upload Status** page appears, which provides status during the upload procedure:

barco.com

PDS Upgrade - Performing Upgrade

Extracting files...
Success
Programming front panel...
Success
Programming device 2...
Success
Upgrading kernel...
Success

Programming complete.

Note: You must power-cycle the PDS for the new firmware to take effect.

Figure 6-11. PDS Upload Status Page

6. Upgrading Firmware

Upgrading Firmware Using the Web Upgrade

13. When the procedure is complete, you have three options:
 - ~ Click **Home** to return to the PDS **Home Page**.
 - ~ If a problem was encountered during the process, click **View Log File** to display a text-based log of the upload procedure.
 - ~ If the upload was successful, click **Restart** PDS to complete the entire upgrade procedure.
14. Close your browser, and resume operations on the PDS.

Note

Be sure to check the **Software Version Menu** to verify that the system has been updated. From the **Setup Menu**, select **Tech Support** to display the **Tech Support Menu**, which lists the current software version at the top.

Troubleshooting Ethernet Communication

- Use the following steps to determine the IP address of the PDS, and establish proper communications:

1. Power-up the PDS.
2. Note the PDS's *current* IP address:
 - a. From the **Status Menu**, press SEL to display the **Setup Menu**.
 - b. Select **System** to display the **System Menu**.
 - c. Select **Ethernet** to display the **Ethernet Menu**.
 - d. Make a note of the information on the **IP** line, which shows the current IP address in all modes (with DHCP on or off).
3. Attempt to ping the PDS as follows:
 - a. Connect the PDS's Ethernet port to a Switch.
 - b. Connect the Ethernet Switch to your PC.
 - c. Turn on the PC or laptop.
 - d. Open a command prompt window on the PC. Click **Start > Programs > Accessories > Command Prompt**.
 - e. On the command prompt line, type:
`ping 192.168.0.10`
... followed by **Enter**.

Note

Use the unit's actual IP address, as determined in step 2 above.

- f. If the computer can successfully communicate with the PDS, you will see a series of "**replies**" from the target IP address. Repeat the upgrade procedure as outlined in the "[Upgrading Firmware Using the Web Upgrade](#)" section on page 98.
- g. If you see a "**Request timed out**" message, the PC is unable to locate the PDS. If this is the case:
 - Check your network connections and settings as described above, or,
 - Contact your network administrator, or,
 - Contact **Technical Support**. In Appendix C, refer to the "[Contact Information](#)" section on page 150 for details.

6. Upgrading Firmware

Upgrading Firmware Using the Web Upgrade

A. Specifications

In This Appendix

This appendix provides detailed technical specifications for the PDS. The following topics are discussed:

- [Input Specifications](#)
- [Output Specifications](#)
- [Physical and Electrical Specifications](#)
- [Communications Specifications](#)
- [Agency Specifications](#)
- [Pinouts](#)

A. Specifications

Input Specifications

The table below lists PDS input specifications.

Table A-1. PDS Input Specifications

Parameter	Detail	Specification
Inputs 1 - 4	Connector	HD-15 VGA
	Format	RGBHV / RGBS / RGsB computer video, YPbPr video (SD or HD), S-video, or composite video
	Sampling	10-bits/color at 150 MHz maximum
		Supports 1:1 sampling up to 1920x1080p @60Hz
		Sources with native pixel rates > 150 MHz will be filtered and undersampled at 150 Mhz, including: <ul style="list-style-type: none">• 1600x1200@60 (162 MHz)• 1920x1080p@60 (173.0 MHz)• 1920x1200@60 (193.25 MHz)• 2048x1080p@60 (183.75 MHz)
Inputs 5 - 8	Connector	DVI-I, per DDWG 1.0
	Format (Digital)	8-bit DVI, RGBHV data via analog pins
	Format (Analog)	RGBHV / RGBS / RGsB computer video, YPbPr video (SD or HD), S-video, or composite video
	HDCP hardware support	HDCP version 1.0 compliant
Input 9	Connector	BNC
	Format	SD-SDI per SMPTE 259M-C (NTSC/PAL resolution)
		HD-SDI per SMPTE 292M (HDTV)
		3G-SDI per SMPTE 425

Output Specifications

The table below lists PDS output specifications:

Table A-2. PDS Output Specifications

Parameter	Detail	Specification
Outputs	DVI output	1 x DVI connector
	RGB output	1 x HD-15 VGA connector
	HDCP Encryption	On DVI connector only

A. Specifications

Output Specifications

A. Specifications

Physical and Electrical Specifications

Physical and Electrical Specifications

The table below lists PDS physical and electrical specifications.

Table A-3. PDS Physical and Electrical Specifications

Parameter	Detail	Specification
Power	Connector	Standard IEC, integral on/off switch
	Power	100-240 VAC, 50-60 Hz
Mechanical	Chassis	H: 1.75 inches (4.4 cm), 1 RU rack mount
		W: 17.00 in. (43.2 cm), 19.06 in. (48.4 cm) with wings
		D: 14.25 in. (36.19 cm)
Temperature		0-40 degrees C
Humidity		0-95% non-condensing
Weight		12.5 lbs (5.67 kg)
Shipping Weight		16 lbs (7.25 kg)

Communications Specifications

The table below lists PDS communications specifications.

Table A-4. PDS Communications Specifications

Parameter	Detail	Specification
Communications	Ethernet	RJ-45, 10/100 Mbps
	Serial	DB-9 Female, DCE, 115k Baud

Agency Specifications

The table below lists PDS agency specifications.

Table A-5. PDS Agency Specifications

Parameter	Detail	Specification
Agency Specifications	EMI/EMC	EN55103-1 E4, EN55103-2, FCC Part 15 Subpart B Class A
	Safety	EN 60950 Class 1

Pinouts

The following topics are discussed in this section:

- [Analog 15-pin D Connector](#)
- [DVI-I Connector](#)
- [Ethernet Connector](#)
- [Serial Connector](#)

Analog 15-pin D Connector

The figure below illustrates the analog 15-pin D connector:

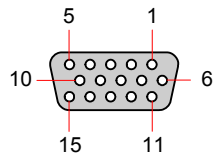


Figure A-1. Analog 15-pin D connector, chassis view

The table below lists Analog 15-pin D connector pinouts.

Table A-6. Analog 15-pin D Connector Pinouts

Pin	Signal	Pin	Signal
1	Red	9	+5V DDC Power
2	Green	10	GND
3	Blue	11	
4		12	DDC Data
5		13	H Sync or C Sync
6	Red return	14	V Sync
7	Green return	15	DDC Clock
8	Blue return		

Pinouts

The figure below illustrates the DVI-I connector:



- T.M.D.S = Transition Minimized Differential Signal
- DDC = Display Data Channel

Pin	Signal	Pin	Signal
1	T.M.D.S. Data 2-	13	T.M.D.S. Data 3+
2	T.M.D.S. Data 2+	14	+5V Power
3	T.M.D.S. Data 2/4 Shield	15	ground (for +5V)
4	T.M.D.S. Data 4-	16	Hot Plug Detect
5	T.M.D.S. Data 4+	17	T.M.D.S. Data 0-
6	DDC Clock	18	T.M.D.S. Data 0+
7	DDC Data	19	T.M.D.S. Data 0/5 Shield
8	Analog Vertical Sync	20	T.M.D.S. Data 5-
9	T.M.D.S. Data 1-	21	T.M.D.S. Data 5+
10	T.M.D.S. Data 1+	22	T.M.D.S. Clock Shield
11	T.M.D.S. Data 1/3 Shield	23	T.M.D.S. Clock +
12	T.M.D.S. Data 3-	24	T.M.D.S. Clock -
MicroCross Pins			
C1	Analog Red Video	C4	Analog Horizontal Sync
C2	Analog Green Video	C5	Analog Common Ground Return
C3	Analog Blue Video		

Ethernet Connector

The figure below illustrates the Ethernet connector:




Figure A-3. Ethernet connector

The table below lists Ethernet connector pinouts.

Table A-8. Ethernet Connector Pinouts

Pin	Signal	Wire Color
1	TX Data +	White / Orange
2	TX Data -	Orange
3	RX Data +	White / Green
4		Blue
5		White / Blue
6	RX Data -	Green
7		White / Brown
8		Brown

A. Specifications

Pinouts

Serial Connector

The figure below illustrates the DB-9 **Serial** connector.

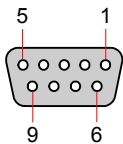


Figure A-4. Serial connector

The table below lists **Serial** connector pinouts.

Table A-9. Serial Connector Pinouts

Pin	RS-232 Signal	Description
1	CD	Carrier Detect
2	TXD	Transmitted Data
3	RXD	Received Data
4	DSR	Data Set Ready
5	GND	Signal Ground
6	DTR	Data Terminal Ready
7	CTS	Clear To Send
8	RTS	Request To Send
9	RI	Unused

B. Remote Control

In This Appendix

This appendix provides information regarding remote control protocol. The following topics are discussed:

- [Setting Up For The Encore or ScreenPRO-II Controller](#)
- [Communicating with PDS](#)
- [Command Protocol](#)
- [Error Codes](#)
- [PDS Command List](#)
- [Remote Commands](#)

Setting Up For The Encore or ScreenPRO-II Controller

- The **Barco Remote Control Submenu** sets up the PDS for remote control through a Barco Encore or ScreenPRO-II Controller.



Figure B-1. Remote Control Submenu (sample)

- To connect a PDS to an Encore or ScreenPRO-II Controller, use the following procedure:
 1. On the **Ethernet Submenu**, enable DHCP mode and obtain an IP address for the Encore Controller.
 2. On the **Ethernet Submenu**, select **Remote Control**. The **Barco Remote Control Submenu** appears, as shown in the preceding illustration.
 3. The **Unit ID** defaults to **25**. To change this setting, select **Unit ID** and scroll to another number. Select an ID that is not being used by other devices.
 4. In the **IP** field, scroll through the four fields to enter the IP address of the appropriate controller. When you select IP, the last character in the first field becomes available. Turn the **ADJUST** knob to change the value.

B. Remote Control

Setting Up For The Encore or ScreenPRO-II Controller

As you continue turning the knob, you can change all three values in this field. Values range from **000** to **255** in all four fields.

Note

The default IP address of the **Encore Controller** is **192.168.0.1**.

The default IP address of the **ScreenPRO-II Controller** is **192.168.0.2**.

5. Press **SEL** to accept your change in the first field. The last character in the next field becomes available.
6. Continue until you have entered the IP address you want. Press **SEL** again.
7. In the **Connect** field, select **ON**. The following message appears:



Figure B-2. Remote Connection Message

8. When the connection is established, a confirmation message appears.

Communicating with PDS

- Use the following steps to communicate with the PDS via Telnet:
 1. Connect the PDS's Ethernet port to an Ethernet switch, and connect the switch to your PC or laptop.
 2. Ensure that all Ethernet parameters are properly set up. In Chapter 4, refer to the ["Ethernet"](#) section on page 64 for details.
 3. For Telnet communications, use the PDS's IP address and port 23. On a Microsoft Windows® PC, open a command prompt window and enter the following:

```
> telnet xxx.xxx.xxx.xxx 23
```

To login via Ethernet without requiring a user name or password, telnet to port 3000. Example:

```
> telnet 192.168.0.10 3000
```

4. After you "Telnet" into the PDS, you are presented with the login prompt:

```
Welcome to PDS.  
Login as "user".  
Press <ENTER> for password.
```

- a. Type "user" and press **ENTER** to login.
- b. When prompted for a password, press **ENTER**.

Once you have successfully logged in, the following message appears, along with the command prompt (>):

```
ShellApp waiting for input  
>
```

5. You can now issue commands. Operationally, the telnet window functions in a manner similar to a serial communications session. As required, type **"help"** to see a list of supported commands.

Refer to the ["Remote Commands"](#) section on page 123 for a complete list of commands.

Command Protocol

The PDS's command protocol is compatible with GNU getopt parsing. Every parameter of the command has an option character associated with it. A **<CR>** carriage return (**ASCII 13**) terminates the command.

Note

The order of the option characters in the command does not matter.

▲ Command example:

```
ITYPE -i 2 -t 1<CR>
```

Or

```
ITYPE -t 1 -i 2<CR>
```

Command Responses

A command response is sent after each command is processed. This response consists of the command, followed by the error code, a line feed **<LF>** and a special termination character (**\x4**).

- When a command is successful, the error code is a **0 (eERR_OK)**, or some positive value.
- When a command is not successful, the error code is a negative value. A preliminary list of the error codes is included. Refer to the [“Error Codes”](#) section on page 118 for details.

▲ Command response example:

```
ITYPE -e 0<LF>
```

```
</x4>
```

Query Options

Query type options are available for the commands. The order of precedence for processing query option arguments is help (**--help**), query (**-?**), and list (**--list**). If more than one query option is sent in a command, the option with the highest precedence is processed, and any others are ignored.

Help Query — Commands have a **“help”** query option associated with them, (**--help**). This query lists all option flags and parameters for the command in the following format:

▲ Help option example:

```
IBRT --help<CR>
```

▲ Response:

IBRT

- **Description:** Input Brightness Adjust
- **Command Format:** IBRT -i(input) -b(bright)

- **Parameters:**
 - i(input): Input number, 1-8
 - b(bright): 75.0%-125.0%
- **Query Format:** IBRT i(input) -?
- **Query Response:** IBRT i(input) b(bright) --min 75 --max 125
 IBRT -e 0 <LF>
 </x4>

Current Setting Query — The current setting query option (-?) returns the command with each of the current parameter settings. Commands with minimum and maximum settings for the parameter will have these “min” and “max” values returned with option flags **--min** and **--max**.

- ▲ Query option example:

```
IBRT -i 4 -?<CR>
```

- ▲ Response:

```
IBRT -i 4 -b 100.00 --min 75 --max 125
```

```
IBRT -e 0<LF>
```

```
</x4>
```

Several commands have a list for the associated valid parameter values, such as the format commands. The list of these values can be queried with the list query option (**--list**). The list shows has the numeric value for the parameter, followed by the value text encased in quotes. A colon separates the numeric value from the string.

- ▲ List query option example:

```
ISMP -i 4 --list<CR>
```

- ▲ Response:

```
0:"OverSample"
```

```
1:"1:1"
```

```
ISMP -e 0<LF>
```

```
</x4>
```

Error Codes

This section provides PDS error codes:

Error Codes: General Failures

The table below lists general failure codes:

Table B-1. PDS General Error Codes

Code	Description
-9999	Generic fail
-9998	Operation is not applicable in current state
-9997	UI Related... Did not get response from device
-9996	UI Related... Did not get valid response from device
-9995	Timeout occurred
-9994	Parameter / data out of range
-9993	Searching for data in an index, no matching data
-9992	Checksum didn't match
-9991	Version didn't match
-9990	UI Related... Current device interface not supported
-9989	Pointer operation invalid
-9988	Part of command had error
-9987	Buffer overflow
-9986	Initialization is not done (still in progress)

Error Codes: No Error

The table below lists the “no error” code:

Table B-2. PDS “No Error” Code

Code	Description
0	Successful

PDS Command List

The table below lists PDS remote commands.

Note

The following commands are for the PDS-902 and PDS-901 units. For a PDS-701 unit, the input parameter range cannot include inputs 7 or 8.

Table B-3. PDS Remote Commands

Command	Description	Page
Ethernet Commands		
<u>DHCP</u>	Enable/Disable DHCP mode	123
<u>EMAC</u>	Get MAC Address	123
<u>GATEWAY</u>	Set gateway to be used when DHCP is OFF	124
<u>IP</u>	Set Static IP Address to be used when DHCP is OFF	124
<u>SUBNET</u>	Set subnet mask to be used when DHCP is OFF	124
Input Commands		
<u>BLKVID</u>	Puts black into the program input	125
<u>CBLEQ</u>	Set cable equalization	125
<u>EDID</u>	Set Input EDID Resolution	125
<u>EDIDTYPE</u>	Set EDID type	125
<u>FREEZE</u>	Freeze the input on program	126
<u>IADJ</u>	Selects the input path to adjust (preview or program)	126
<u>IADJRST</u>	Reset the input timing parameters to default values for analog.	126
<u>IAR</u>	Adjust Input Aspect Ratio	126
<u>IAUTOACK</u>	Input Source Acquire Mode	127
<u>IAUTOCL</u>	Attempts to detect and adjust input video to the active video area	127
<u>IAVAIL</u>	Query only command for input availability	127
<u>IBRT</u>	Input brightness adjust	128
<u>ICDEL</u>	Delete Input Configuration	128
<u>ICNT</u>	Input contrast adjust	128
<u>ICPHO</u>	Input Phase Adjust	128
<u>ICREC</u>	Recalls saved input configuration for selected input	129
<u>ICRST</u>	Reset Input Configuration to default values	129
<u>ICSAV</u>	Saves Input Configuration	129

B. Remote Control

PDS Command List

Table B-3. PDS Remote Commands (Continued)

Command	Description	Page
<u>ICSP</u>	Input Colorspace Adjust	130
<u>IHATV</u>	Input Horizontal Active Adjust	130
<u>IHCROP</u>	Input Horizontal Crop	130
<u>IHPAN</u>	Input Horizontal Pan	131
<u>IHPOS</u>	Input Horizontal Position Adjust	131
<u>IHTOTAL</u>	Input Horizontal Total Adjust	131
<u>IHUE</u>	Input Hue Adjust	131
<u>IMAP</u>	Maps the input file configuration for the selected input	132
<u>IRBRT</u>	Input RGB Brightness Adjust	132
<u>IRCNT</u>	Input RGB Contrast Adjust	132
<u>IRES</u>	Input Resolution Select	132
<u>ISAT</u>	Input Saturation Adjust	133
<u>ISEL</u>	Selects the selected input as the current input to display	133
<u>ISIZERST</u>	Reset the input sizing parameters to default values	134
<u>ISLICE</u>	Input Sync Slice Threshold Adjust	134
<u>ISMP</u>	Adjust Input Sample mode	134
<u>ISYNC</u>	Input Sync Type Adjust	134
<u>ITYPE</u>	Input Type Adjust	135
<u>IVATV</u>	Input Vertical Active Adjust	135
<u>IVCROP</u>	Input Vertical Crop	136
<u>IVPAN</u>	Input Vertical Pan	136
<u>IVPOS</u>	Input Vertical Position Adjust	136
<u>IVTOTAL</u>	Input Vertical Total Adjust. Query-only command.	136
<u>PCOMP</u>	Pulldown Compensation mode adjust	136
<u>TAKE</u>	Take the input currently on preview onto program	137
Output Commands		
<u>BLACK</u>	Set the mixer output to black	138
<u>OAVAIL</u>	Checks availability of the preview output. Query-only command.	138
<u>OCSAV</u>	Save Output Configuration	138
<u>OGM</u>	Set Output Gamma	138
<u>ORBM</u>	Output Raster Box Mode	138
<u>ORES</u>	Output Resolution	139
<u>OSRC</u>	Select the input source for the preview output	139

Table B-3. PDS Remote Commands (Continued)

Command	Description	Page
<u>OSYNC</u>	Output Sync Type Adjust	140
<u>OTPM</u>	Output Test Pattern Mode	140
<u>OTPT</u>	Output Test Pattern Type	140
System Commands		
<u>AUTOACQ</u>	Auto Input Acquisition Mode	142
<u>AUTOCFG</u>	Auto Input Configuration Mode	142
<u>AUTOSAVE</u>	Auto Input Settings Save	142
<u>AUTOTAKE</u>	Auto Take Mode	142
<u>BACKGND</u>	Set background color	142
<u>BLKTRAN</u>	Set whether going to black is a direct cut or setup for a take	143
<u>CONMODE</u>	Encore Connect Mode	143
<u>CONTEXT</u>	Set menu context	143
<u>DIAG</u>	Perform a system diagnostic test	143
<u>DIAGD</u>	Display the results of the last performed system diagnostic test	143
<u>ENCOREIP</u>	Encore IP address	144
<u>FPUPDATE</u>	Request a front panel update	144
<u>ISTAT</u>	Query only command for the input status type and format	144
<u>LCLR</u>	Clear the selected log (ram copy, not flash)	144
<u>LDMP</u>	Display the current log messages	144
<u>LFEN</u>	Set the mode for the selected log	145
<u>LINT</u>	Set the time interval for writing the enabled logs to flash	145
<u>LOCKOUT</u>	Control the lockout mode of the front panel	145
<u>OSTAT</u>	Query only command for the output status type and format	145
<u>PREVIEW</u>	Query only command for the input and black button status on preview	145
<u>PROGRAM</u>	Query only command for the input and black button status on program	146
<u>RESET</u>	Reset unit	146
<u>SAVE</u>	System Save	146
<u>SERIAL</u>	Sets the serial port	146
<u>TEMP</u>	Query only command for the temperature of the unit	147
<u>TRNTIME</u>	Set transition time	147
<u>UNITID</u>	Encore Unit ID	147
<u>VER</u>	Display Version info	147
<u>VFDBRT</u>	Set VFD brightness	147

B. Remote Control

PDS Command List

Table B-3. PDS Remote Commands (Continued)

Command	Description	Page
<i>LOGO Commands</i>		
<u>LOGODEL</u>	Delete the selected logo file	148
<u>LOGOSAVE</u>	Save the image on Program to the selected logo fame store and file	148
<u>LOGOSEL</u>	Logo selection	148
<u>LOGOSTAT</u>	The logo format status. This command is a query only.	148

Remote Commands

This section lists PDS remote commands, in the following categories:

- [Ethernet Commands](#)
- [Input Commands](#)
- [Output Commands](#)
- [System Commands](#)
- [LOGO Commands](#)

Ethernet Commands

DHCP

- **Description:** Enables/disables DHCP mode.
- **Command Format:** DHCP -m (mode)
- **Parameters:** -m mode: 0-disable, 1-enable (default: on)
- **Query Format:** DHCP -?
- **Query Response:** DHCP -m (mode) --min 0 --max 1

EMAC

- **Description:** Gets MAC Address.
- **Command Format:** N/A
- **Parameters:** N/A
- **Query Format:** EMAC -?
- **Query Response:** EMAC -a (addr)
- **Response Params:** -a (addr): MAC address formatted xx.xx.xx.xx.xx.xx

B. Remote Control

Remote Commands

GATEWAY

- **Description:** Sets gateway to be used when DHCP is OFF.
- **Command Format:** GATEWAY -s (static addr)
- **Parameters:** s static addr: format will be: xxx.xxx.xxx.xxx
- **Query Format:** GATEWAY -?
- **Query Response:** GATEWAY -a (active addr) -s (static addr)
- **Query Params:** -a (active addr): Active gateway active address

IP

- **Description:** Sets Static IP Address to be used when DHCP is OFF.
- **Command Format:** IP -s (static)
- **Parameters:** -s static addr with format xxx.xxx.xxx.xxx
- **Query Format:** IP -?
- **Query Response:** IP -a (active addr) -s (static addr)
- **Response Params:** -a (active addr): returns active address

SUBNET

- **Description:** Sets subnet mask to be used when DHCP is OFF.
- **Command Format:** SUBNET -s (static addr)
- **Parameters:** -s static address formatted xxx.xxx.xxx.xxx
- **Query Format:** SUBNET -?
- **Query Response:** SUBNET -a(active addr) -s(static addr)
- **Response Params:** -a(active addr): returns active address

Input Commands

BLKVID

- **Description:** Puts black into the program input.
- **Command Format:** BLKVID -m (mode)
- **Parameters:** -m (mode): 0 - off, 1 - on
- **Query Format:** N/A
- **Query Response:** N/A

CBLEQ

- **Description:** Sets cable equalization. Command valid only for DVI input channels.
- **Command Format:** CBLEQ -i(input) -c(cable equalization)
- **Parameters:**
 - i (input): 5-6 (PDS-701) 5-8 (PDS-901 and PDS-902)
 - c (cable equalization): 0 - 15 (Default: 12)
- **Query Format:** CBLEQ -i(input) -?
- **Query Response:** CBLEQ -i(input) -c (cable equalization) --min 0 --max 15

EDID

- **Description:** Sets Input EDID Resolution.
- **Command Format:** EDID -i (input) [-f (format) | -n (index)]
- **Parameters:**
 - i (input) : 1-6 (PDS-701) 1-8 (PDS-901 and PDS-902)
 - f (format): Format string, i.e. "1024x768 @59.94"
 - or
 - n (index): Video format index
- **Query Format:** EDID -i (input) -?
- **Query Response:** EDID -i (input) -f (format)
- **List Format:** EDID -i (input) --list
- **List Response:**
 - 2:"720x480p"
 - 4:"720x576p"
 - 5:"720x576p - 16:9"
 - Etc.

EDIDTYPE

- **Description:** Sets EDID type. This command is valid only for the DVI input channels.
- **Command Format:** EDIDTYPE -i(input) -t(EDID type)

B. Remote Control

Remote Commands

- **Parameters:**
 - i (input): 5-6 (PDS-701) 5-8 (PDS-901 and PDS-902)
 - t (EDID type): 0 - analog, 1 - digital (Default: 1)
- **Query Format:** EDIDTYPE -i(input) -?
- **Query Response:** EDIDTYPE -i(input) -t (EDID type) --min 0 --max 1
- **List Format:** EDIDTYPE -i(input)
- **List Response:**
 - 0:"Analog"
 - 1:"Digital"

FREEZE

- **Description:** Freezes the input on program.
- **Command Format:** FREEZE -m (mode)
- **Parameters:** -m (mode): 0-off, 1-on (Default: off)
- **Query Format:** FREEZE -?
- **Query Response:** FREEZE -m (mode) --min 0 --max 1

IADJ

- **Description:** Selects the input path to be adjusted (preview or program). This command is valid only for the PDS-902.
- **Command Format:** IADJ -p (path)
- **Parameters:** -p (path): 0-preview, 1-program
- **Query Format:** IADJ -?
- **Query Response:** IADJ -p (path)
- **List Format:** IADJ --list
- **List Response:**
 - 0: "Preview"
 - 1: "Program"

IADJRST

- **Description:** Reset the input timing parameters to default values for analog. This command is only available for analog input types.
- **Command Format:** IADJRST -i (input)
- **Parameters:** -i (input): 1 - 6 (PDS-701); 1 - 8 (PDS-901/902)
(5 - 8 only if type is analog)
- **Query Format:** N/A
- **Query Response:** N/A

IAR

- **Description:** Adjust Input Aspect Ratio

- **Command Format:** IAR -i (input) -r (ratio) -c (custom ratio)
- **Parameters:**
 - i (input): 1 - 9
 - r (ratio): 1 - 1:1, 2 - 3:2, 3 - 4:3, 4 - 5:4, 5 - 16:10, 6 - 16:9
 - c (custom ratio): .75 - 3.0
- **Query Format:** IAR -i (input) -?
- **Query Response:** IAR -i (input) -c (custom ratio) --min .75 -- max 3
or
IAR -i (input) -r (ratio) --min 1 -- max 5
- **List Format:** IAR -i (input) --list
- **List Response:**
 - 1:"1:1"
 - 2:"3:2"
 - 3:"4:3"
 - 4:"5:4"
 - 5:"16:10"
 - 6:"16:9"

IAUTOACK

- **Description:** Input Source Acquire Mode.
- **Command Format:**IAUTOACQ -i(input) -m(mode)
- **Parameters:**
 - i (input): 1 - 9
 - m (mode): 0-off, 1- on
- **Query Format:** IAUTOACQ -i (input) -?
- **Query Response:** IAUTOACQ -i (input) -m (mode) --min 0 --max 1

IAUTOCL

- **Description:** Attempts to detect and adjust input video to the active video area. This command is only for analog input types.
- **Command Format:** IAUTOCL -i (input)
- **Parameters:** -i (input): 1 - 8 for adjustments (5 - 8 only if itype is analog)
- **Query Format:** N/A
- **Query Response:** N/A

IAVAIL

- **Description:** Query-only command for input availability. This command can be used to identify whether the DVI inputs 7 and 8 are available by querying for input 7 or 8.

B. Remote Control

Remote Commands

- **Parameters:**
 - i (input): 1 - 9
 - m (mode): 0 - input not available, 1 - input available
- **Query Format:** IAVAIL -i (input) -?
- **Query Response:** IAVAIL -i (input) -m (mode)

IBRT

- **Description:** Input Brightness Adjust
- **Command Format:** IBRT -i(input) -b (bright)
- **Parameters:**
 - i (input): 1-9
 - b (bright): 75.0% - 125.0% (Default: 100%)
- **Query Format:** IBRT -i (input) -?
- **Query Response:** IBRT -i (input) -b(bright) --min 75 --max 125

ICDEL

- **Description:** Deletes input configuration.
- **Command Format:** ICDEL -i(input) -f(file)
- **Parameters:**
 - i(input): 1 - 9
 - f(file): 1 - 64. If specified, update the File Association menu to reflect the selected file number. If not specified, use the current file number from the ICREC query.
- **Query Format:** N/A
- **Query Response:** N/A

ICNT

- **Description:** Input Contrast Adjust
- **Command Format:** ICNT -i(input) -c(contrast)
- **Parameters:**
 - i (input): 1-9
 - c (contrast): 75.0% - 125.0% (Default: 100%)
- **Query Format:** ICNT -i(input) -?
- **Query Response:** ICNT -i(input) -c(contrast) --min 75 --max 125

ICPHO

- **Description:** Input Phase Adjust. This command is only valid for analog input types.
- **Command Format:** ICPHO -i(input) -a(ADC) -p(phase)

- **Parameters:**
 - i (input): 1 - 8 (5 - 8 only if itype is analog)
 - a (ADC): A/B (A:ADC A, B:ADC B)
 - p (phase): -16 - 15 (default: 0)
- **Query Format:** ICPHO -i(input) -a(ADC) -?
- **Query Response:** ICPHO -i(input) -a(ADC) -p(phase) --min -16 --max 15

ICREC

- **Description:** Recalls the saved input configuration for selected input. The selected input's IMAP is updated if the -f (file) parameter is specified.
- **Command Format:** ICREC -i (input) -f (file)
- **Parameters:**
 - i (input): 1 - 9
 - f (file): 1 - 64. If specified, update the File Association menu to reflect the selected file number.
- **Query Format:** ICREC -i (input) -?
- **Query Response:** ICREC -i (input) -f (file)
- **List Format:** ICREC -i (input) --list
The list returns all saved input formats.
- **List Response:**

```
1:"1"
2:"2"
.
.
64:"64"
```

ICRST

- **Description:** Reset Input Configuration to the input default values
- **Command Format:** ICRST -i (input)
- **Parameters:** -i (input): 1 - 9
- **Query Format:** N/A
- **Query Response:** N/A

ICSAV

- **Description:** Saves Input Configuration. The input's IMAP is updated if the -f (file) parameter is specified.
- **Command Format:** ICSAV -i (input) -f (file)

B. Remote Control

Remote Commands

- **Parameters:**
 - i (input): 1 - 9
 - f (file): 1 - 64. If specified, update the File Association menu to reflect the selected file number. If not specified, use the current file number from the ICREC query.
- **Query Format:** N/A
- **Query Response:** N/A

ICSP

- **Description:** Input Colorspace Adjust
- **Command Format:** ICSP -i (input) -c (color)
- **Parameters:**
 - i (input): 1 - 9
 - c (color): 0-RGB, 1-SMPTE
- **Query Format:** ICSP -i (input) -?
- **Query Response:** ICSP -i (input) -c (color) --min 0 --max 1
- **List Format:** Each input type will have a different list for colorspace.
ICSP -i (input) --list

IHATV

- **Description:** Input Horizontal Active Adjust. This command is only adjustable for analog input types. Other input types will provide query information only.
- **Command Format:** IHATV -i (input) -a (active)
- **Parameters:**
 - i (input): 1 - 8 for adjustments (5 - 8 only if itype is analog); 1 - 9 for query
 - a (active): In pixels
- **Query Format:** IHATV -i (input) -?
- **Query Response:**
IHATV -i (input) -a (active) --min (active min) -- max (active max)

IHCROP

- **Description:** Input Horizontal Crop
- **Command Format:** IHCROP -i (input) -w (width)
- **Parameters:**
 - i (input): 1 - 9
 - w (width): In pixels
- **Query Format:** IHCROP -i (input) -?
- **Query Response:** IHCROP -i (input) -w(width) --min (pos min) -- max (pos max)

IHPAN

- **Description:** Input Horizontal Pan
- **Command Format:** IHPAN -i (input) -p (pan)
- **Parameters:**
 - i (input): 1 - 9
 - p (pan): In pixels
- **Query Format:** IHPAN -i (input) -?
- **Query Response:** IHPAN -i (input) -p (pan) --min (active min) -- max (active max)

IHPOS

- **Description:** Input Horizontal Position Adjust. This command is only adjustable for analog input types. Other input types will provide query information only.
- **Command Format:** IHPOS -i (input) -p (position)
- **Parameters:**
 - i (input): 1 - 8 for adjustments (5 - 8 only if itype is analog); 1 - 9 for query
 - p (position): In pixels
- **Query Format:** IHPOS -i (input) -?
- **Query Response:**

IHPOS -i (input) -p (position) --min (pos min) -- max (pos max)

IHTOTAL

- **Description:** Input Horizontal Total Adjust. This command is only adjustable for analog input types. Other input types will provide query information only.
- **Command Format:** IHTOTAL -i (input) -t (total)
- **Parameters:**
 - i (input): 1 - 8 for adjustments (5 - 8 only if itype is analog); 1 - 9 for query
 - t(total): In pixels
- **Query Format:** IHTOTAL -i (input) -?
- **Query Response:** IHTOTAL -i (input) -t (total) --min (total min) -- max (total max)

IHUE

- **Description:** Input Hue Adjust. This command is only valid for analog, Y/C and CVBS inputs.
- **Command Format:** IHUE -i (input) -h (hue)
- **Parameters:**
 - i (input): 1 - 9
 - h (hue): -90 - +90 (Default: 0)
- **Query Format:** IHUE -i (input) -?

B. Remote Control

Remote Commands

- **Query Response:** IHUE -i (input) -h (hue) --min -90 --max 90

IMAP

- **Description:** Maps the input file configuration for the selected input.
- **Command Format:** IMAP -i (input) -f (file)
- **Parameters:**
 - i (input): 1 - 9
 - f (file): 1 - 64
- **Query Format:** IMAP -i (input) -?
- **Query Response:** IMAP -i (input) -f (file) --min 1 --max 64

IRBRT

- **Description:** Input RGB Brightness Adjust. This command is only valid for formats with the RGB color space.
- **Command Format:** IRBRT -i (input) -r (red) -g (green) -b (blue)
- **Parameters:**
 - i (input): 1 - 8
 - r (red): -25.0% - 25.0% (Default: 0%)
 - g (green): -25.0% - 25.0% (Default: 0%)
 - b (blue): -25.0% - 25.0% (Default: 0%)
- **Query Format:** IRBRT -i input -?
- **Query Response:**
IRBRT -i (input) -r (red) -g (green) -b (blue) --min -25 --max 25

IRCNT

- **Description:** Input RGB Contrast Adjust. This command is only valid for formats with the RGB color space.
- **Command Format:** IRCNT -i (input) -r (red) -g (green) -b (blue)
- **Parameters:**
 - i (input): 1 - 8
 - r (red): -25.0% - 25.0% (Default: 0%)
 - g (green): -25.0% - 25.0% (Default: 0%)
 - b (blue): -25.0% - 25.0% (Default: 0%)
- **Query Format:** IRCNT -i (input) -?
- **Query Response:**
IRCNT -i (input) -r(red) -g(green) -b(blue) --min -25 --max 25

IRES

- **Description:** Input Resolution Select
- **Command Format:** IRES -i (input) [-f (format) | -n (index)]

- **Parameters:**
 - i (input): 1 - 9
 - f (format): format string, i.e. "800x600 @59.94"
 - or
 - n (index): video format index (see --list)
 - s (status): 0 - valid, non-zero - invalid
- **Query Format:** IRES -i (input) -?
- **Query Response:** IRES -i (input) -f (format) -s (status)
- **List Format:** Each input type has a different list of valid resolutions.
IRES -i (input) --list
- **List Response:** Example for input type of analog:
 - 1:"NTSC (480i)"
 - 2:"720x480p"
 - 3:"PAL (576i)"
 - Etc.

ISAT

- **Description:** Input Saturation Adjust. This command is only valid for the SMPTE color space.
- **Command Format:** ISAT -i (input) -s (sat)
- **Parameters:**
 - i (input): 1 - 9
 - s (saturation): 0 - 150 (Default: 100)
- **Query Format:** ISAT -i (input) -?
- **Query Response:** ISAT -i (input) -s (sat) --min 0 --max 150

ISEL

- **Description:** Selects the specified input as the current input to display. This command will perform the valid sync check, route the input, recall video if saved or acquire source if not saved. Includes the -f (file) parameter option. Also, the IMAP will be updated for the input if the file parameter is specified. The query command returns the input currently on program.
- **Command Format:** ISEL -i (input) -f (file)
- **Parameters:**
 - i (input): 1 - 9
 - f (file): 1 - 64; If specified, updates the File Association menu to reflect the selected file number. If not specified, uses the file number specified in the ICREC query.
- **Query Format:** ISEL -?
- **Query Response:** ISEL -i (input)

B. Remote Control

Remote Commands

ISIZERST

- **Description:** Reset the input sizing parameters to default values
- **Command Format:** ISIZERST -i (input)
- **Parameters:** -i (input): 1 - 6 and 9 (PDS-701); 1 - 9 (PDS-901/902)
- **Query Format:** N/A
- **Query Response:** N/A

ISLICE

- **Description:** Input Sync Slice Threshold Adjust. This command is only valid for analog inputs.
- **Command Format:** ISLICE -i (input) -t (threshold)
- **Parameters:**
 - i (input): 1 - 8 for adjustments (5 - 8 only if itype is analog)
 - t(threshold): 8 - 256mV; +8 increments (default: 128mV)
- **Query Format:** ISLICE -i (input) -?
- **Query Response:** ISLICE -i (input) -t (threshold) --min 8 -- max 256

ISMP

- **Description:** Adjust Input Sample mode. This command is only adjustable for analog input types. Other input types will provide query information only.
- **Command Format:** ISMP -i (input) -s (sample mode)
- **Parameters:**
 - i (input): 1 - 8 for adjustments (5 - 8 only if itype is analog); 1 - 9 for query
 - s (sample mode): 0 - 1:1 sampling off, 1 - 1:1 sampling on (Default: On)
- **Query Format:** ISMP -i (input) -?
- **Query Response:** ISMP -i (input) -s (sample mode) --min 0 -- max 1
- **List Format:** Each input type has a different list of valid sample modes.
ISMP -i (input) --list
- **List Response:**
 - 0:"Off"
 - 1:"On"

ISYNC

- **Description:** Input Sync Type Adjust. This command is only valid for analog input types.
- **Command Format:** ISYNC -i (input) -s (sync)
- **Parameters:**
 - i (input): 1 - 8 (5 - 8 only if itype is analog)
 - s (sync): 0 - auto, 1 - H/V, 2- CSync, 3- SOG (Default: auto)

- **Query Format:** ISYNC -i (input) -?
- **Query Response:** ISYNC -i (input) -s(sync) --min 0 --max 3
- **List Format:** ISYNC -i (input) --list
- **List Response:**
 - 0:"Auto"
 - 1:"H/V"
 - 2:"CSync"
 - 3:"SOG"

ITYPE

- **Description:** Input Type Adjust. This command is only adjustable for the analog inputs. Other inputs will provide query information only.
- **Command Format:** ITYPE -i (input) -t (type)
- **Parameters:**
 - i (input): 1 - 8 for adjustments (5 - 8 only if itype is analog) ; 1 - 9 for query
 - t (type): 1-analog, 2-Y/C, 3-CVBS, 4-SDI, 5-DVI, 6-YPbPr
- **Query Format:** ITYPE -i (input) -?
- **Query Response:** ITYPE -i (input) -t (type)
- **List Format:** Each input type has a different list of valid input types.
ITYPE -i (input) --list
- **List Response:**
 - 1:"RGB"
 - 2:"Y/C"
 - 3:"CVBS"
 - 4:"SDI"
 - 5:"DVI"
 - 6:"YPBPR"

IVATV

- **Description:** Input Vertical Active Adjust. This command is only adjustable for analog input types. Other input types will provide query information only.
- **Command Format:** IVATV -i (input) -a (active)
- **Parameters:**
 - i (input): 1 - 8 for adjustments (5 - 8 only if input is analog); 1 - 9 for query
 - a (active): In lines
- **Query Format:** IVATV -i (input) -?
- **Query Response:** IVATV -i (input) -a (total) --min (active min) -- max (active max)

B. Remote Control

Remote Commands

IVCROP

- **Description:** Input Vertical Crop
- **Command Format:** IVCROP -i (input) -h (height)
- **Parameters:**
 - i(input): 1 - 9
 - h(height): In lines
- **Query Format:** IVCROP -i(input) -?
- **Query Response:** IVCROP -i(input) -h(height) --min (pos min) -- max (pos max)

IVPAN

- **Description:** Input Vertical Pan
- **Command Format:** IVPAN -i (input) -p (pan)
- **Parameters:**
 - i (input): 1 - 9
 - p (pan): In pixels
- **Query Format:** IVPAN -i (input) -?
- **Query Response:** IVPAN -i (input) -p (pan) --min (active min) -- max (active max)

IVPOS

- **Description:** Input Vertical Position Adjust. This command is only adjustable for analog input types. Other input types will provide query information only.
- **Command Format:** IVPOS -i (input) -p (position)
- **Parameters:**
 - i (input): 1 - 8 for adjustments (5 - 8 only if input is analog); 1 - 9 for query
 - p (position): In lines
- **Query Format:** IVPOS -i (input) -?
- **Query Response:** IVPOS -i (input) -p (position) --min (pos min) -- max (pos max)

IVTOTAL

- **Description:** Input Vertical Total Adjust. This command is a query only.
- **Parameters:** -i (input): 1 - 9
- **Query Format:** IVTOTAL -i (input) -?
- **Query Response:** IVTOTAL -i (input) -t (total)

PCOMP

- **Description:** Pulldown Compensation mode adjust.
- **Command Format:** PCOMP -i (input) -m (mode)
- **Parameters:**

-i (input):1 - 9

-m(mode): 0 - off, 1 - on (Default: off)

- **Query Format:** PCOMP -i (input) -?
- **Query Response:** PCOMP -i (input) -m (mode) --min 0 -- max 1

TAKE

- **Description:** Take the input currently on preview onto program.
- **Command Format:** TAKE
- **Parameters:** None

B. Remote Control

Remote Commands

Output Commands

BLACK

- **Description:** Set the mixer to output black.
- **Command Format:** BLACK -m (mode)
- **Parameters:** -m (mode): 0 - off, 1 - on
- **Query Format:** BLACK -?
- **Query Response:** BLACK -m (mode) --min 0 --max 1

OAVAIL

- **Description:** Query-only command used to identify whether the preview output mezzanine is installed
- **Query Format:** OAVAIL -o (output) -?
- **Parameters:**
 - o (output): 1 - DVI, 3 - Preview DVI
 - m (mode): 0 - output not available, 1 - output available
- **Query Response:** OAVAIL -o (output) -m (mode)

OCSAV

- **Description:** Save Output Configuration
- **Command Format:** OCSAV
- **Parameters:** -o output: 1 - DVI, 3 - Preview DVI (PDS-902 only)
- **Query Format:** N/A
- **Query Response:** N/A

OGM

- **Description:** Set Output Gamma
- **Command Format:** OGM -o (output) -g (gamma)
- **Parameters:**
 - o output: 1 - DVI
 - g gamma: 1.0 to 3.0; +0.1 increment (Default: 1.0)
- **Query Format:** OGM -o (output) -?
- **Query Response:** OGM -o (output) -g (gamma) --min 1 -- max 3

ORBM

- **Description:** Output Raster Box Mode
- **Command Format:** ORBM -o (output) -m (mode)

- **Parameters:**
 - o output: 1 - DVI, 3 - Preview DVI (PDS-902 only)
 - m (mode): 0-off, 1-on
- **Query Format:** ORBM -o (output) -?
- **Query Response:** ORBM -o (output) -m (mode) --min 0 -- max 1

ORES

- **Description:** Output Resolution
- **Command Format:** ORES -o (output) [-f (format) | -n (index)]
- **Parameters:**
 - o output: 1 - DVI, 3 - Preview DVI (PDS-902 only)
 - f (format): format string, i.e. "1600x1200 @60"
 - (Default: 1024x768 @ 59.94)
 - or
 - n (index): video format index (see list response)
- **Query Format:** ORES -o (output) -?
- **Query Response:** ORES -o (output) -f(format)
- **List Format:** ORES -o (output) --list
- **List Response:**
 - 2: "720x480p"
 - 4:"720x576p"
 - 5:"720x576p - 16:9"
 - 6:"640x480 @59.94"
 - 7:"640x480 @60"
 - 8:"640x480 @72"
 - 9:"640x480 @75"
 - 10:"640x480 @85"
 - 11:"800x600 @50"
 - 12:"800x600 @56"
 - 13:"800x600 @59.94"
 - 14:"800x600 @60"
 - 15:"800x600 @72"
 - 16:"800x600 @75"

OSRC

- **Description:** Selects the input source for the preview output (preview or program). This command is only valid for the PDS-902.
- **Command Format:** OSRC -s (source)
- **Parameters:** -s (source): 0-preview, 1-program
- **Query Format:** OSRC -?

B. Remote Control

Remote Commands

- **Query Response:** OSRC -s (source)
- **List Format:** OSRC --list
- **List Response:**
 - 0:"Preview"
 - 1:"Program"

OSYNC

- **Description:** Output Sync Type Adjust.
- **Command Format:** OSYNC -o (output) -s (sync)
- **Parameters:**
 - o output: 1 - DVI, 2- Analog, 3 - Preview DVI, 4 - Preview Analog
(3 and 4 are for PDS-902 only)
 - s (sync): 1 = +H+V, 2 = +H-V, 3 = -H+V, 4 = -H-V, 5=CSync for analog only (Defaults: DVI: +H+V, analog: based on Output Format selected)
- **Query Format:** OSYNC -o (output) -?
- **Query Response:** OSYNC -o (output) -s(sync) --min 1 --max 4 (max returned for analog is 5)
- **List Format:** OSYNC -o (output) --list
- **List Response:**
 - 1:"+H+V"
 - 2:"+H-V"
 - 3:"-H+V"
 - 4:"-H-V"
 - 5:"CSync" (returned for analog only)

OTPM

- **Description:** Output Test Pattern Mode
- **Command Format:** OTPM -o (output) - m (mode)
- **Parameters:**
 - o output: 1 - DVI, 3 - Preview DVI (PDS-902 only)
 - m (mode): 0 - off, 1 - on
- **Query Format:** OTPM -o (output) -?
- **Query Response:** OTPM -o (output) - m (mode) --min 0 -- max 1

OTPT

- **Description:** Output Test Pattern Type
- **Command Format:** OTPT -o (output) - t (type)
- **Parameters:** -o output: 1 - DVI, 3 - Preview DVI (PDS-902 only)
- **-t (type):** 1 - H Ramp
 - 2 - V Ramp

3 - 100% Col Bars

4 - 16x16 Grid

5 - 32x32 Grid

6 - Burst

7 - 75% Col bars

8 - 50% Gray

9 - Gray Steps 1

10 - Gray Steps 2

11 - White

12 - Black

13 - Red

14 - Green

15 - Blue

- **Query Format:** OTPT -o (output) -?
- **Query Response:** OTPT -o (output) - t (type) --min 1 -- max 15
- **List Format:** OTPT -o (output) --list
- **List Response:**
 - 1:"H Ramp"
 - 2:" V Ramp"
 - 3:"100% Col Bars"
 - 4:"16x16 Grid"
 - 5:"32x32 Grid"
 - 6:"Burst"
 - 7:"75% Col bars"
 - 8:"50% Gray"
 - 9:"Gray Steps 1"
 - 10:"Gray Steps 2"
 - 11:"White"
 - 12:"Black"
 - 13:"Red"
 - 14:"Green"
 - 15:"Blue"

B. Remote Control

Remote Commands

System Commands

AUTOACQ

- **Description:** Auto Input Acquisition Mode
- **Command Format:** AUTOACQ -m (mode)
- **Parameters:** -m mode: 0-all off, 1-all on, 2-input (Default: all on)
- **Query Format:** AUTOACQ -?
- **Query Response:** AUTOACQ -m (mode) --min 0 --max 1

AUTOCFG

- **Description:** Auto Input Configuration Mode
- **Command Format:** AUTOCFG -m (mode)
- **Parameters:** -m (mode): 0 - off, 1 - on (default: off)
- **Query Format:** AUTOCFG -?
- **Query Response:** AUTOCFG -m (mode) --min 0 -- max 1

AUTOSAVE

- **Description:** Auto Input Settings Save
- **Command Format:** AUTOSAVE -m (mode)
- **Parameters:** -m (mode): 0 - off, 1 - on (default: off)
- **Query Format:** AUTOSAVE -?
- **Query Response:** AUTOSAVE -m (mode) --min 0 -- max 1

AUTOTAKE

- **Description:** Auto Take Mode
- **Command Format:** AUTOTAKE -m (mode)
- **Parameters:** -m (mode): 0 - off, 1 - on (default: off)
- **Query Format:** AUTOTAKE -?
- **Query Response:** AUTOTAKE -m (mode) --min 0 -- max 1

BACKGND

- **Description:** Sets background color.
- **Command Format:** BACKGND -b (background)
- **Parameters:** -b (background):1-black, 2-gray
- **Query Format:** BACKGND -?
- **Query Response:** BACKGND -b (background) --min 1 -- max 2
- **List Format:** BACKGND --list

- **List Response:**
 - 1:"Black"
 - 2:"Gray"

BLKTRAN

- **Description:** Sets whether going to black is a direct transition or requires a TAKE.
- **Command Format:** BLKTRAN -m (mode)
- **Parameters:** -m (mode): 0 - take is required, 1 - do an immediate transition (Default: off)
- **Query Format:** BLKTRAN -?
- **Query Response:** BLKTRAN -m (mode) --min 0 -- max 1

CONMODE

- **Description:** Encore connect mode.
- **Command Format:** CONMODE -m (mode)
- **Parameters:** -m (mode): 0-off, 1- on
- **Query Format:** CONMODE -?
- **Query Response:** CONMODE -m (mode) --min 0 --max 1

CONTEXT

- **Description:** Sets menu context
- **Command Format:** CONTEXT -m (mode)
- **Parameters:** -m (mode): 0 - off, 1 - on
- **Query Format:** CONTEXT -?
- **Query Response:** CONTEXT -m (mode) --min 0 -- max 1

DIAG

- **Description:** Performs a system diagnostic test. The results are logged into a file which may be displayed using DIAGD.
- **Command Format:** DIAG
- **Parameters:** None
- **Query Format:** N/A
- **Query Response:** N/A

DIAGD

- **Description:** Display the results of the last performed system diagnostic test.
- **Command Format:** DIAGD
- **Parameters:** None
- **Query Format:** N/A
- **Query Response:** N/A

B. Remote Control

Remote Commands

ENCOREIP

- **Description:** Set Encore IP Address.
- **Command Format:** ENCOREIP -s(static addr)
- **Parameters:** -s(static addr):format is xxx.xxx.xxx.xxx
- **Query Format:** ENCOREIP -?
- **Query Response:** ENCOREIP -s(static addr)

FPUPDATE

- **Description:** Requests a front panel update. Front panel menu and key backlights are updated to reflect current system state.
- **Command Format:** FPUPDATE
- **Parameters:** N/A
- **Query Format:** N/A
- **Query Response:** N/A

ISTAT

- **Description:** Query only command for the input status type and format.
- **Parameters:**
 - i (input): 1 - 6 and 9 (PDS-701); 1 - 9 (PDS-901/902)
 - p (path): 0 - preview, 1 - program
- **Query Format:** ISTAT -i (input) -p (path) -?
- **Query Response:** ISTAT -t "(input type)" -f "(input format)"

LCLR

- **Description:** Clear the selected log (ram copy, not flash).
- **Command Format:** LCLR -l (log)
- **Parameters:** -l (log): 0-combined, 1-debug, 2-warning, 3-error
- **Query Format:** N/A
- **Query Response:** N/A

LDMP

- **Description:** Display the current log messages (ram copy, not flash) for the selected log.
- **Command Format:** LDMP -l (log)
- **Parameters:** -l (log): 0-combined, 1-debug, 2-warning, 3-error
- **Query Format:** N/A
- **Query Response:** N/A

LFEN

- **Description:** Sets the mode for the selected log. When selected, the messages for that log will be written to flash every time interval specified in (LINT).
- **Command Format:** LFEN -l (log) -m (mode)
- **Parameters:**
 - l (log): 0-combined, 1-debug, 2-warning, 3-error
 - m (mode): 0 - disable, 1 - enable
- **Query Format:** N/A
- **Query Response:** N/A

LINT

- **Description:** Sets the time interval for writing the enabled logs to flash.
- **Command Format:** LINT -t (time interval)
- **Parameters:** -t (time interval): 1 - 60 seconds
- **Query Format:** N/A
- **Query Response:** N/A

LOCKOUT

- **Description:** Controls the lockout mode of the front panel. With full lockout mode enabled, all keys and menu will be deactivated. The executive mode will lock out all but the input bus keys (1 through 8, SDI, and LOGO).
- **Command Format:** LOCKOUT -m (mode)
- **Parameters:** -m (mode): 0 - disable, 1 - full lockout, 2 - executive mode
(default: 0 - disable)
- **Query Format:** LOCKOUT -?
- **Query Response:** LOCKOUT -m (mode) -- min 0 -- max 2

OSTAT

- **Description:** Query only command for the output status type and format.
- **Parameters:** -o (output): 1 - DVI, 3 - Preview DVI (PDS-902 only)
- **Query Format:** OSTAT -?
- **Query Response:** OSTAT -t "(output type)" -f "(output format)"

PREVIEW

- **Description:** Query only command for the input and black button status on preview. If the black or scaler path is not present on preview, then these options are not returned.

B. Remote Control

Remote Commands

- **Parameters:**
 - i (input): 1 - 9
 - b: black on preview
 - l: logo on preview
 - a: A or B path of scaler input on preview
- **Query Format:** PREVIEW -?
- **Query Response:** PREVIEW -i(input) -k -b

PROGRAM

- **Description:** Query only command for the input and black button status on program. If the black or scaler path is not present on program, then these options are not returned.
- **Parameters:**
 - i (input): 1 - 9
 - b: black on preview
 - l: logo on preview
 - a: A or B path of scaler input on preview
- **Query Format:** PROGRAM -?
- **Query Response:** PROGRAM -i(input) -k -b

RESET

- **Description:** Reset unit
- **Command Format:** RESET [-f | -s]
- **Parameters:**
 - f : factory reset
 - or
 - s: soft reset
- **Query Format:** N/A
- **Query Response:** N/A

SAVE

- **Description:** System Save
- **Command Format:** SAVE
- **Parameters:** N/A
- **Query Format:** N/A
- **Query Response:** N/A

SERIAL

- **Description:** Sets the serial port.
- **Command Format:** SERIAL -b (baud) -p (parity/etc.) -h (handshaking)

- **Parameters:**
 - b (baud): 0 - 9600, 1 - 38400, 2 - 57600, 3 - 115200 (default: 115200)
 - p (parity/etc): 0 - N81, 1 - E71, 2 - O71, 3 - E72, 4 - O72 (default: N81)
 - h (handshaking): 0 - off, 1 - on (default: off)
- **Query Format:** SERIAL -? - (option letter)
The SERIAL query will return only one option parameter at a time. If no option is specified, an error code will be returned.
- **Query Response:** SERIAL -b (baud) --min 0 --max 3
SERIAL -p (psparity/etc) --min 0 --max 4
SERIAL -h (handshaking) --min 0 --max 1

TEMP

- **Description:** Query only command for the temperature of the unit.
- **Query Format:** TEMP -?
- **Query Response:** TEMP -a (sensor addr) -c (celsius) -f (fahrenheit)

TRNTIME

- **Description:** Set transition time
- **Command Format:** TRNTIME -s (seconds)
- **Parameters:** -s (seconds): 0 - 12.0 (default 1.0)
- **Query Format:** TRNTIME -?
- **Query Response:** TRNTIME -s (seconds) --min 0 --max 12.0

UNITID

- **Description:** Encore unit ID
- **Command Format:** UNITID -i (unit ID)
- **Parameters:** -i (unitID): 1 - 32
- **Query Format:** UNITID -i (input) -?
- **Query Response:** UNITID -i (unitID) --min 1 --max 32

VER

- **Description:** Display Version info
- **Command Format:** VER
- **Parameters:** N/A
- **Query Format:** N/A
- **Query Response:** N/A

VFDBRT

- **Description:** Set VFD brightness
- **Command Format:** VFDBRT -b (brightness) -f

B. Remote Control

Remote Commands

- **Parameters:**
 - b (brightness): 1 - 8 (default: 5)
 - f: Command from front panel
- **Query Format:** VFDBRT -?
- **Query Response:** VFDBRT -b (brightness) --min 1 -- max 16

LOGO Commands

LOGODEL

- **Description:** Delete the selected logo file.
- **Command Format:** LOGODEL -I (logo)
- **Parameters:** -I logo: 1 - 3 (Default: 1)
- **Query Format:** N/A
- **Query Response:** N/A

LOGOSAVE

- **Description:** Save the image on Program output to the selected logo frame store and file.
- **Command Format:** LOGOSAVE -I (logo)
- **Parameters:** -I logo: 1 - 3 (Default: 1)
- **Query Format:** N/A
- **Query Response:** N/A

LOGOSEL

- **Description:** Logo selection
- **Command Format:** LOGOSEL -I (logo)
- **Parameters:** -I logo: 1 - LOGO1, 2 - LOGO2, 3 - LOGO3 (Default: LOGO1)
- **Query Format:** LOGOSEL -?
- **Query Response:** LOGOSEL -I (logo) --min 1 --max 3
- **List Format:** LOGOSEL --list
- **List Response:**
 - 1:"LOGO1"
 - 2:"LOGO2"
 - 3:"LOGO3"

LOGOSTAT

- **Description:** The logo format status. This command is a query only.
- **Parameters:** -I logo: 1 - LOGO1, 2 - LOGO2, 3 - LOGO3
- **Query Format:** LOGOSTAT -I (logo) -?
- **Query Response:** LOGOSTAT -I (logo) -s (status string)

C. Contact Information

In This Appendix

The following topics are discussed in this Appendix:

- [Warranty](#)
- [Return Material Authorization \(RMA\)](#)
- [Contact Information](#)

Warranty

All video products are designed and tested to the highest quality standards and are backed by a full 3-year parts and labor warranty. Warranties are effective upon delivery date to customer and are non-transferable. Barco warranties are only valid to the original purchaser/owner. Warranty related repairs include parts and labor, but do not include faults resulting from user negligence, special modifications, lightning strikes, abuse (drop/crush), and/or other unusual damages.

The customer shall pay shipping charges when unit is returned for repair. Barco will cover shipping charges for return shipments to customers.

Return Material Authorization (RMA)

In the unlikely event that a product is required to return for repair, please call the **Technical Support / Customer Service** direct line, and ask to receive a Return Merchandise Authorization number (RMA).

- (866) 374-7878

RMA Conditions are listed below:

- a. Prior to returning any item, you must receive a **Return Merchandise Authorization (RMA)** number.
- b. All RMA numbers must appear on their return-shipping label.
- c. RMA numbers are valid for ten (10) days from issue date.
- d. All shipping and insurance charges on all RMAs must be prepaid by the customer

C. Contact Information

Contact Information

Barco Media and Entertainment

11101 Trade Center Drive
Rancho Cordova, California 95670
USA

- Telephone: (916) 859-2500
- Fax: (916) 859-2515
- Website: www.barco.com

Sales Contact

- Direct: (916) 859-2505
- Toll Free: (888) 414-7226
- E-mail: folsomsales@barco.com

Barco N.V.

Noordlaan 5
8520 Kuurne
BELGIUM

- Telephone: +32 56.36.82.11
- Fax: +32 56.35.16.51
- Website: www.barco.com

Technical Support (USA)

- Telephone: (866) 374-7878 — 6 a.m. to 10 p.m. (PST), 7 days per week
- E-mail: folsomsupport@barco.com
- Online: www.barco.com/esupport

Technical Support (Europe, Middle East, Asia)

- Telephone: 0800900410
- Online: www.barco.com/support/eSupport.aspx

Index

Numerics

10/100BaseT	14
1-1 Sampling	42
3-2 film pulldown	45

A

AC	
connector	14
Acrobat usage	2
navigating and searching	2
Adapter information	17
Address	
MAC	66
Address, company	iii
ADJUST	
knob	8, 9
using knob	28
Adjust	
analog input sources	41
background color	60
brightness	44
color balance	44
colorspace	38
contrast	44
hue/saturation color balance	45
input format	37
input type	38
output format	50
output gamma	52
processing	45
raster box	51, 55
RGB color balance	44
sample phase	43
test pattern	50
timing	41
transition time	58
VFD brightness	63
Adjust On	38
Agency specifications	108
Analog	
15-pin D connector pinouts	109

inputs	13, 14
output	14
sync	55
Application questions	6
Aspect Ratio	40
Asterisks	33, 37
Auto	
black, take	61
input config	60
input save	60
sync	45
take	61
Auto acquire	
mode	59
understanding	77
Auto take	
off	61
off, black	81
on	61
on, black	82
AUTOACQ (command)	142
AUTOCFG (command)	142
AUTOSAVE (command)	142
AUTOTAKE (command)	142

B

BACKGND (command)	142
Background color, adjust	60
Barco	
sales contact information	150
technical support information	iii, 150
Baud	66
Best guess format	37
Black	
auto take	61
auto take off	81
auto take on	82
background	60
button	11
using	81

Index

BLACK (command)	138
Black Auto Take	
off	11
on	12
Blinking (button)	10, 25
BLK, using	81
BLKTRAN (command)	143
BLKVID (command)	125
Block diagram	5
BNC breakout cable	20
Brackets	29, 33, 37
Brightness	44
VFD	63
Button	
BLACK	11
FRZ	11
input	10
LOGO	11
SDI	11
states	25
TAKE	8, 12
Button state	
blinking	10, 25
lit solid	10, 25
off	10, 25

C

Cable	
equalization	68
Cable information	17
CBLEQ (command)	125
Change history	viii
Chapter structure	1
Chassis	16
Chassis internal temperature	71
Color	
background	60
balance	44
Colorspace	38
Command	
AUTOACQ	142
AUTOCFG	142
AUTOSAVE	142
AUTOTAKE	142
BACKGND	142
BLACK	138
BLKTRAN	143
BLKVID	125
CBLEQ	125
CONTEXT	143, 144, 147
DHCP	123
DIAG	143
DIAGD	143
EDID	125
EDIDTYPE	125

EMAC	123
FREEZE	126
GATEWAY	124
IADJ	126
IAR	126
IAUTOC	127
IAVAIL	127
IBRT	128
ICDEL	128
ICNT	128
ICPHO	128
ICREC	129
ICRST	129
ICSAV	129
ICSP	130
IHATV	130
IHCROP	130
IHPAN	131
IHPOS	131
IHTOTAL	131
IHUE	131
IMAP	132
IP	124
IRBRT	132
IRCNT	132
IRES	132
ISAT	133
ISEL	133
ISLICE	134
ISMP	134
ISTAT	144
ISYNC	134
ITYPE	135
IVATV	135
IVCROP	136
IVPAN	136
IVPOS	136
IVTOTAL	136
LCLR	144
LDMP	144
LFEN	145
LINT	145
LOCKOUT	145
LOGODEL	148
LOGOSAVE	148
LOGOSEL	148
LOGOSTAT	148
OAVAIL	138
OCSAV	138
OGM	138
ORBM	138
ORES	139
OSRC	139
OSTAT	145
OSYNC	140
OTPM	140
OTPT	140

- PCOMP 136
 - PREVIEW 145
 - PROGRAM 146
 - protocol 116
 - remote 123
 - RESET 146
 - responses 116
 - SAVE 146
 - SERIAL 146
 - SUBNET 124
 - TAKE 137
 - TEMP 147
 - TRNTIME 147
 - VER 147
 - VFDBRT 147
 - Command list 119
 - Communicating with PDS 115
 - Communications
 - connections 20
 - specifications 108
 - Company address iii
 - Components, front panel 8
 - Config
 - network 64
 - save system 72
 - Configuration
 - delete input 48
 - recall input 48
 - reset input 47
 - save input 46
 - configuration files 39, 59
 - Configuration files, selecting 70–71
 - Connection, format table 20
 - Connectivity diagram 5
 - Connector
 - AC 14
 - analog 15-pin D pinouts 109
 - DVI-I pinouts 110
 - Ethernet 14
 - Ethernet pinouts 111
 - rear panel 13
 - CONTEXT (command) 143, 144, 147
 - Context, menu 62
 - Contrast 44
 - Control overview 24
 - Conventions 2
 - menu system 28
 - status menu 33
 - Copyright ii
 - CSync 45
 - Cursor 9
 - edit 28
 - navigation 28
 - Custom aspect ratio 40
- ## D
- Data bits 66
 - Delete
 - input configuration 48
 - LOGO 57
 - DHCP 64, 123
 - server 64
 - DHCP (command) 123
 - DIAG (command) 143
 - DIAGD (command) 143
 - Diagnostics menu 71
 - Diagram
 - connectivity 5
 - system 19
 - Display 9
 - brightness 63
 - section 8, 9
 - Documentation conventions and symbols 2
 - Double arrow 9
 - Download software 95, 96, 98
 - via FTP site 95
 - via web site 95
 - DVI
 - cable equalization 68
 - cable equalizer menu 68
 - inputs 14
 - output 14
 - sync 52, 55
 - DVI-I
 - connector pinouts 110
 - connectors 14
- ## E
- EDID
 - format 67
 - input 67
 - type (7, 8) 68
 - EDID (command) 125
 - EDIDTYPE (command) 125
 - Edit cursor 28
 - Effects section 8, 11
 - Electrical specifications 108
 - EMAC 123
 - Equalization 69
 - set to default 69
 - set to maximum 69
 - set to minimum 69
 - Error codes 118
 - general failures 118
 - no error 118

Index

ESC	10
using	28, 29
Ethernet	
address	64
connection	20
connector	14
connector pinouts	111
Menu	64
troubleshoot connection	103
Extended Display Identification Data	67

F

Factory	
default	73
reset	73
reset menu	73
FCC statement	ii
Features, PDS	3
File Association	
menu	4, 70
Flip-flop mode	76
Format	
asterisks	37
best guess	37
brackets	37
connection table	20
input	37
output	50
Freeze	11
using	81
FREEZE (command)	126
Front panel	
components	8
display section	8
full lockout mode	83
FRZ	
button	11
using	81
FTP site	95
Full lockout mode	83
Function, quick reference table	30

G

Gamma	52
Gateway	
menu	65
set	65
GATEWAY (command)	124
Gray background	60
Guarantee and compensation	ii
GUI	
connection and launch	86

connections	20
differences from physical control panel	88
how to connect and launch	86
operation	85
operations	88, 89
similarities to physical control panel	88
status menu	87
up/down arrows	88
web-based	4

H

H	
position	41
size	41
Handshaking	66
Hardware	
installation	15
orientation	7
requirements, upgrading software	94
HD-15 connectors	13
HDCP	4
compliant monitor	77
protocol	3
status	34
using	77
History, change	viii
Home Page	100
Horizontal active area	43
How hot is my system	71
How to	
adjust sample phase	43
capture and store a LOGO	79
communicate with PDS	115
connect and launch the GUI	86
delete configuration files	48
download software from FTP site	95
download software from website	95
edit IP address	65
enable/disable executive lockout	69
freeze and un-freeze an input	81
install signals to/from PDS	19
lock/unlock front panel	83
power up	24
transition inputs to Program	75
transition to a saved logo	79
transition to/from black, auto take off	81
transition to/from black, auto take on	82
troubleshoot Ethernet connection	103
upgrade software via Ethernet	99
use menu system	28
use the setup menu	35
use this guide	2

Hue	45
Hue/Saturation color balance menu	45
Hyperlinks	2

I

IADJ (command)	126
IAR (command)	126
IAUTO (command)	127
IAVAIL (command)	127
IBRT (command)	128
ICDEL (command)	128
ICNT (command)	128
ICPHO (command)	128
ICREC (command)	129
ICRST (command)	129
ICSAV (command)	129
ICSP (command)	130
IHATV (command)	130
IHCROP (command)	130
IHPAN (command)	131
IHPOS (command)	131
IHTOTAL (command)	131
IHUE (command)	131
IMAP (command)	132
In Auto Acquire	37, 59
Input	
auto config	60
auto save	60
buttons	10
colorspace	38
configuration file	46
connections	19
delete configuration	48
DVI cable equalizer	69
format	33, 37
format, next	34
menu	36
previewing	53
processing	45
recall configuration	48
reset configuration	47
save configuration	46
SDI	14
selection rules	75
specifications	106
type	33, 38
type, next	34
Inputs	
analog	13, 14
DVI	14
protected and unprotected	77
section	8, 10, 12
source signals	3
using	75
Inspection	16
Installation	
hardware	15
rack-mount	16
safety precautions	16
signals	19
site preparation	16
unpacking and inspection	16
Introduction to	
PDS	1
Invalid signal	37, 40, 59
IP	124
address	64
address, port 23 (Telnet)	115
IRBRT (command)	132
IRCNT (command)	132
IRES (command)	132
ISAT (command)	133
ISEL (command)	133
ISLICE (command)	134
ISMP (command)	134
ISTAT (command)	144
ISYNC (command)	134
ITYPE (command)	135
IVATV (command)	135
IVCROP (command)	136
IVPAN (command)	136
IVPOS (command)	136
IVTOTAL (command)	136
 L	
LCLR (command)	144
LDMP (command)	144
LFEN (command)	145
LINT (command)	145
List, commands	119
Lit solid (button)	10, 25
LOCKOUT (command)	145
LOGO	
button	11
delete	57
how to capture and store	79
in executive lockout mode	69
save	57
setup menu	57
status	57
transitioning to	79
using	78

Index

LOGODEL (command)	148
LOGOSAVE (command)	148
LOGOSEL (command)	148
LOGOSTAT (command)	148

M

MAC Address	66
Macrovision copy protection	46
Main outputs	14
Menu	
Adjust On	38
context	33, 62
diagnostics	71
display	9
DVI cable equalizer	68
Ethernet	64
Executive Mode	69
factory reset	73
File Association	39, 59
File Recall	70–71
gateway	65
GUI status	87
hue/saturation color balance	45
input	36
input file association	4, 70
LOGO setup	57
netmask	65
output	50
Preview	53
RGB color balance	44
rules and conventions	28
serial setup	66
set static IP	64
setup	35
status	33
Sync Setup	55
system	63
system temperature	71
tech support	73
test pattern	50
timing adjust	41
tree	27
usage, rules	28
user preference	58
value in brackets	29
Mode	
flip-flop	76
test pattern	50

N

Navigation cursor	9, 28
Netmask	
menu	65
set	65
Network config	64
Notice	ii

O

OAVAIL (command)	138
OCSAV (command)	138
Off (button)	10, 25
OGM (command)	138
Operation	23
GUI	88, 89
quick setup	25
Operators safety summary	iv
ORBM (command)	138
ORES (command)	139
Orientation, hardware	7
OSRC (command)	139
OSTAT (command)	145
OSYNC (command)	140
OTPM (command)	140
OTPT (command)	140
Output	
analog	14
connections	19
DVI	14
format	50
format (Preview)	54
gamma	52
main	14
menu	50
preview	14
source selection	53
specifications	106
test pattern	50
Over-temp	71
Overview	
control	24
software upgrade	94

P

Page	
PDS home	87
select file	101
upload status	101

Parity	66
PCOMP (command)	136
PDF file usage	2
navigating and searching	2
PDS	
block diagram	5
button states	25
command list	119
communicating with	115
communications connections	20
connectivity diagram	5
control overview	24
features	3
front panel	8
GUI connection and launch	86
GUI connections	20
GUI operation	85
hardware installation	15
hardware orientation	7
home page	87
input connections	19
introduction to	1
menu tree	27
operation	23
output connections	19
rear panel connectors	13
remote commands	123
remote control protocol	113
specifications	105
system diagram	19
upgrading software	93
Phase A, Phase B	42
Phone, tech support	73
Physical specifications	108
Pinouts	109
analog 15-pin D connector	109
DVI-I connector	110
Ethernet connector	111
serial connector	112
Position	41
Power	
up and initialization	24
Power consumption	17
Preview	
menu	53
output format	54
output source selection	53
outputs	14
save configuration	55
sync setup	55
PREVIEW (command)	145
Previewing input signals	53
Processing menu	45
Product disposal	v
PROGRAM (command)	146
Protocol	
command	116

remote control	113
Pulldown Compensation	45

Q

Query options	116
Quick	
function reference	30
setup and operations	25

R

Raster Box	51, 55
Ratio, aspect	40
Rear panel connectors	13
Recall	
input configuration	48
Reference, quick function table	30
Remote control protocol	113
RESET	146
Reset	
all	45
config	47
factory	73
input configuration	47
serial parameters	66
Resolutions, input and output	3
Restart	102
Return material authorization	149
RGB color balance menu	44
RMA	149
RoHS Compliance	
Chinese Mainland	vi
Turkey	v
Rules, input selection	75

S

Safety	
precautions	16
summary	iv
Sales contact information	150
Sample phase, adjust	43
Saturation	45
Save	
config	46, 52, 72
input configuration	46
input, auto	60
LOGO	57
Preview configuration	55
system config	72
system state	72

Index

SAVE (command)146
Scaling and de-interlacing4
SDI
 button11
 input14
Section
 display8, 9
 effects8, 11
 inputs8, 10, 12
SEL9
 using28, 29
Select file page101
Selection, input rules75
Serial
 communications14
 connection20
 connector14
 connector pinouts112
 setup66
 setup menu66
SERIAL (command)146
Set
 gateway65
 netmask65
 static IP64
Setup
 menu, using35
 serial66
Signal installation19
Site preparation16
Size40, 41
Software
 downloading95, 96, 98
 requirements, upgrading94
 upgrade overview94
 upgrading93
 version24, 73
SOG45
Specifications105
 agency108
 communications108
 electrical108
 input106
 output106
 physical108
 pinouts109
Standard mix58
Static IP64
 menu64
Status
 HDCP34
 LOGO57
 menu33
 menu, conventions33
 menu, input format33
 menu, input type33
 menu, next input format34

 menu, next input type34
Status menu, GUI87
Stop bits66
SUBNET (command)124
Support, technical informationiii, 150
Symbols2
Sync
 analog55
 auto45
 CSync45
 DVI52, 55
 selection45
 setup (Preview outputs)55
 slice46
 SOG45
Sync Setup menu55
System
 config, save72
 diagram19
 menu63
 temperature menu71

T

Table
 format connections20
 quick function reference30
TAKE
 button8, 12
 command137
Tech support
 menu73
 phone73
 software version73
Technical support informationiii, 150
Telnet14
 using115
TEMP (command)147
Temperature71
 over-temp condition71
Test pattern
 generator4
 menu50
 mode50
 raster box51, 55
 type51
Timing
 1-1 sampling42
 adjust menu41
Trademarksiii
Trans time58
Transition time58
Transitioning
 automatically61
 to a saved logo79

Tree, menu	27
TRNTIME (command)	147
Troubleshoot Ethernet connection	103
Type	
input	38
test pattern	51

U

Understanding auto acquire	77
Unpacking	16
Up/Down arrows	88
Upgrade	
software	93
Upload	
dialog	101
status page	101
User preference	
auto input save	60
auto take	61
menu	58
menu context	62
Using	
auto acquire	59
black	81
BLK	81
ESC button	28, 29
freeze	81
HDCP	77
inputs	75
LOGO	78
SEL button	28, 29
setup menu	35

V

V	
position	41
size	41
total	43
Vacuum Fluorescent Display	9
VER (command)	147
Version, software	73
Vertical active area	43
VFD	9
brightness	63
VFDBRT (command)	147

W

Warranty	149
Web site	95
WEEE product disposal	v

